

INSTALLATION MANUAL

Utility Software for FSM-60S/60R/18S/18R

FSM Data Connection



**Please read this installation manual
carefully before installation.**



LICENSE AGREEMENT

READ THE TERMS OF THIS AGREEMENT CAREFULLY.

Fujikura Co., Ltd. (hereinafter referred to as "Fujikura") provides this software product and the attached files (hereinafter referred to as "licensed product") for use on the following terms and conditions. If you do not agree to the terms of this license, do not install, copy, or otherwise use this licensed product.

1. Licensing Policy

- (a) The software may be installed in your computers as long as you comply the terms and condition of this License Agreement.
- (b) You may make a single archival copy of the Software, but otherwise may not copy, modify, or distribute Software except Fujikura permits specifically by a document.

2. Prohibited Uses

You may NOT:

- (a) Sell, lend, give away or in any way transfer copies of this software package to any other person or entity except as for backup purposes, or allow any other person to make copies of this licensed product.
- (b) You may not rent, lease, or lend the Software.
- (c) Decompile, or reverse engineer the Software.
- (d) Export, re-export, or import the Software from/to another country.

3. Attribution of Intellectual Property Right

This Agreement does not grant you any Intellectual Property Rights of the licensed product.

Use of the licensed products, unless pursuant to the terms of a license granted by Fujikura or as otherwise authorized by law, is an infringement of Intellectual Property Rights.

4. Limitation of Liability

- (a) Fujikura assumes no liability and shall not be responsible for, and you hereby assume all risk of: any linkage to any communications with any third parties, and any damage resulting from any computer viruses or from linkage to any third party sites. Fujikura shall not be responsible for any direct, indirect, incidental, consequential damages arising out of your use.
 - (b) Fujikura will not be liable for any consequential damages under any circumstances, unless such exclusion is forbidden by law.
-

5. Non-assignability of Rights and Obligations

Licensee may not assign or transfer any rights or obligations of the licensed product under this Agreement without prior written approval from Fujikura.

6. Termination

Your rights under this License will terminate automatically without notice from Fujikura if you fail to comply with any term(s) of this License Agreement.

Upon the termination of this License, you shall cease all use of the licensed products and destroy all copies, full or partial, of the licensed product.

7. Term of Limitation

This license agreement shall be effective until it goes into effect from the time of being used of this product, and the end of use of this product or Fujikura cancels this license agreement by regulation of the 6th clause.

<u>1</u>	<u>Introduction.....</u>	<u>2</u>
<u>2</u>	<u>System Requirements</u>	<u>2</u>
<u>3</u>	<u>Install</u>	<u>3</u>
3.1	STEP 1 : Before Starting Installation	3
3.2	STEP 2 : Installation	4
3.3	STEP 3 : Run.....	24
<u>4</u>	<u>Uninstall.....</u>	<u>45</u>
4.1	In case of 64bit system.....	45
4.2	In case of 32bit system.....	48
<u>5</u>	<u>Contact Address</u>	<u>51</u>

1 Introduction

FSM Data Connection (“FSMDC”) is the software included in the package of FSM-60S/60R/18S/18R; the splicer series manufactured by Fujikura.

Read this installation manual before installing FSMDC.

2 System Requirements

Computer and processor	1.6 gigahertz(GHz) processor or higher (In case Core™2Duo, Intel Corp)
Operating System	Microsoft Windows XP SP3 (32bit) Microsoft Windows Vista SP2 (32bit) Microsoft Windows 7 (64bit / 32bit) *The operating system must be updated by latest update
Memory	512MB (Windows XP SP3) 2GB (Windows Vista SP2) 4GB (Windows 7)
Hard Disk	100MB available space
Drive	CD-ROM or DVD drive
Display	1024x768, or higher resolution 24bit, or higher color
Other	USB 2.0 Port Capable of Internet Access, 56kbps or higher Broadband access is recommended

3 Install

3.1 STEP 1 : Before Starting Installation

Log in to your computer using an account with administrator privilege.

Administrator privilege is required when installing the software. If you do not have an account which has administrator privilege, ask the supervisor of the PC for installation.


Exit all programs running on the PC

Exit all programs running on the PC. Some programs may prevent installation.

Perform Windows Update or Microsoft Update

Operating System must be updated by latest update. Perform Windows Update or Microsoft Update before starting installation. To go to Windows Update or Microsoft Update, select [Start] → [All Programs] → [Windows Update] or [Microsoft Update].

Internet connection is necessary in order to perform Windows Update or Microsoft Update.

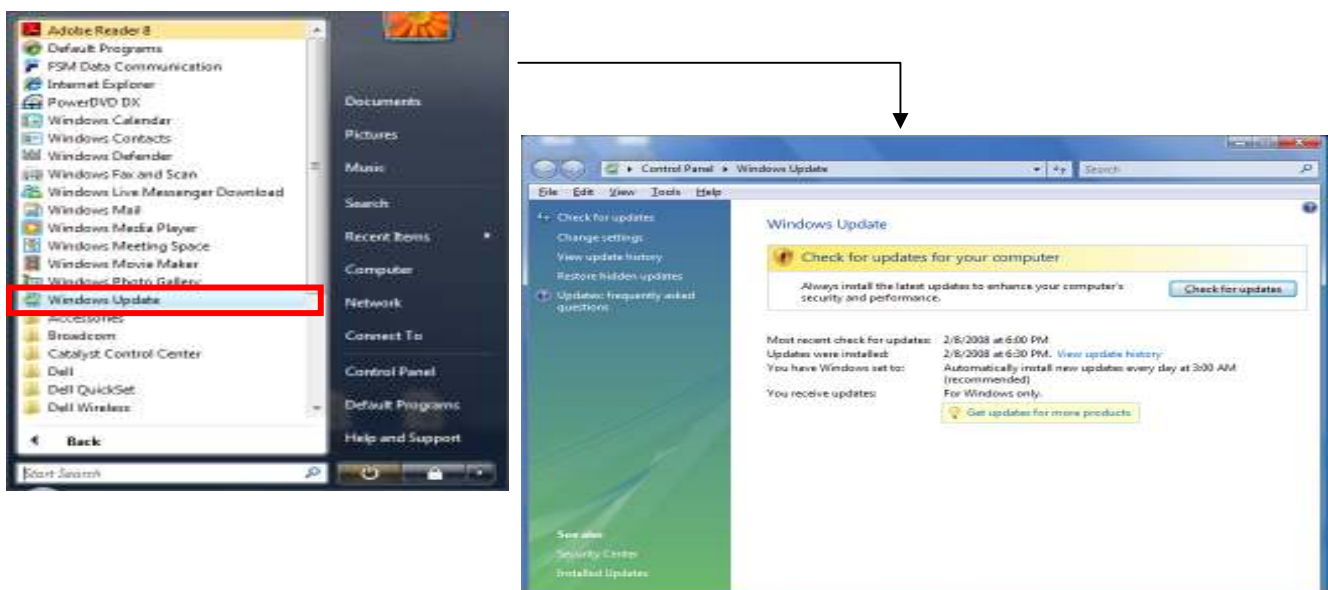

3.2 STEP 2 : Installation



Do not connect USB cable before completing installation.



Log on to PC by an account with administrator privilege for installation.

3.2.1 If using Windows 7 (64bit)

- (1) Confirm that USB cable is not connected.
- (2) Insert the instruction CD into CD-ROM or DVD drive.
- (3) After a few seconds, an instruction menu will appear automatically.
If the menu does not appear, run “fsmInstruction.exe” which is in the root of the CD drive.

Name	Date modified	Type	Size
manual	11/4/2011 2:24 PM	File folder	
x64	11/4/2011 1:51 PM	File folder	
x86	11/4/2011 1:51 PM	File folder	
fsmInstaller.exe	10/28/2011 11:39 ...	Application	1,967 KB
fsmInstruction.exe	10/28/2011 11:22 ...	Application	1,568 KB
fsmInstaller.exe.manifest	5/20/2009 4:17 PM	MANIFEST File	1 KB
fsmSetup.exe.manifest	5/20/2009 4:18 PM	MANIFEST File	1 KB
autorun.inf	5/21/2009 11:48 AM	Setup Information	1 KB
Instruction.txt	10/31/2011 5:13 PM	Text Document	1 KB

- (4) Click [Load FSM Data Connection Software] button.




“User Account Control” window may appear during operations for installation.




Click [Allow] if “Unidentified program wants access to your computer” is indicated in the window.

Click [Continue] if “Windows needs your permission to continue” is indicated in the window.

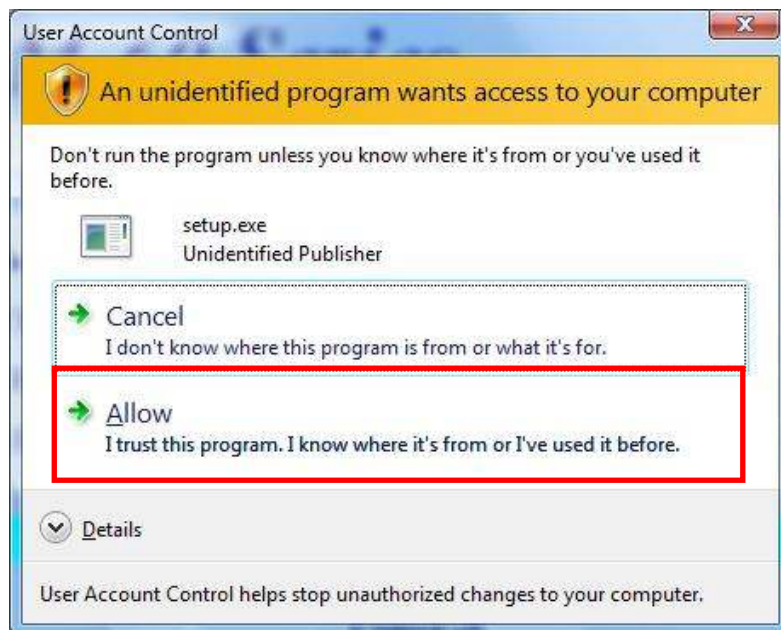

or

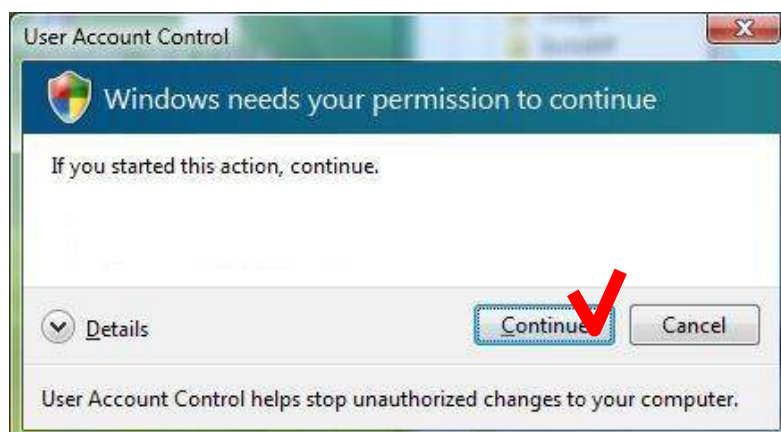


- (5) The message shown below may appear if you run the installer without administrator privilege. In this case, open the root folder of the CD/DVD drive using explorer and select "fsmInstruction.exe" by right clicking, and select [Run As Administrator] in order to run the installer with administrator privilege.



- (6) License Agreement confirmation window will appear in case the current version of software is not installed in your PC. Otherwise, if the software has already been installed, uninstallation window will appear. (See chapter 4 "Uninstall")



Click [ACCEPT] [1] button if you accept the License Agreement.
If you do not accept the License Agreement, click [DECLINE] [2] button.
In this case, installation should be cancelled.

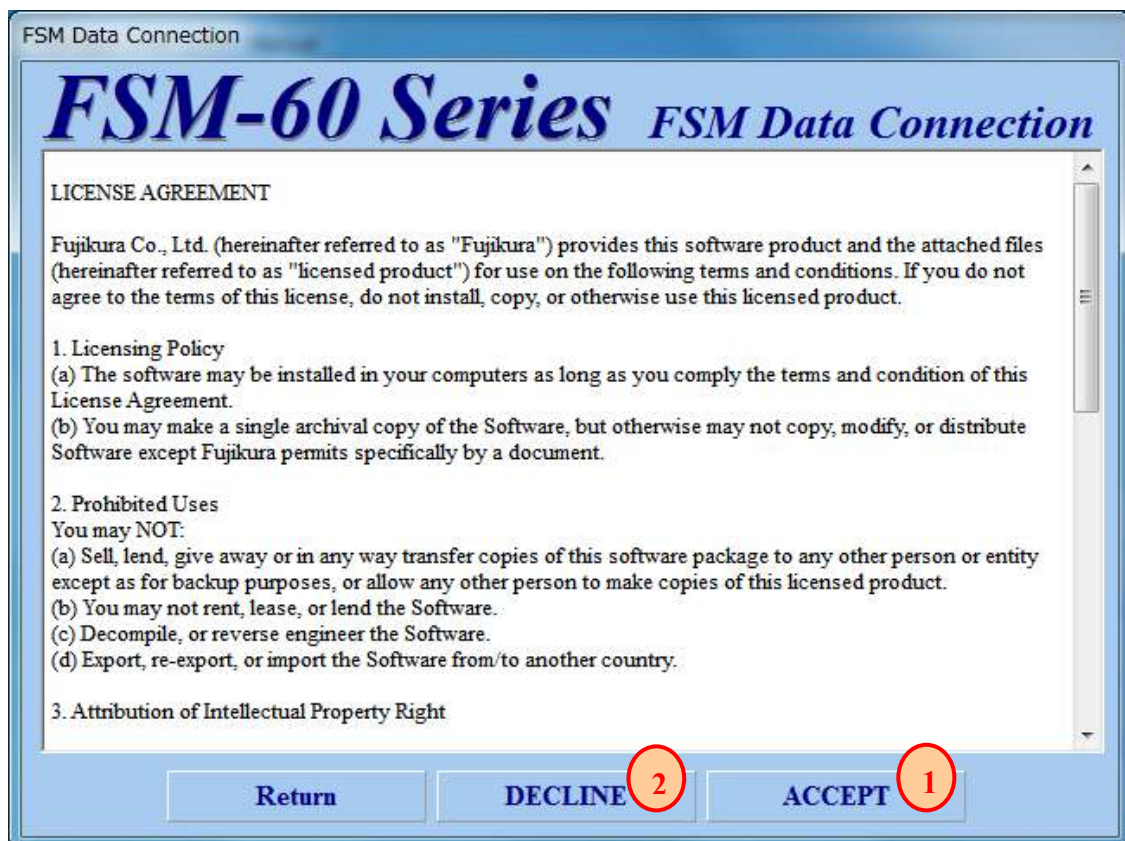


Installation: Windows 7 (64bit)

(7) Uninstallation of USB driver may start if old version of driver is installed in PC.

In this case, click [OK] and then click [Finish]

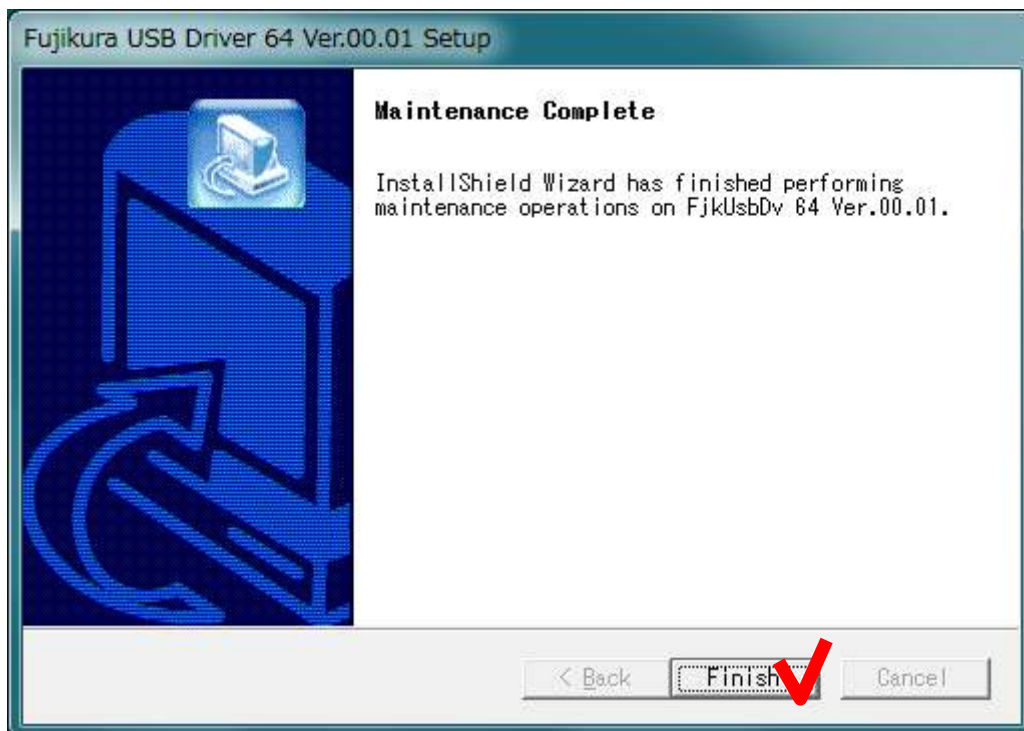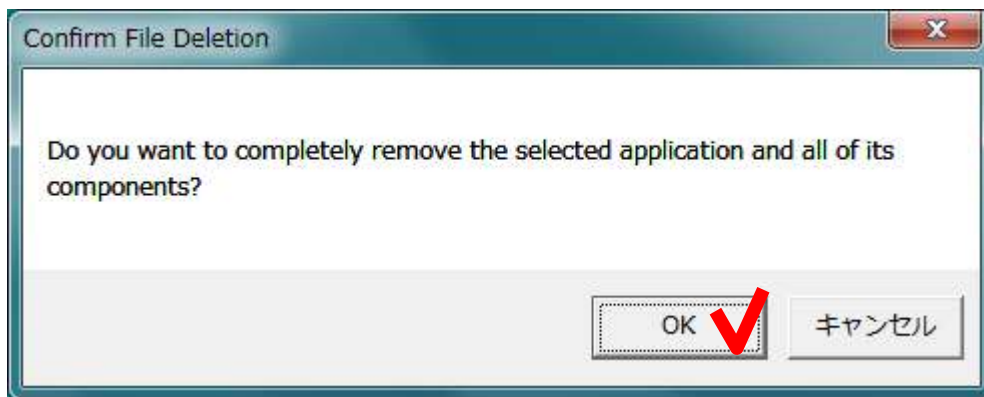

(8) Installation of USB driver will start successively.

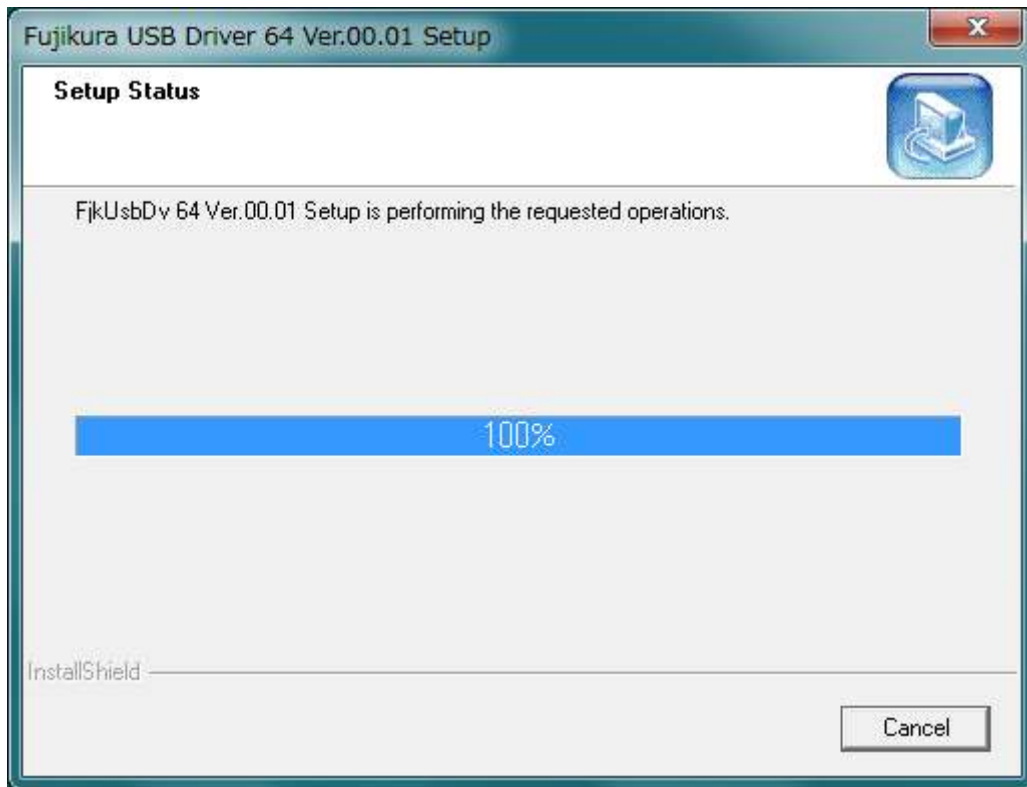

A confirmation message may appear.
In this case, click [Install].



Installation: Windows 7 (64bit)

A security warning message may appear.
In this case, click “Install this driver software anyway”.



(9) Click [Finish] button after installation of the driver is finished.



Installation: Windows 7 (64bit)


- (10) Installation of the main program of FSM Data Connection will start.
- (11) Installation has completed. Click [Exit] button to close the menu.



Installation: Windows 7 (32bit), Windows Vista (32bit)

3.2.2 If using Windows 7 (32bit), Windows Vista (32bit)

- (1) Confirm that USB cable is not connected.
- (2) Insert the instruction CD into CD-ROM or DVD drive.
- (3) After a few seconds, an instruction menu will appear automatically.
If the menu does not appear, run “fsmInstruction.exe” which is in the root of the CD drive.

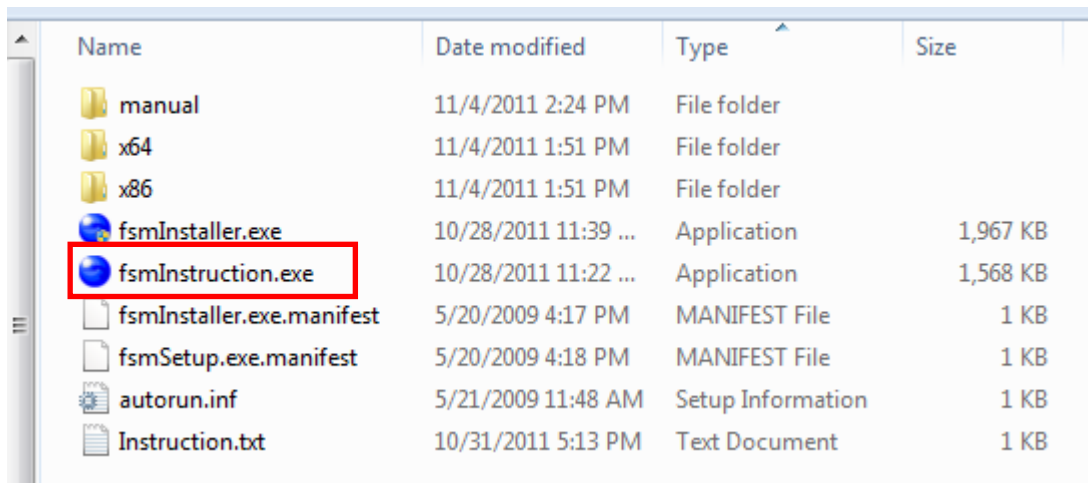

Name	Date modified	Type	Size
manual	11/4/2011 2:24 PM	File folder	
x64	11/4/2011 1:51 PM	File folder	
x86	11/4/2011 1:51 PM	File folder	
fsmInstaller.exe	10/28/2011 11:39 ...	Application	1,967 KB
fsmInstruction.exe	10/28/2011 11:22 ...	Application	1,568 KB
fsmInstaller.exe.manifest	5/20/2009 4:17 PM	MANIFEST File	1 KB
fsmSetup.exe.manifest	5/20/2009 4:18 PM	MANIFEST File	1 KB
autorun.inf	5/21/2009 11:48 AM	Setup Information	1 KB
Instruction.txt	10/31/2011 5:13 PM	Text Document	1 KB

- (4) Click [Load FSM Data Connection Software] button.







“User Account Control” window may appear during operations for installation.

Click [Allow] if “Unidentified program wants access to your computer” is indicated in the window.

Click [Continue] if “Windows needs your permission to continue” is indicated in the window.

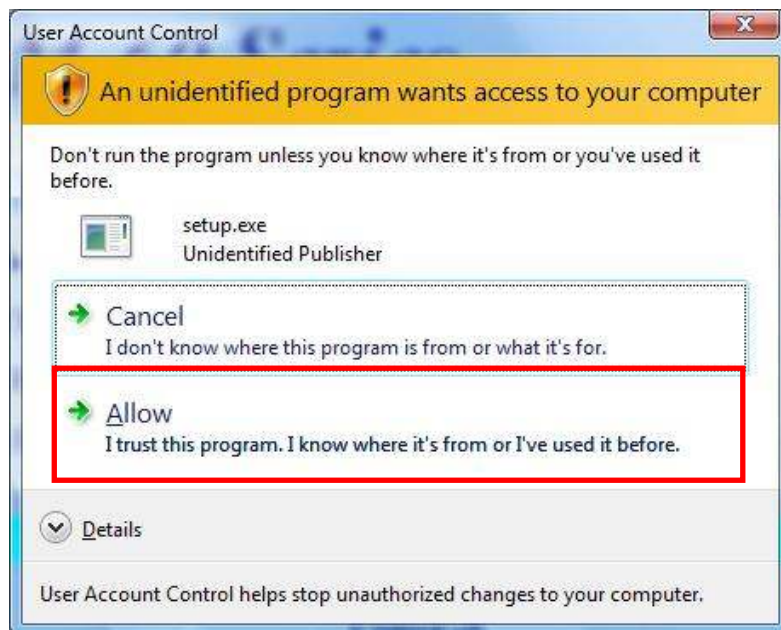

or

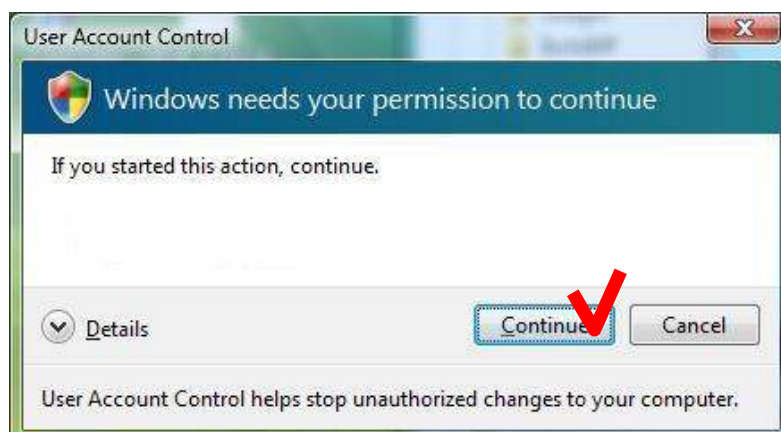


Installation: Windows 7 (32bit), Windows Vista (32bit)

- (5) The message shown below may appear if you run the installer without administrator privilege. In this case, open the root folder of the CD/DVD drive using explorer and select "fsmInstruction.exe" by right clicking, and select [Run As Administrator] in order to run the installer with administrator privilege.



- (6) License Agreement confirmation window will appear in case the current version of software is not installed in your PC. Otherwise, if the software has already been installed, uninstallation window will appear. (See chapter 4 "**Uninstall**")



Click [ACCEPT] [1] button if you accept the License Agreement.
If you do not accept the License Agreement, click [DECLINE] [2] button.
In this case, installation should be cancelled.

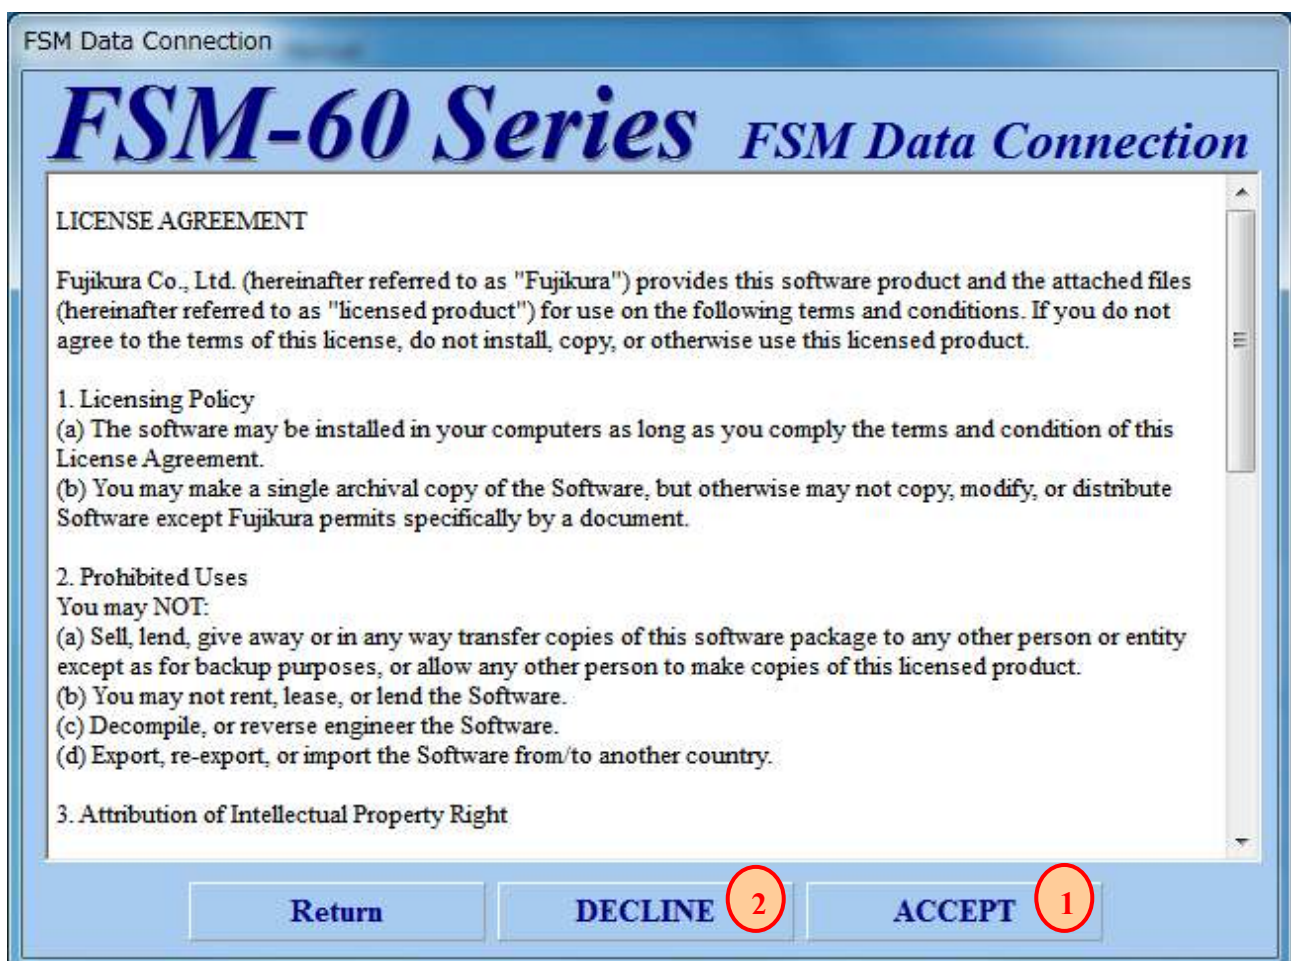

Installation: Windows 7 (32bit), Windows Vista (32bit)


(7) Uninstallation of USB driver may start if old version of driver is installed in PC.

In this case, click [OK] and then click [Finish]

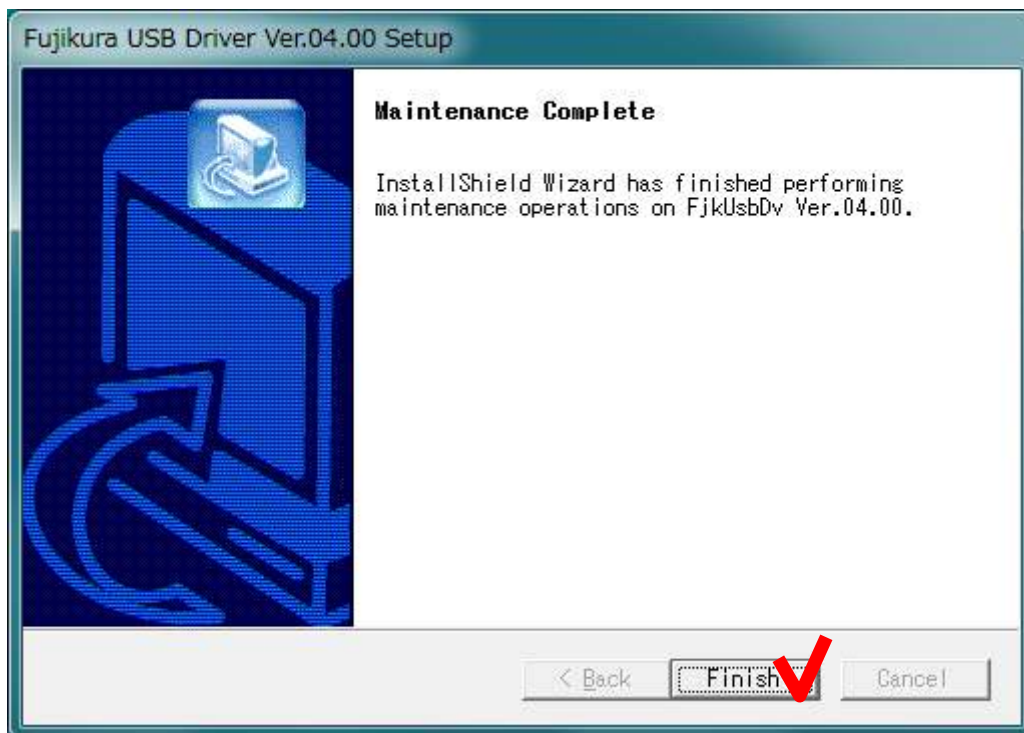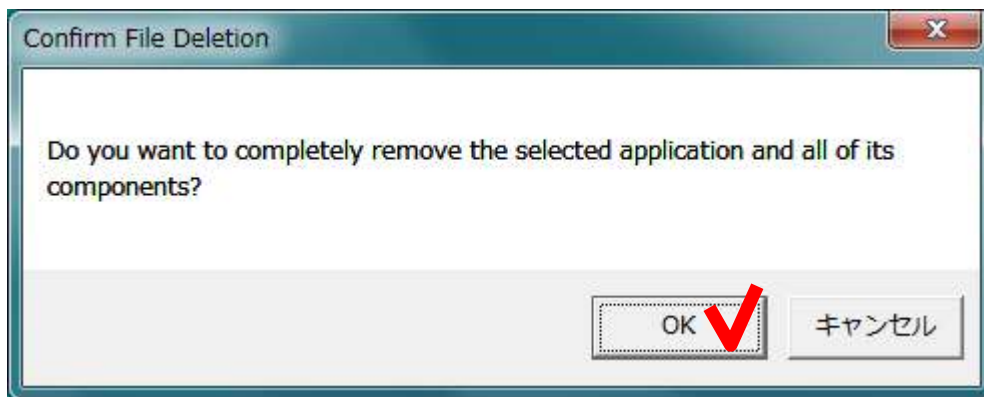

Installation: Windows 7 (32bit), Windows Vista (32bit)

(8) Installation of USB driver will start successively.

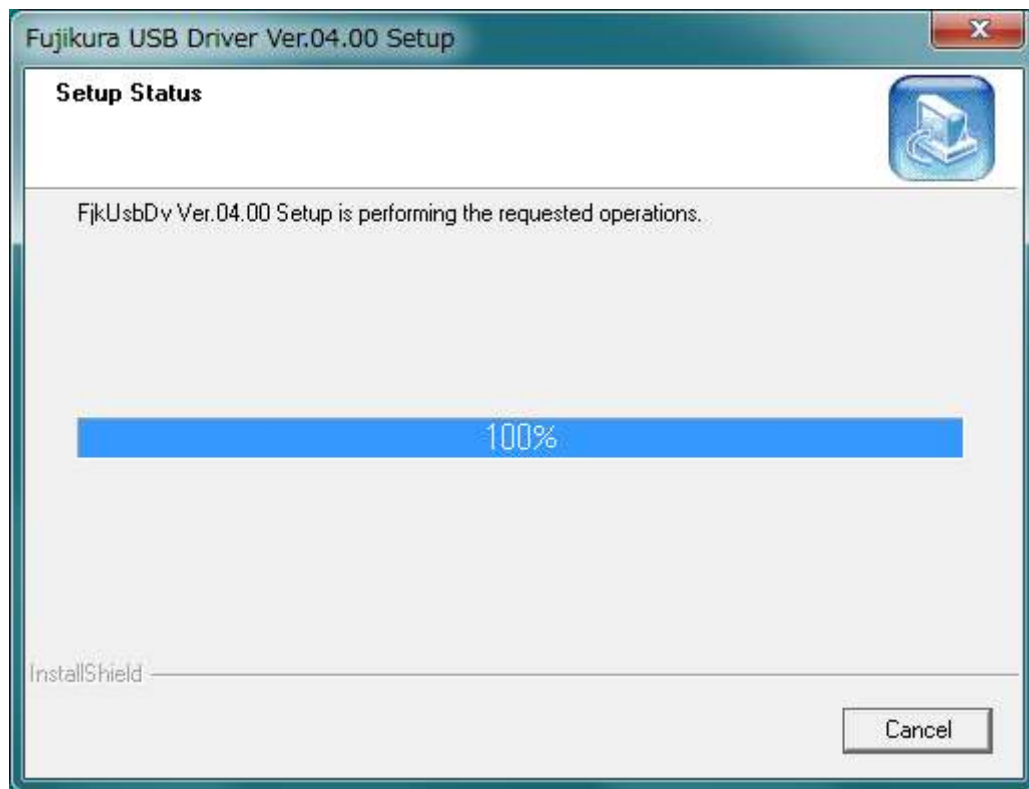

A confirmation message may appear.
In this case, click [Install].




Installation: Windows 7 (32bit), Windows Vista (32bit)

A security warning message may appear.
In this case, click “Install this driver software anyway”.



(9) Click [Finish] button after installation of the driver is finished.

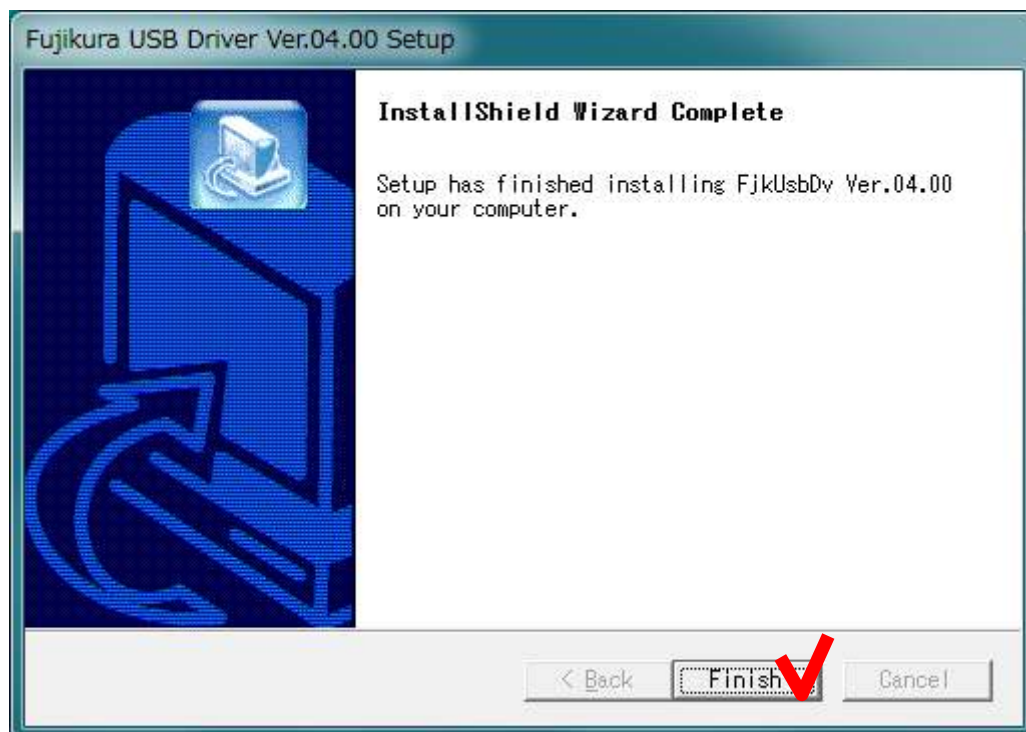

Installation: Windows 7 (32bit), Windows Vista (32bit)

- (10) Installation of the main program of FSM Data Connection will start.
- (11) Installation has completed. Click [Exit] button to close the menu.



3.2.3 In case of Windows XP (32bit)

- (1) Confirm that USB cable is not connected.
- (2) Insert the instruction CD into CD-ROM or DVD drive.
- (3) After a few seconds, an instruction menu will appear automatically.
If the menu does not appear, run “fsmInstruction.exe” which is in the root of the CD drive.

Name	Size	Type	Date Modified
manual		File Folder	11/4/2011 1:36 PM
x64		File Folder	11/4/2011 1:36 PM
x86		File Folder	11/4/2011 1:36 PM
fsmInstaller.exe	1,967 KB	Application	10/28/2011 11:39 AM
fsmInstruction.exe	1,568 KB	Application	10/28/2011 11:22 AM
fsmInstaller.exe.manifest	1 KB	MANIFEST File	5/20/2009 4:17 PM
fsmSetup.exe.manifest	1 KB	MANIFEST File	5/20/2009 4:18 PM
autorun.inf	1 KB	Setup Information	5/21/2009 11:48 AM
Instruction.txt	1 KB	Text Document	10/31/2011 5:13 PM

- (4) Click [Load FSM Data Connection Software] button.




- (5) The message shown below may appear if you run the installer without administrator privilege. In this case, log on PC using an account with administrator privilege.



- (6) License Agreement confirmation window will appear in case current version of software is not installed in your PC. Otherwise, if the software has already been installed, uninstallation window will appear. (See chapter 4 “Uninstall”)

Click [ACCEPT] [1] button if you accept the License Agreement.
If you do not accept the License Agreement, click [DECLINE] [2] button.
In this case, installation should be cancelled.

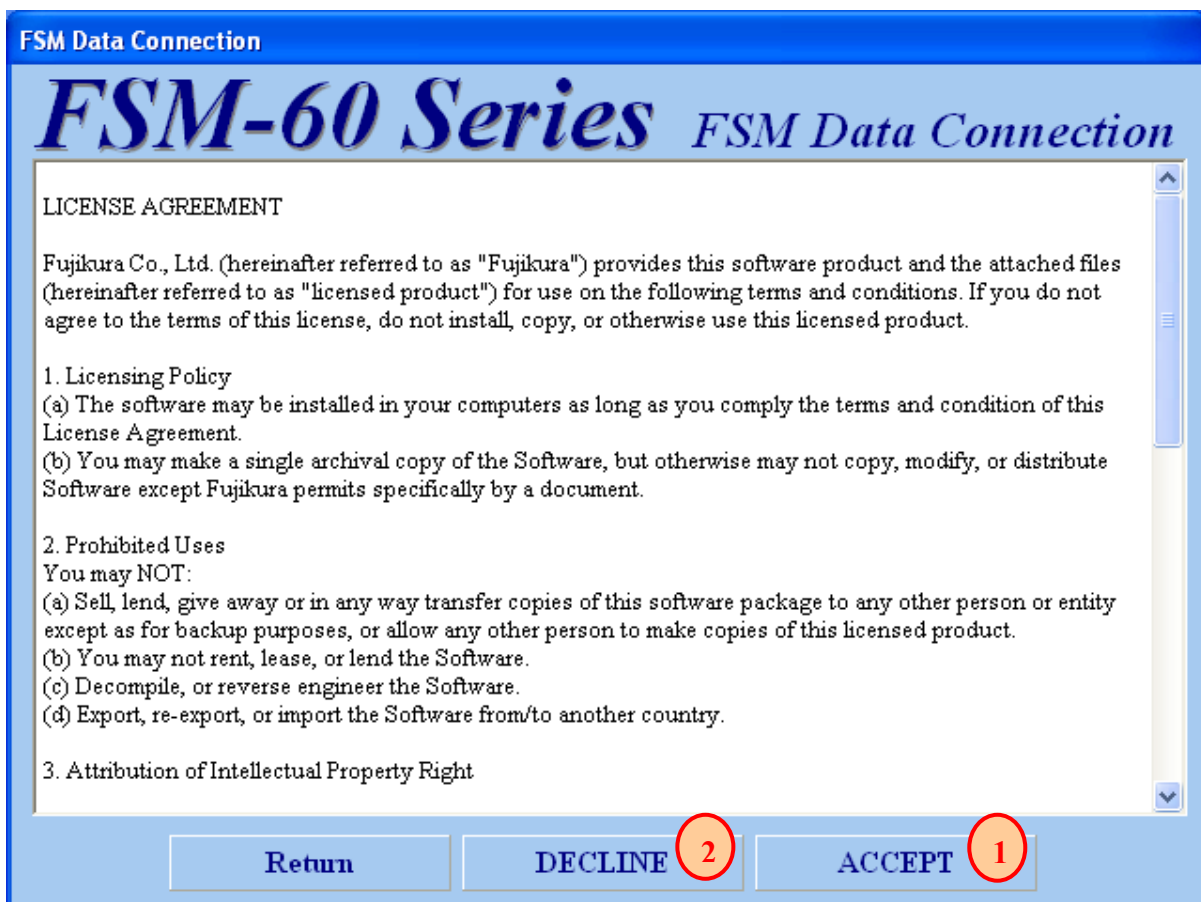


Installation: Windows XP (32bit)

(7) Installation of .NET Framework 2.0SP1 may start if it has not been installed in PC.

Click “I have read and ACCEPT the terms of the License Agreement” and then click [Install].

Installation of the .NET Framework takes a few minutes.


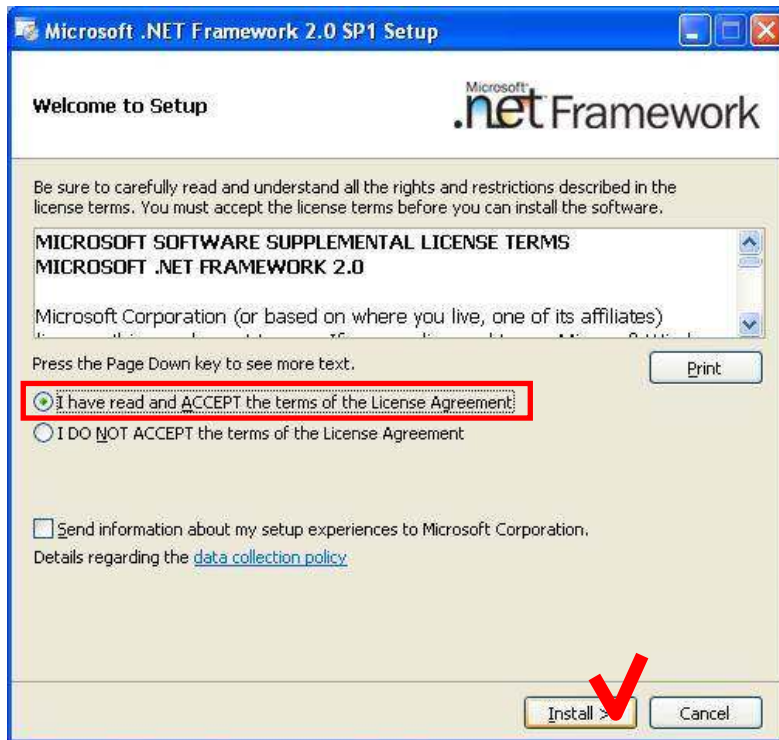


Click [Exit] when finished.




Installation: Windows XP (32bit)


- (8) Uninstallation of USB driver may start if old version driver is installed in PC.
In this case, click [OK] and then click [Finish]

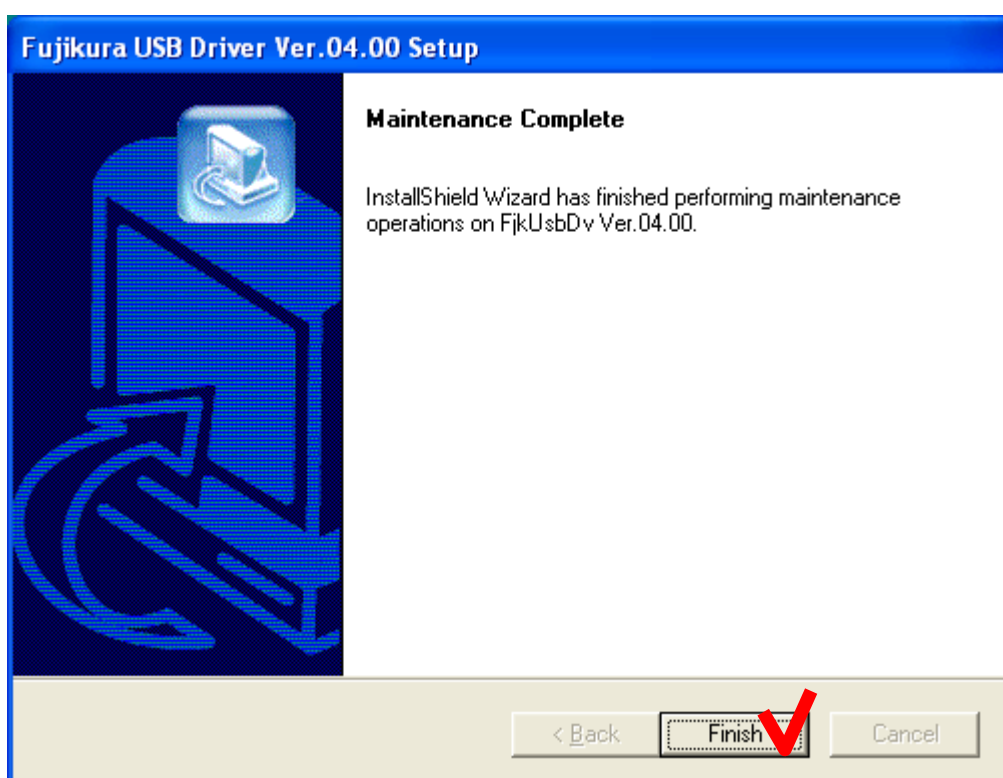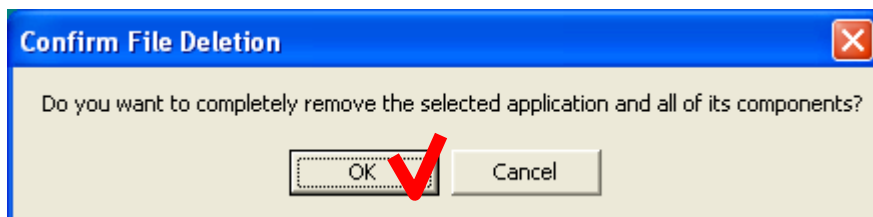

(9) Installation of USB driver will start successively.

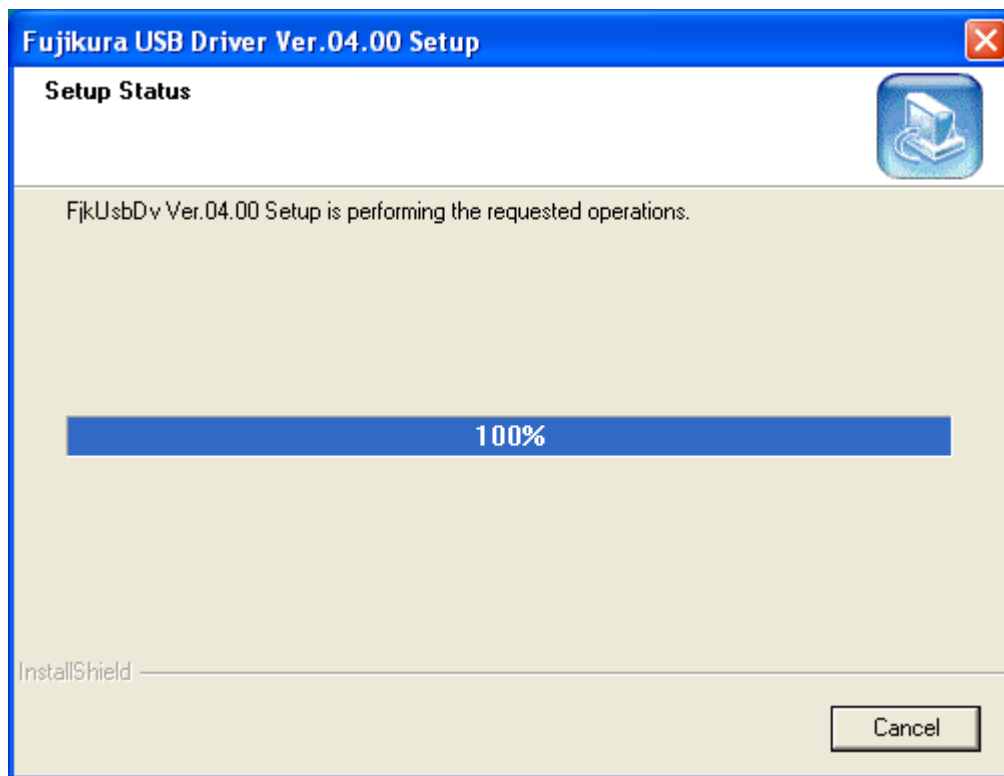

(10) Click [Finish] button after installation of the driver is finished.

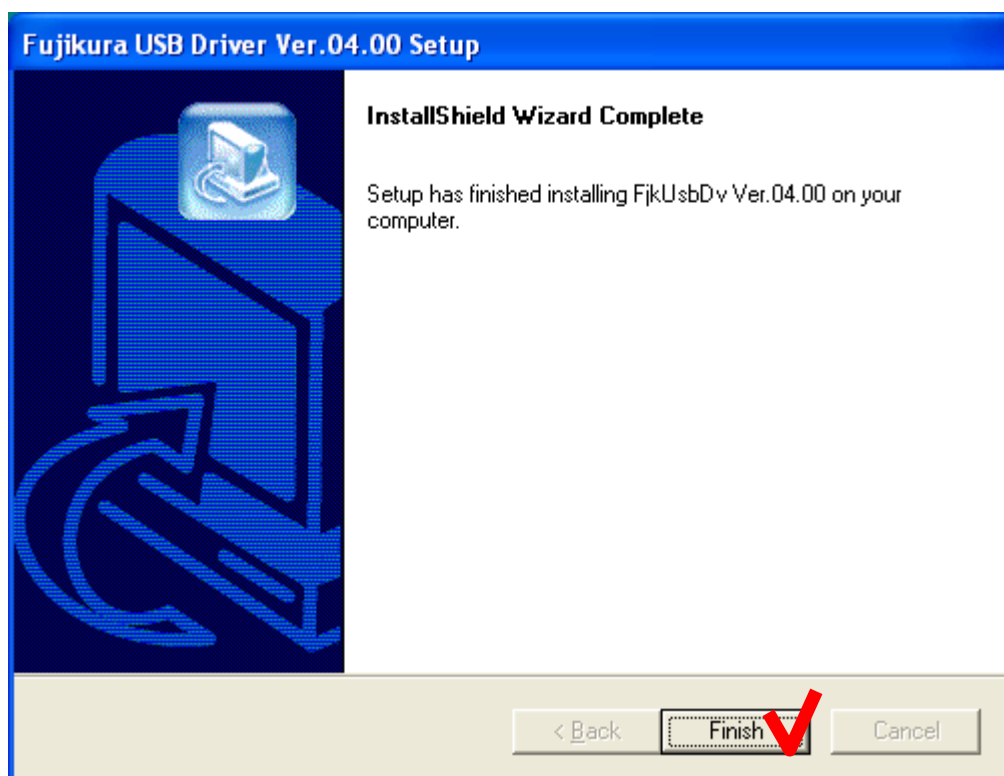

Installation: Windows XP (32bit)

- (11) Installation of the main program of FSM Data Connection will start.
- (12) Installation has completed. Click [Exit] button to close the menu.


 


3.3 STEP 3 : Run

- (1) Double-click the short cut on the desk top or click “FSM Data Connection” in the [Start] → [All Programs] → [Fujikura] menu.



or

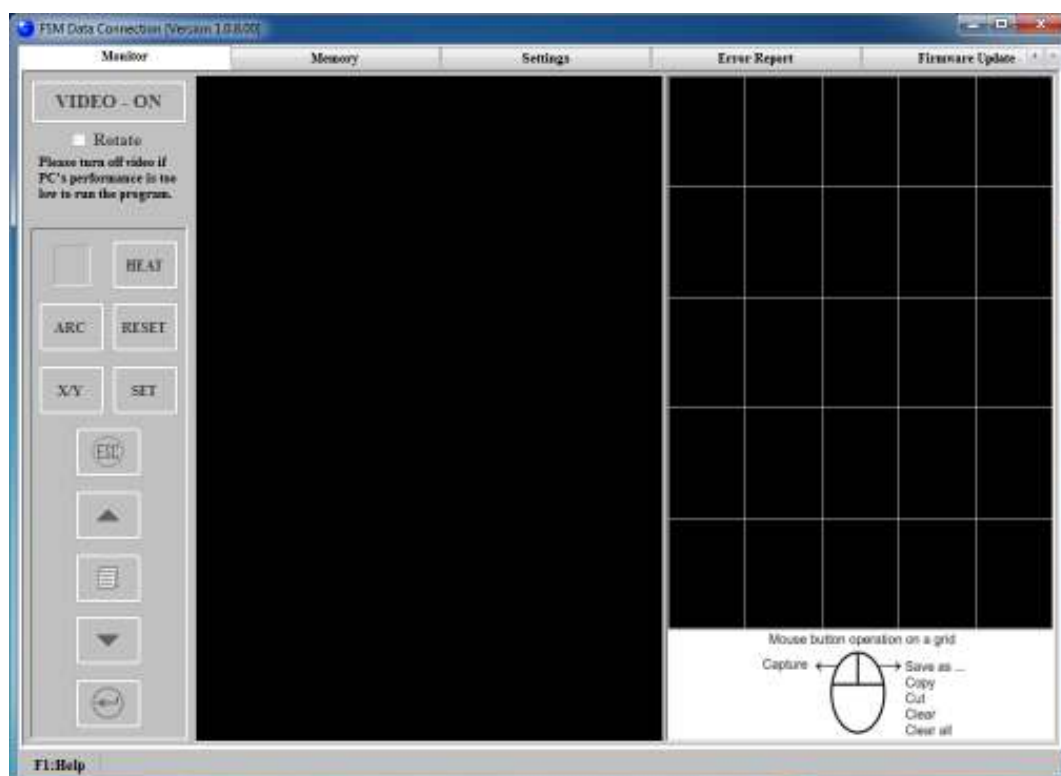




Trouble Shooting

- a) Some errors occur when FSM Data Connection is executed.
- (1) Windows may not be updated by the latest update. Perform Windows Update or Microsoft Update to update the operating system.
 - (2) Memory capacity or the processor speed may be insufficient to meet the System Requirement. Install additional memory or use another PC.
 - (3) Dot Net Framework has not been installed.
In case of 32 bit system
Run the NetFx20SP1_x86.exe in the CD-ROM and install it.



- In case of 64 bit system
Run the dotNetFx40_Client_x86_x64.exe in the CD-ROM
and install it.

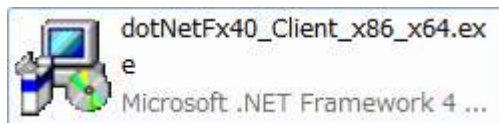

- b) It takes more than 20 seconds to start the program.
- (1) Quit another programs running on the PC.
 - (2) Memory capacity or the processor speed may be insufficient to meet the System Requirement. Install additional memory or use another PC.

- (2) Connect PC and the splicer by USB cable. Then turn on the splicer power and confirm "READY" is displayed on the monitor of the splicer.




If using Windows 7 (64bit)


- (1) Message that “Device driver software was not successfully installed” pops up.



- (2) In case installation failed or “Found New Hardware Wizard” window does not appear from the start, open [Start] → [Control Panel] → [System] → [Hardware] → [Device Manager] menu.
- (3) If “Jungo” or “Other devices” is listed, click [+] mark. Then right-click on “FJK-SY-045” or “Unknown device” and select “Update driver...”
If “Other devices” is not listed, check the connection between the splicer and PC, and also check the power of splicer.

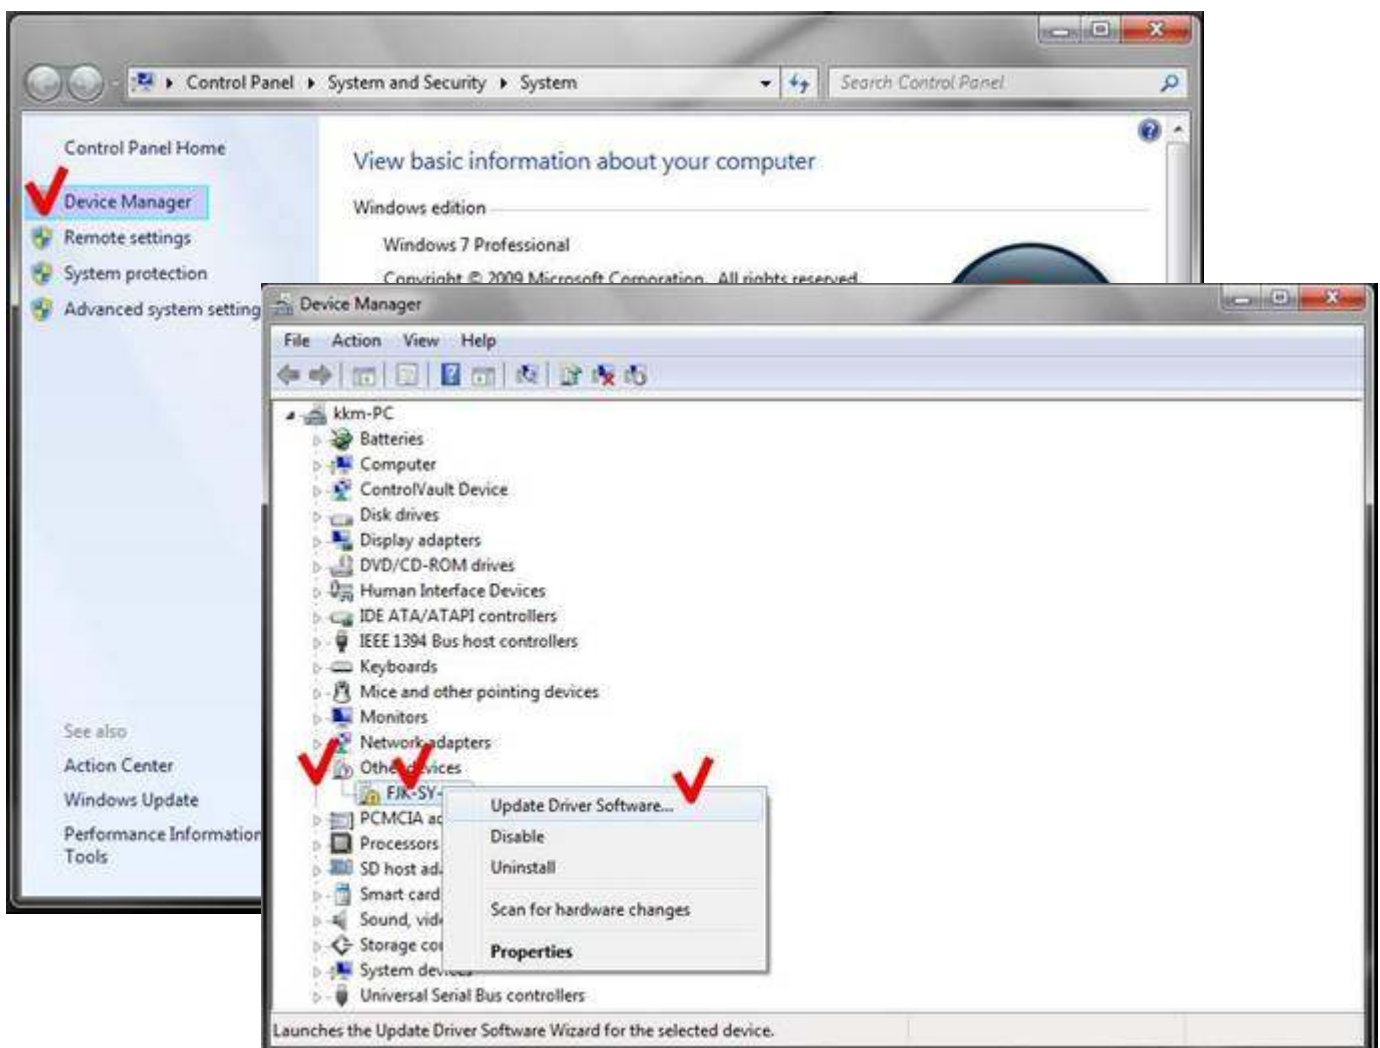


Click “Browse my computer for driver software”.

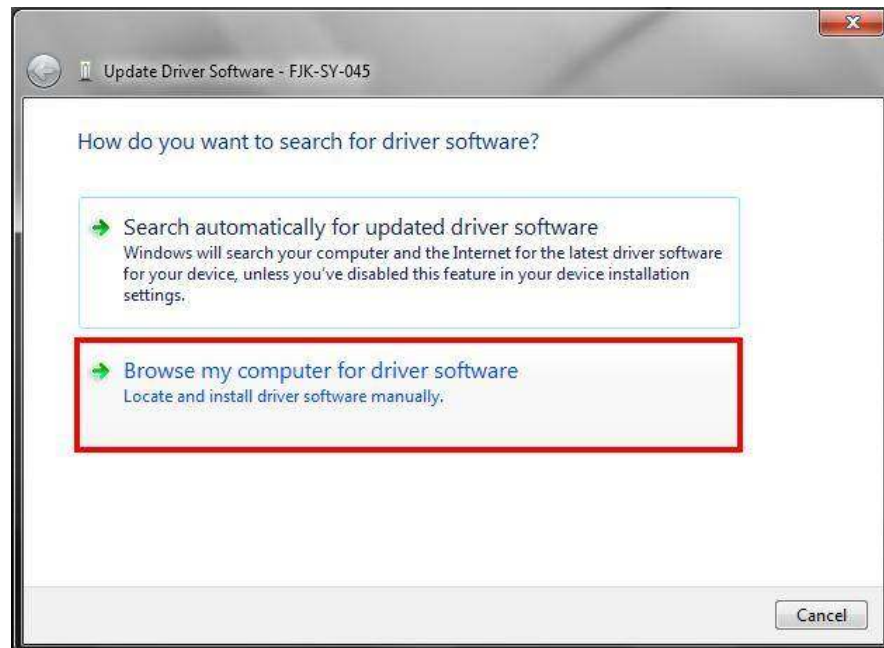

- (4) Click [Browse...] and then select “My Computer” → “Local Disk(C:)” * → “FjkUsbDv” → “v_00_01” and finally click [Open] button.
Otherwise, enter “C:\FjkUsbDv\v_00_01” * to the text box directly.

Then click [Next] button.


* It is necessary to choose the disk drive where Windows is installed. In most cases, it is “C:”.

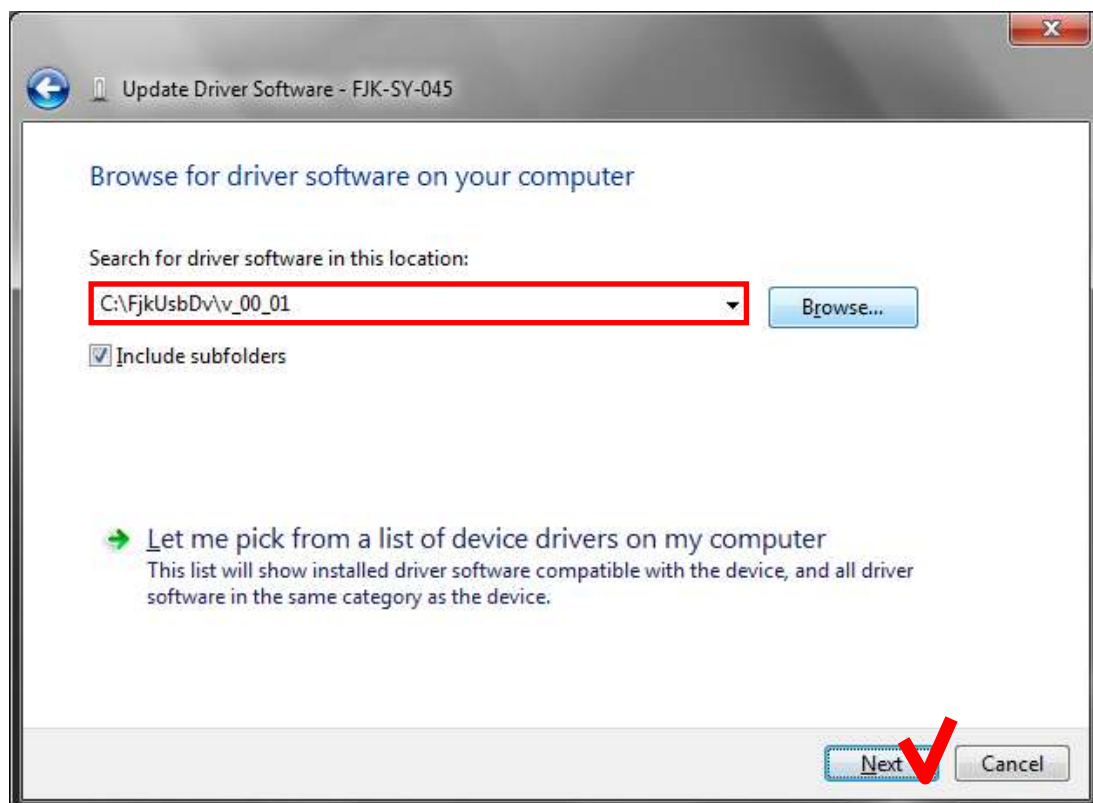

Click “Install this driver software anyway”.



Click [Close]

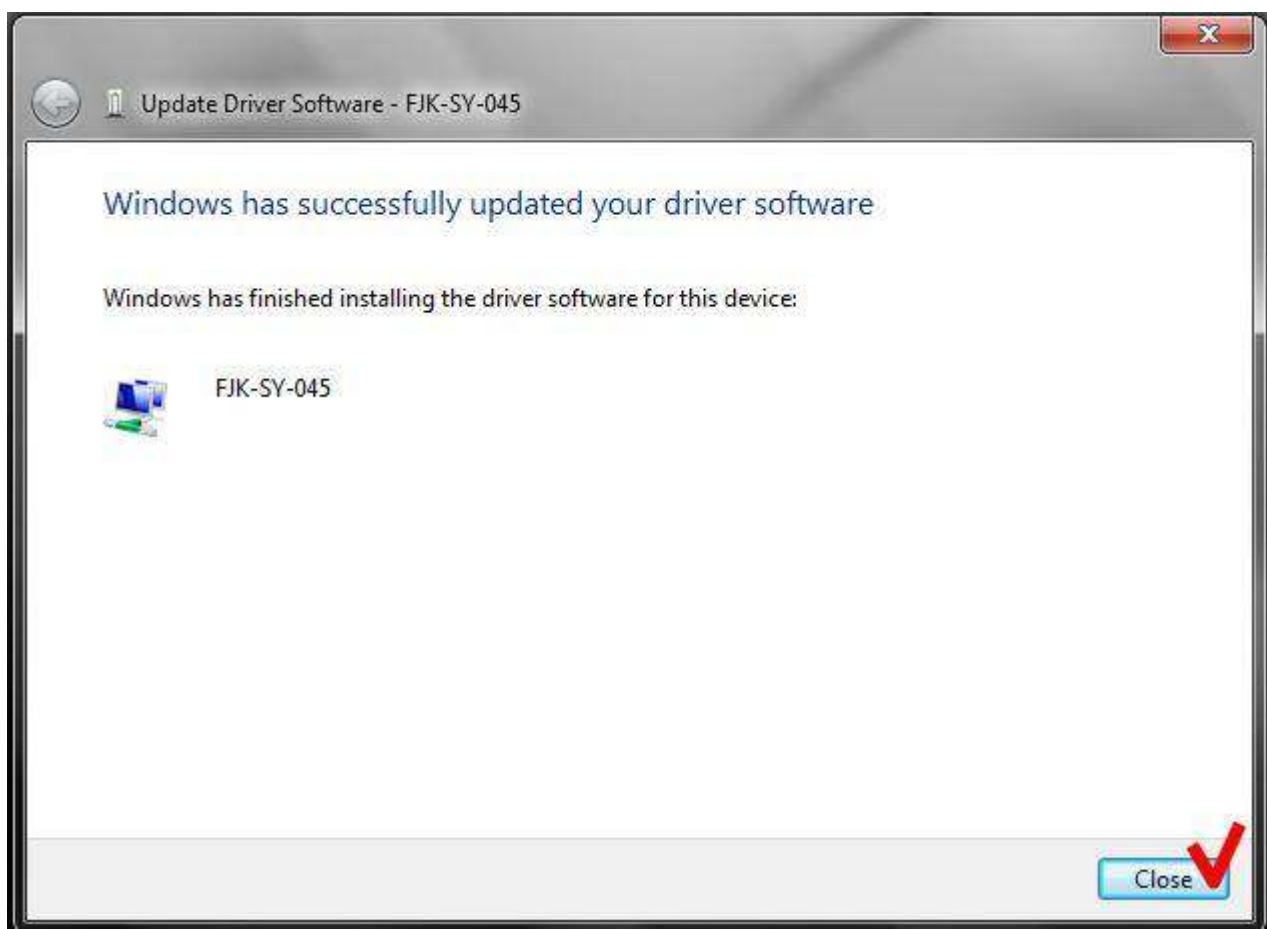


(5) Close “System Properties” and “Device Manager”.

In case of Windows 7 (32bit)


- (1) Message that "Device driver software was not successfully installed" is popped up.



- (2) In case installation failed or "Found New Hardware Wizard" window does not appear from the start, open [Start] → [Control Panel] → [System] → [Hardware] → [Device Manager] menu.
- (3) If "Jungo" or "Other devices" is listed, click [+] mark. Then right-click on "FJK-SY-045" or "Unknown device" and select "Update driver..."
"If "Other devices" is not listed, check the connection between splicer and PC, and also check the power of splicer.

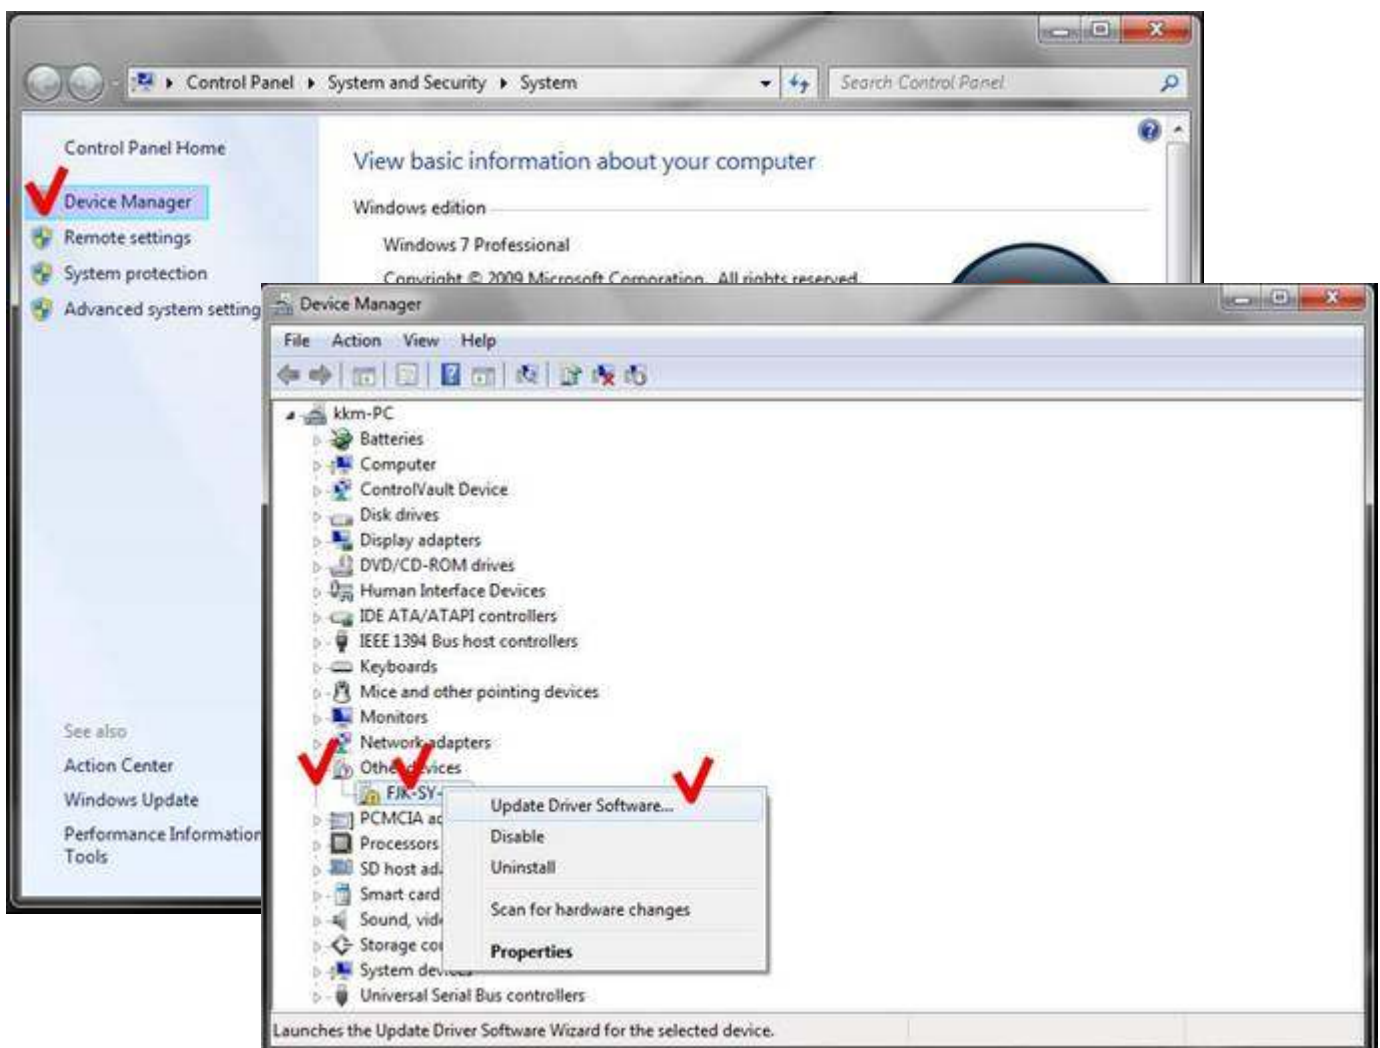

Click “Browse my computer for driver software”.

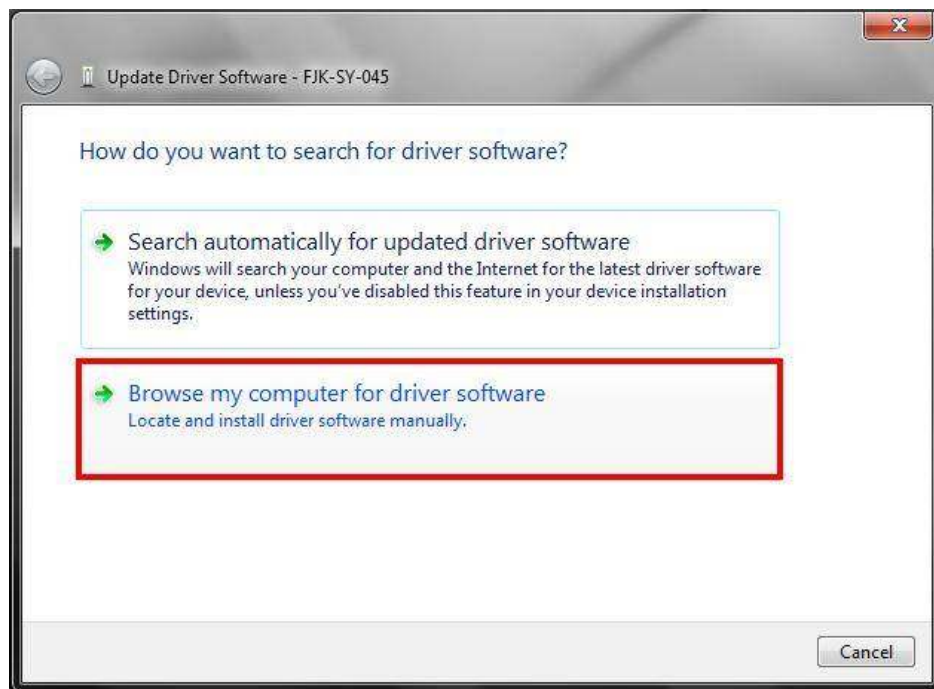

- (4) Click [Browse...] and then select “My Computer” → “Local Disk(C:)” * → “FjkUsbDv” → “v_04_00” and finally click [Open] button.
Otherwise, enter “C:\FjkUsbDv\v_04_00” * to the text box directly.

Then click [Next] button.


* It is necessary to choose the disk drive where Windows is installed. In almost cases, it is “C:”.



Click “Install this driver software anyway”.



Click [Close]

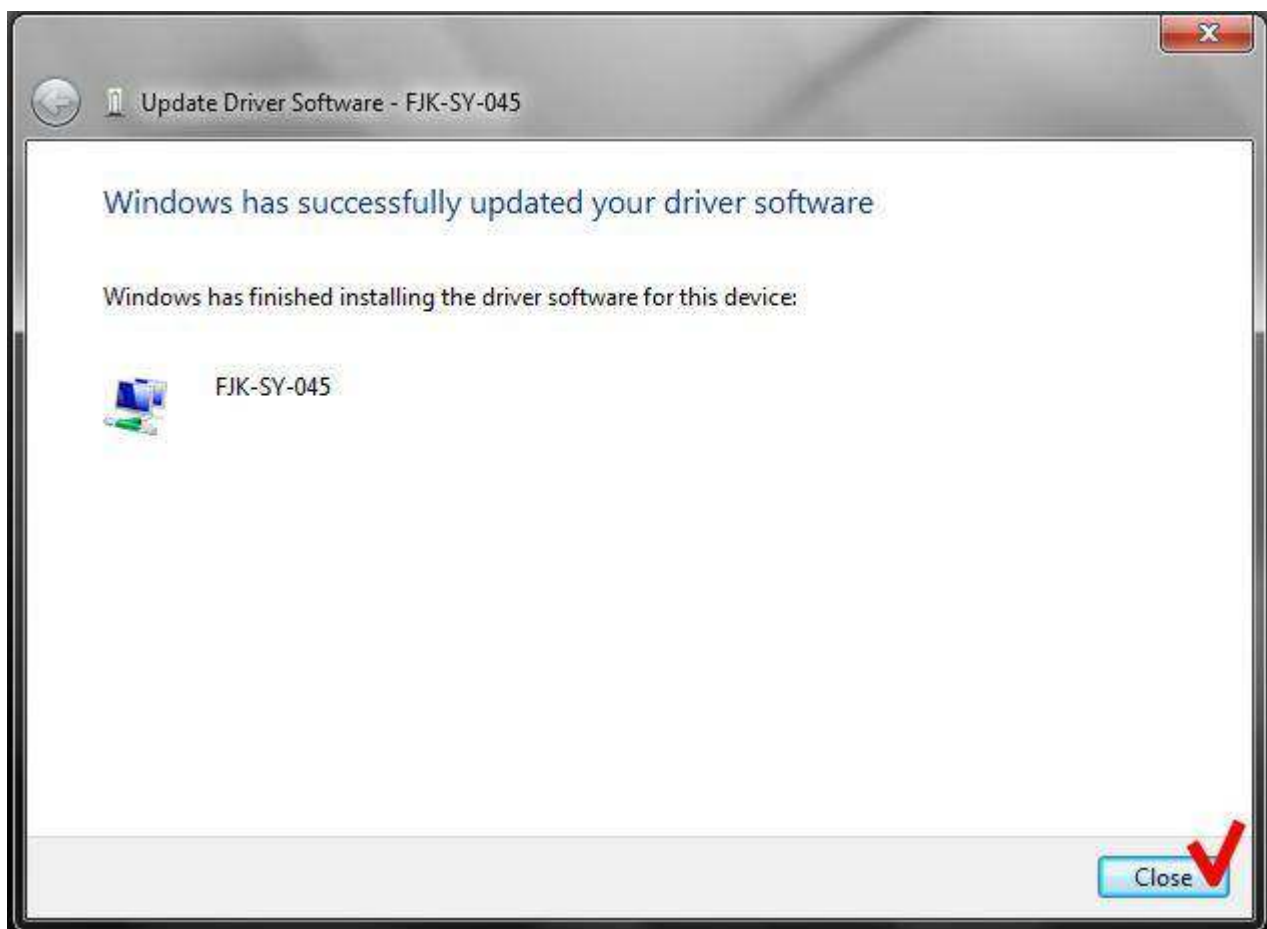


(5) Close “System Properties” and “Device Manager”.


In case of Windows Vista (32bit)

If “Found New Hardware Wizard” window appears:

- (1) Click “Locate and install driver software”
- (2) Click “I don’t have the disc. Show me other options”.

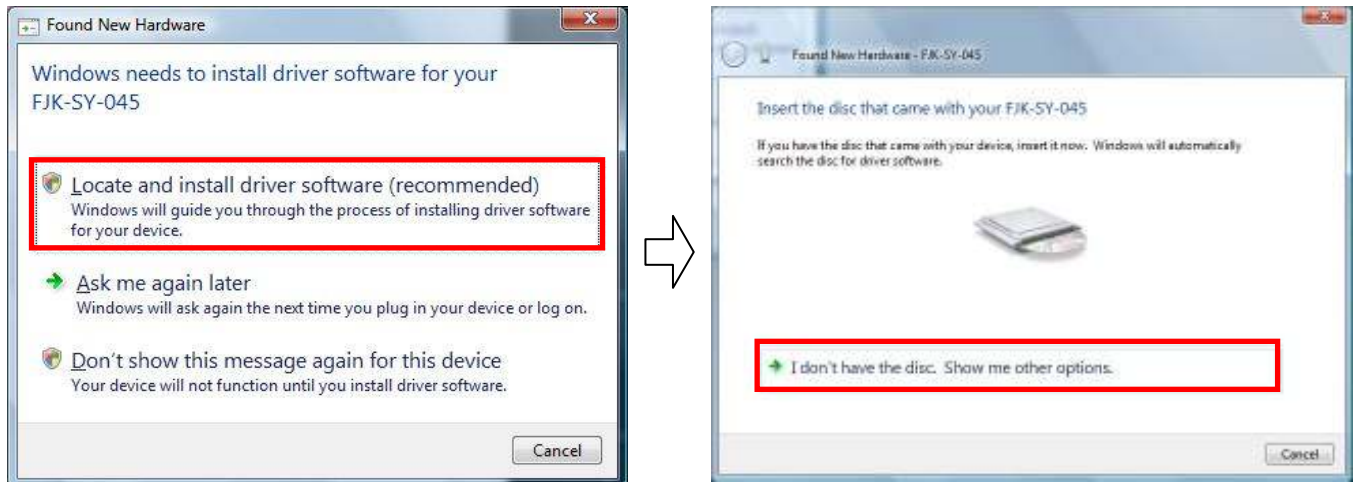


- (3) Click “Browse my computer for driver software”.

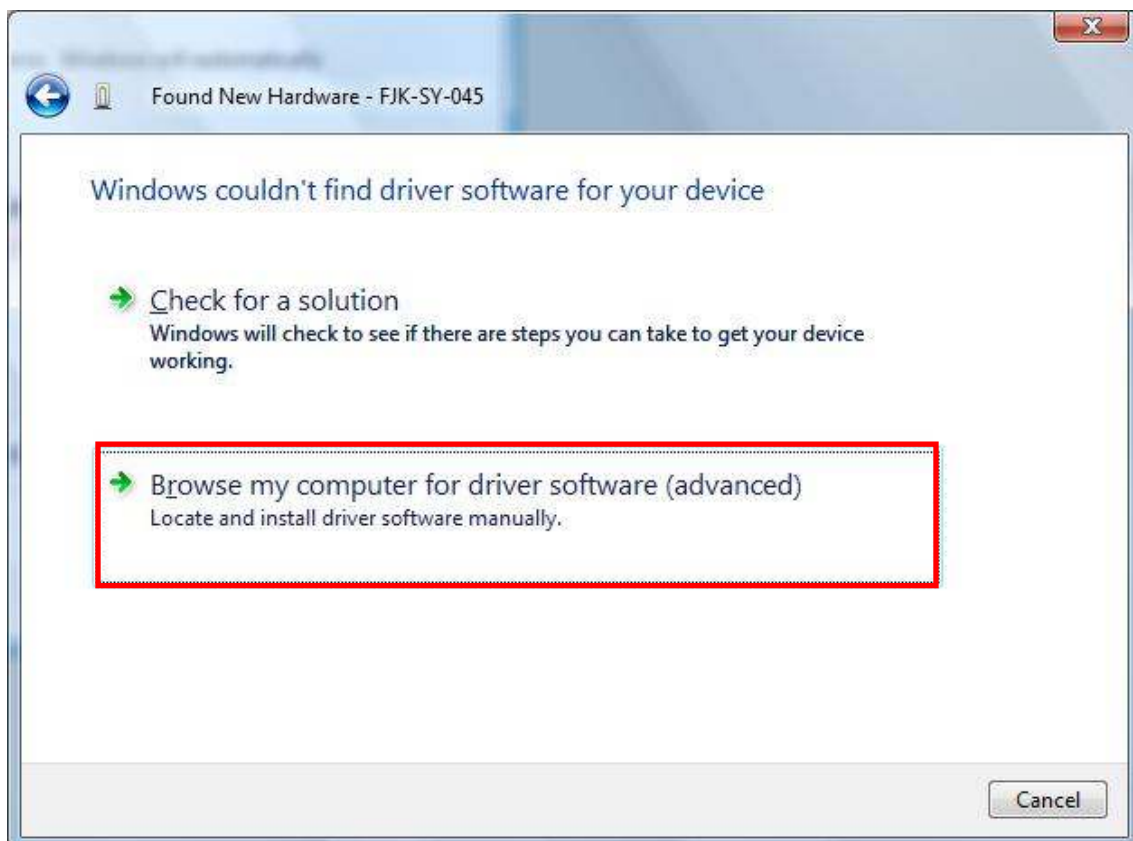

- (4) Click [Browse...] and then select “My Computer” → “Local Disk(C:)” * → “FjkUsbDv” → “v_04_00” and finally click [Open] button.
Otherwise, enter “C:\FjkUsbDv\v_04_00” * to the text box directly.

Then click [Next] button.


* It is necessary to choose the disk drive where Windows is installed. In almost cases, it is “C:”.

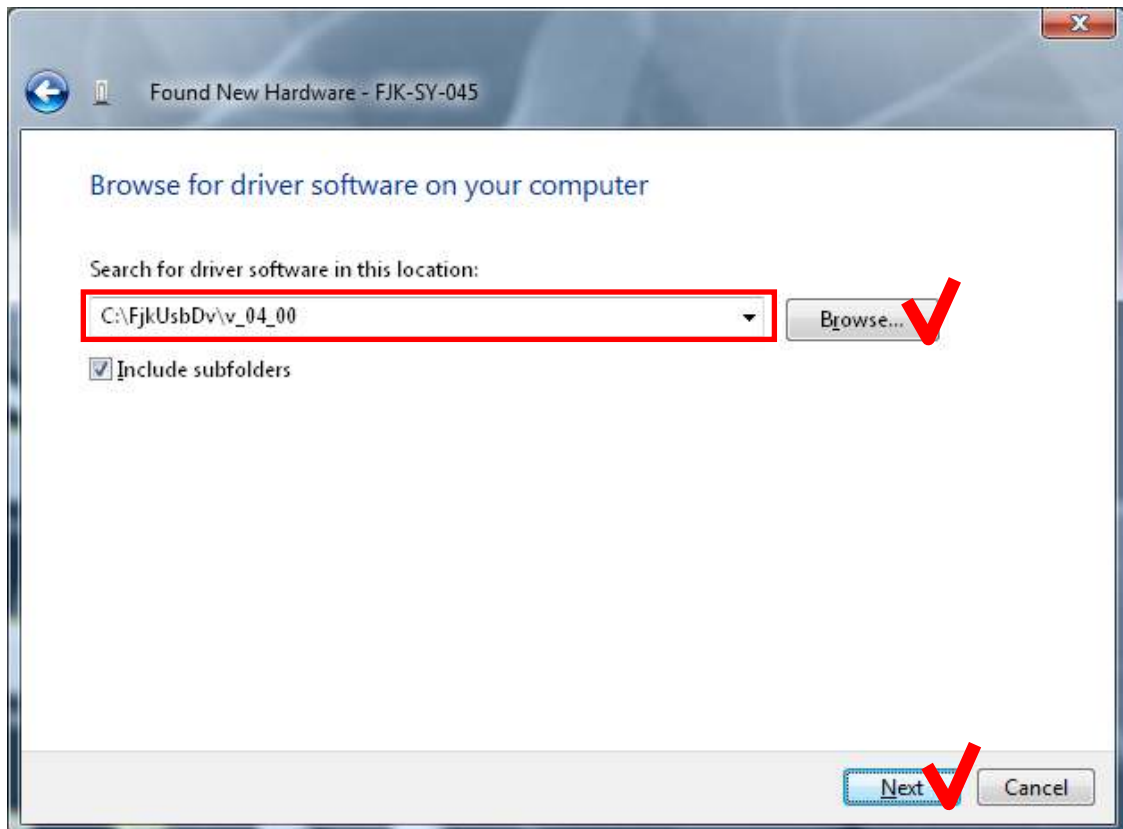

- (5) A security warning message may appear. In this case, click “Install this driver software anyway”.



- (6) Click [Close] when the message “The software for this device has been successfully installed” is displayed.

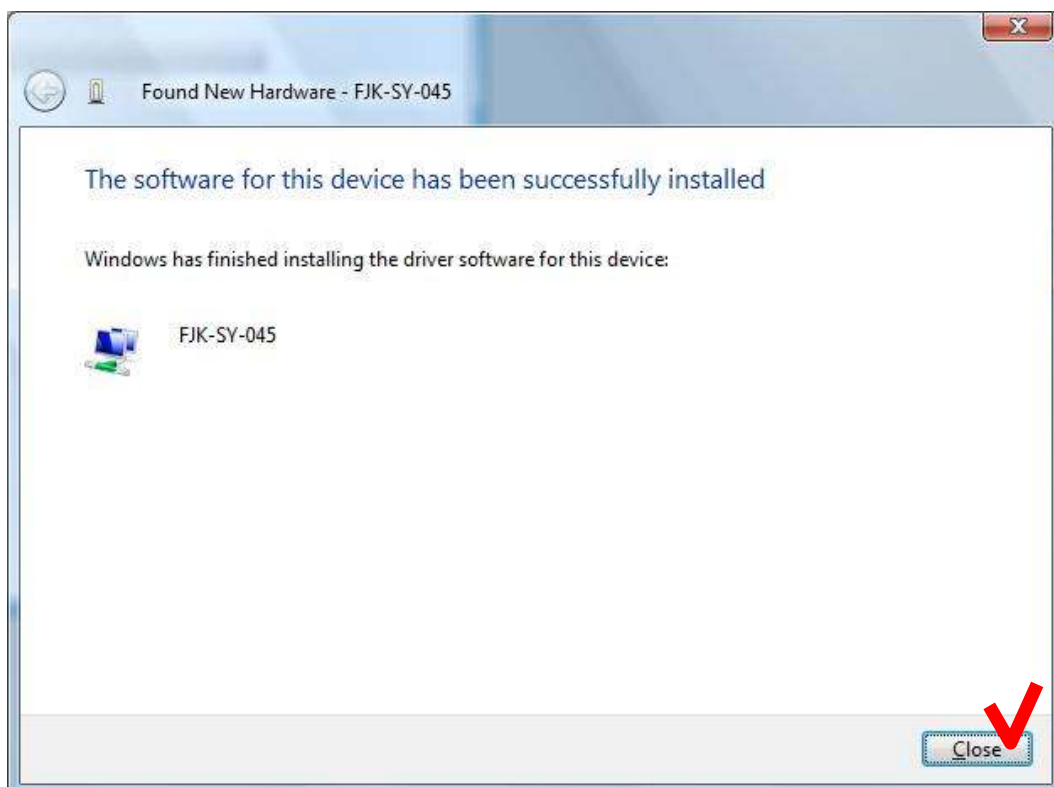


If “Found New Hardware Wizard” window does not appear:

- (7) Communication between PC and the splicer has already been enabled if the blue icon [1] is displayed. In this case, go to paragraph (4), page 44.



- (8) In case the icon is not displayed, open [Start] → [Control Panel] → [System] → [Hardware] → [Device Manager] menu by clicking them sequentially. If “Jungo” or “Other devices” is listed, click [+] mark of it. Then right-click on “FJK-SY-045” or “Unknown device” and then click “Update driver...”
If they are not listed, check the splicer is connected and power is turned on.

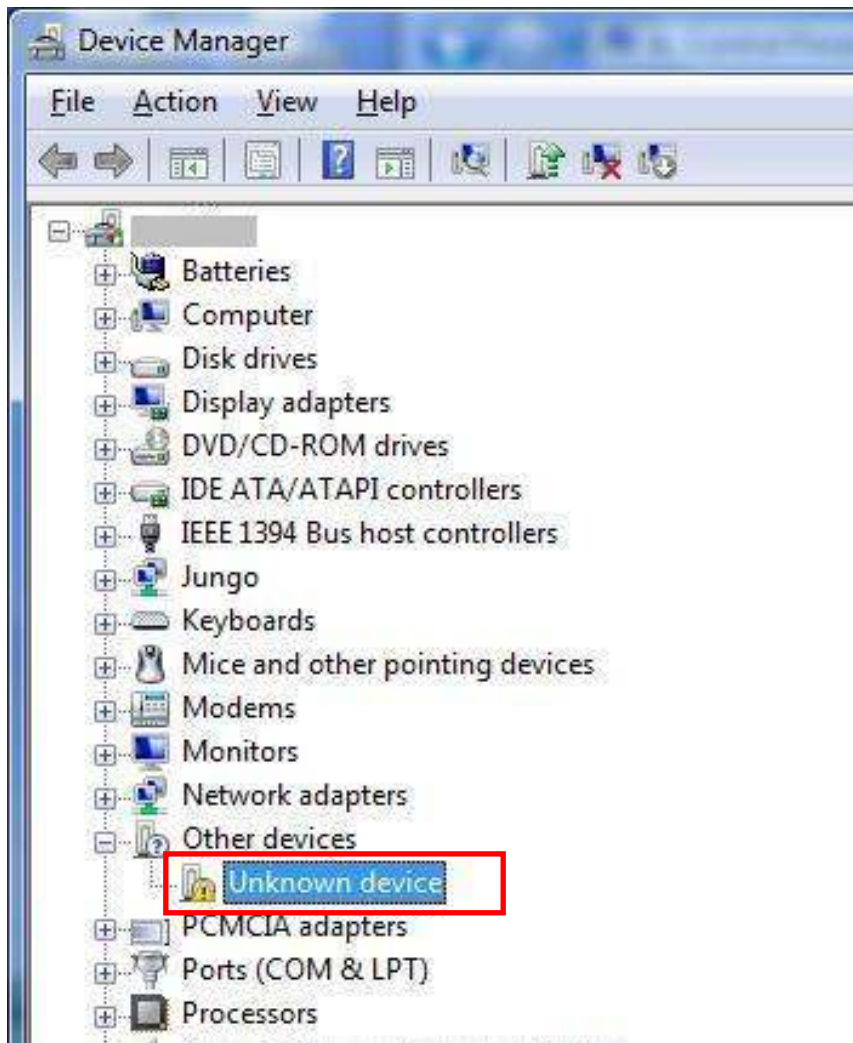


“User Account Control” window may appear during operations for installation.



Click [Continue] if “Windows needs your permission to continue” is indicated in the window.



Click [Allow] if “Unidentified program wants access to your computer” is indicated in the window.

- (9) Click “Browse my computer for driver software” and then go back to the procedure shown in paragraph (4), page 34.

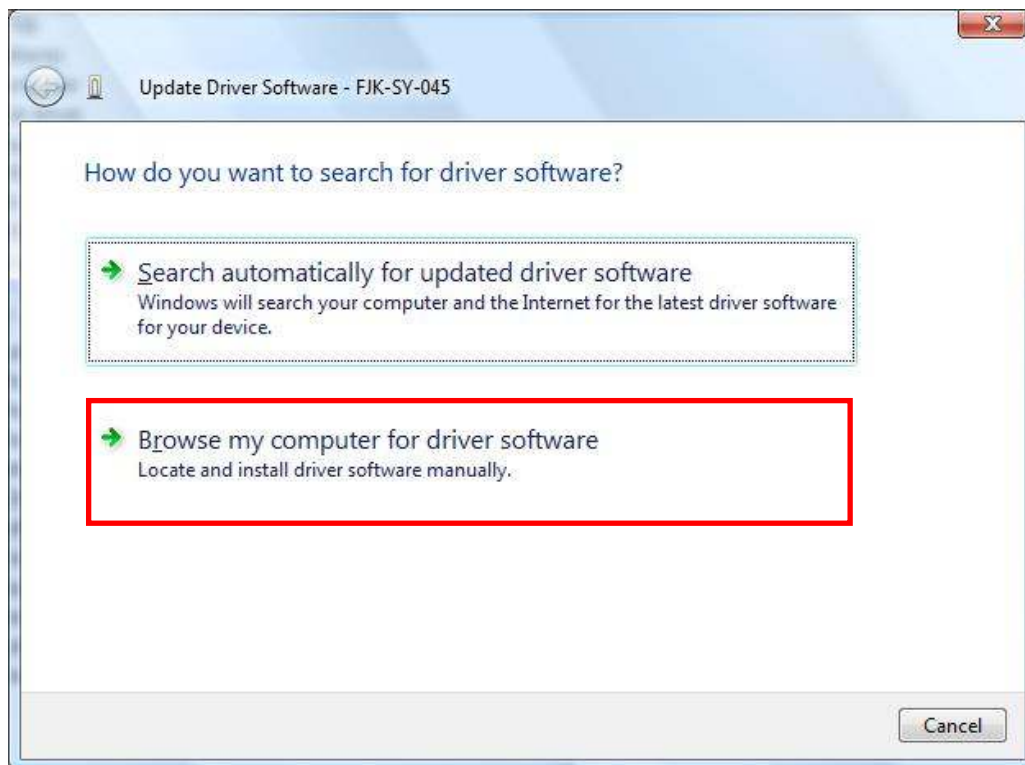


In case of Windows XP (32bit)

 - (1) If “Found New Hardware Wizard” window appears, click “Install the software automatically” and then click [Next] button.
Click [Finish] button after the wizard is complete.

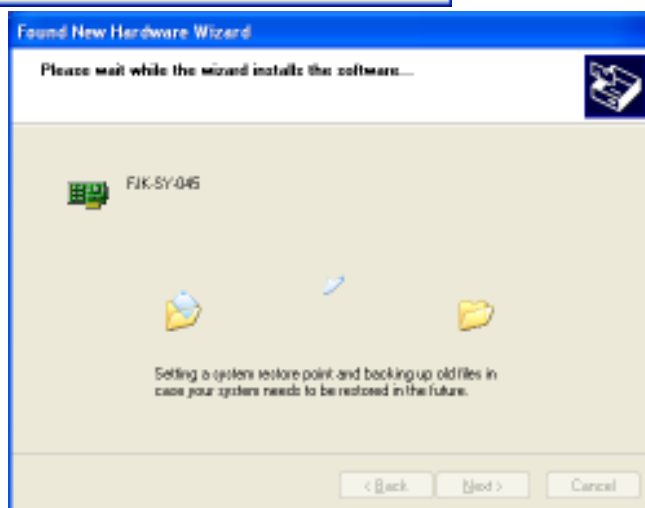

Completed

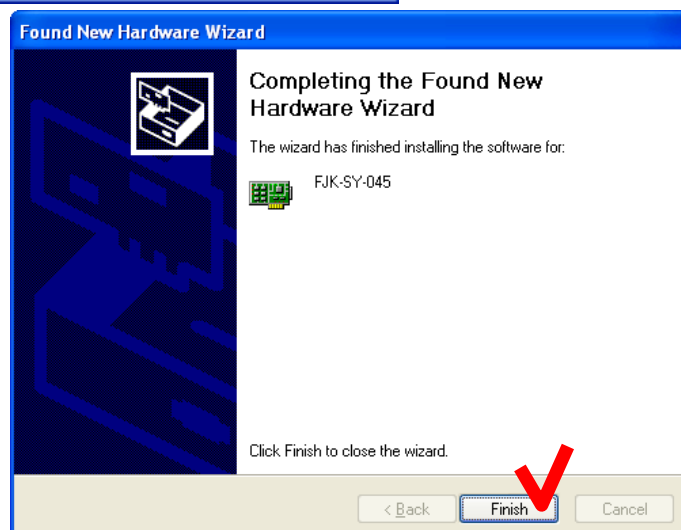


Run: Windows XP (32bit)

- (2) In case installation failed or “Found New Hardware Wizard” window does not appear from the start, open [Start] → [Control Panel] → [System] → [Hardware] → [Device Manager] menu.



If “Jungo” or “Other devices” is listed, click [+] mark. Then right-click on “FJK-SY-045” or “Unknown device” and select “Update driver...”

If “Other devices” is not listed, check the connection between splicer and PC, and also check the power of splicer.

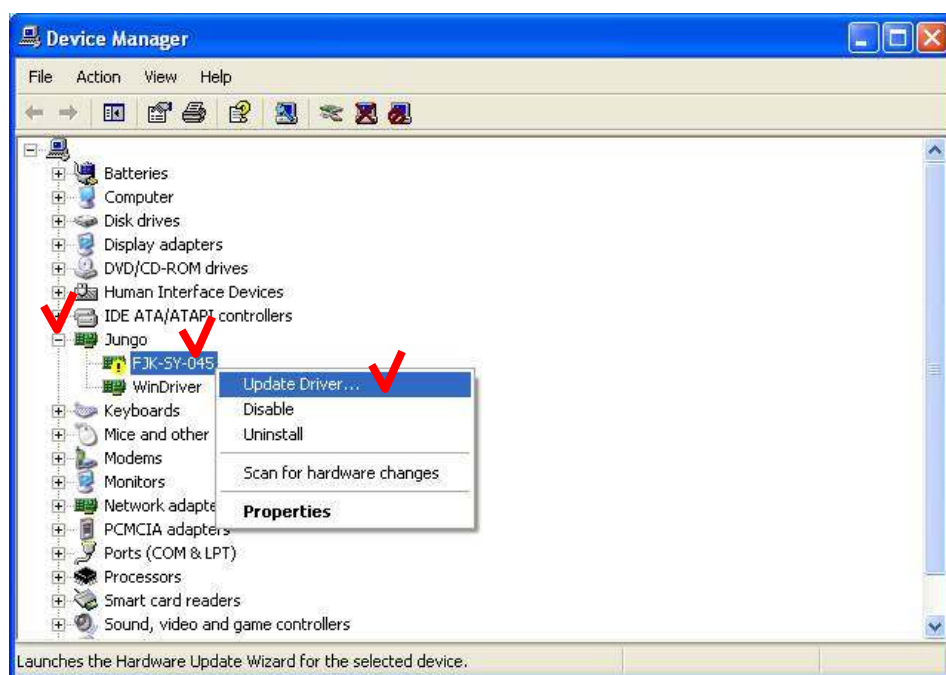


Run: Windows XP (32bit)

Click “Install from a list of specific location” and then click [Next].



Enter “C:\FjkUsbDv\lv_04_00” to the text box and then click [Next].

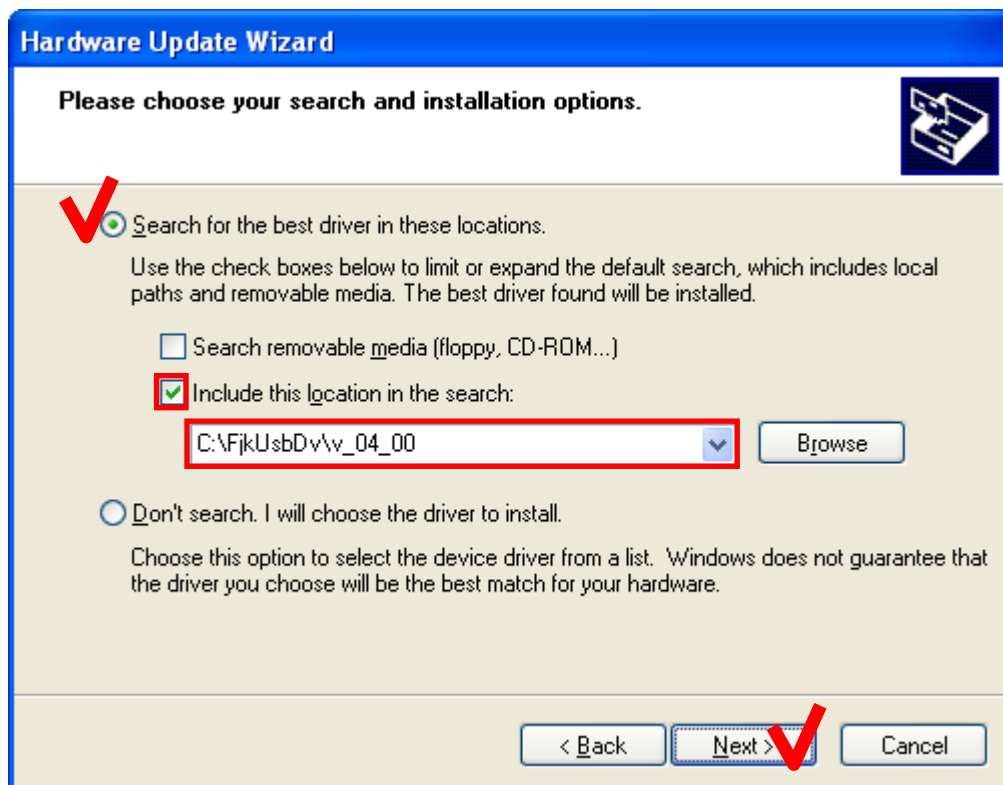


Run: Windows XP (32bit)


Click [Finish] button after the wizard is complete.




Close “System Properties” and “Device Manager”.

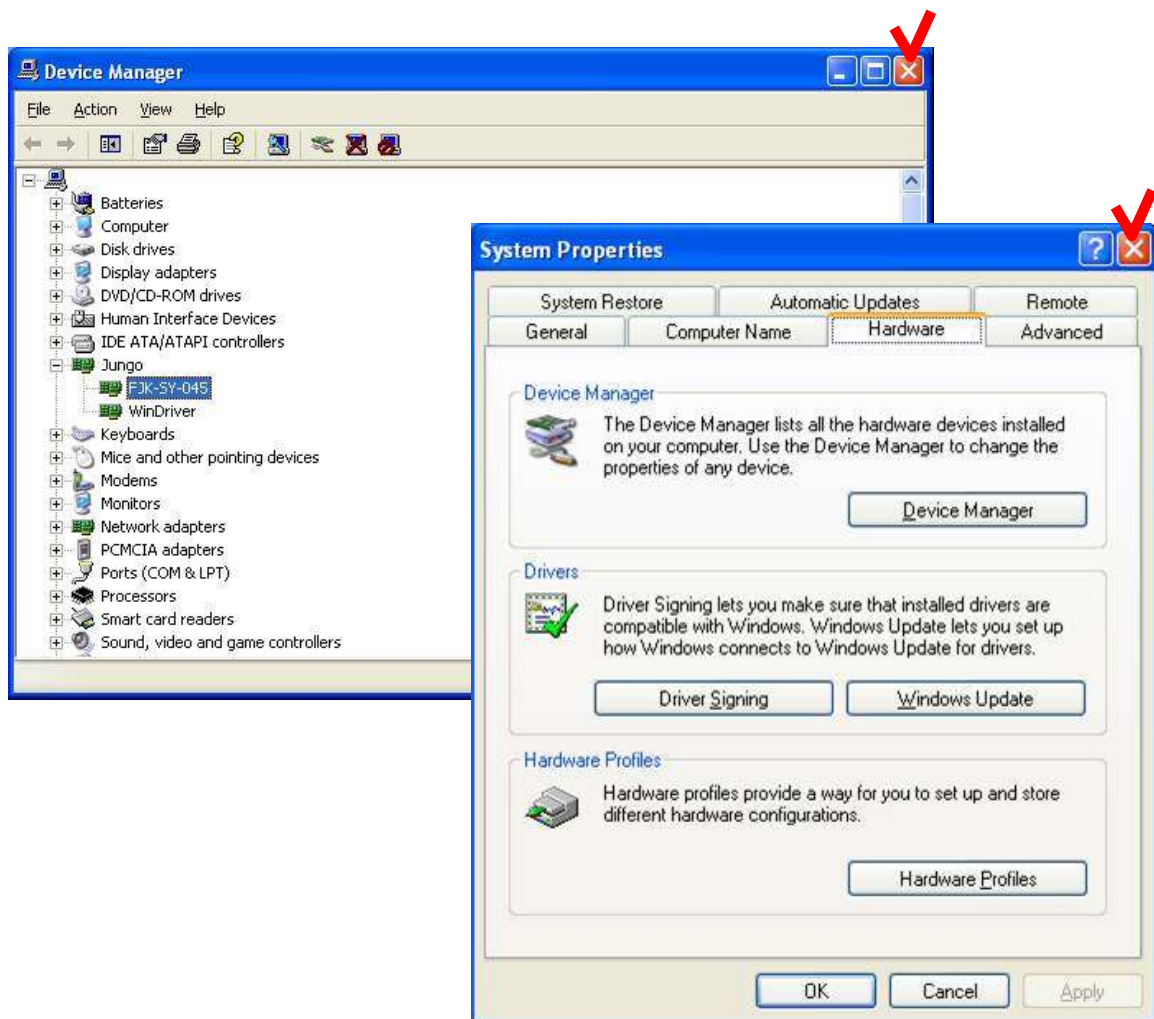


- (3) A blue icon [1] and a photograph of the splicer [2] should be displayed if the program works correctly.

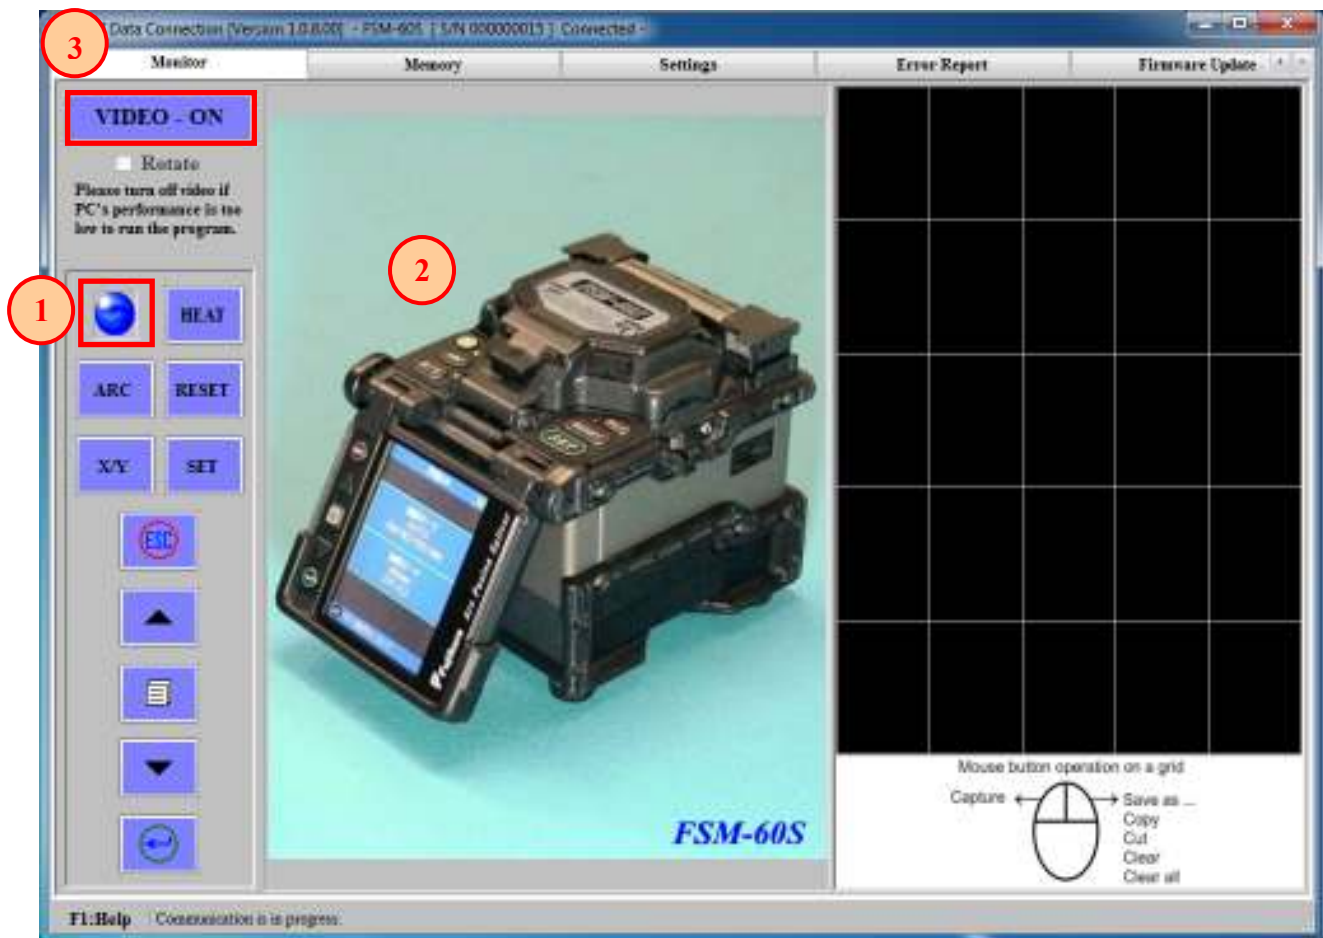

Trouble Shooting

- (1) If  icon does not appear at [1].
- Confirm the cable connection.
 - Confirm the splicer power is turned on.
 - USB driver may not be installed correctly. In this case, install FSMDC again.
- (2) If a picture of the splicer is not shown at [2].
- If the splicer does not indicate "READY", press RESET key of the splicer.
 - Confirm the cable connection.
 - Connect USB cable to PC directly in case the cable is connected through an external USB hub.

- (4) Click [VIDEO ON] [3] and confirm that the image on the splicer's monitor is shown at the center frame.

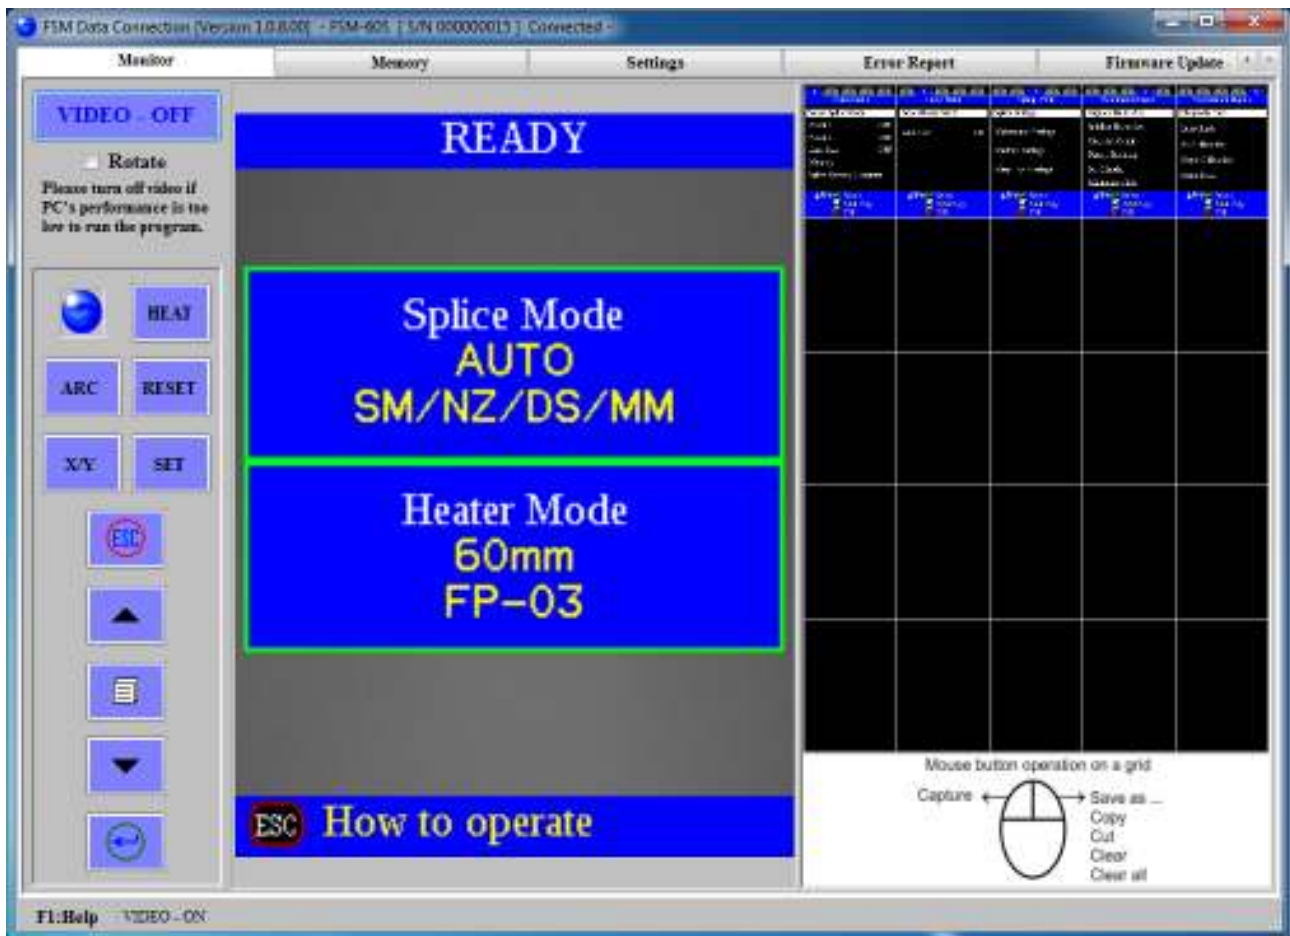

Trouble Shooting

The image on the monitor of the splicer is not displayed at the center frame.

- (1) Turn off the splicer power and then turn on the power again.
- (2) Memory capacity or the processor speed may be insufficient to meet the System Requirement. Install additional memory or use another PC.

4 Uninstall



Uninstaller does not work if the installed version of software is old or some portion of the software has already been deleted.
In this case, install the software again before uninstallation.
Refer to the chapter 3 about installation.

4.1 In case of 64bit system

(1) Insert the instruction CD into CD-ROM or DVD drive.

(2) After a few seconds, the instruction menu will appear.

* If the menu does not appear, double click the "fsmInstruction.exe" which is in the root of CD drive.

(3) Click [Setup FSM Data Connection] button.


Uninstaller cannot remove FSM Data Connection if the version of the installed software is old or some portion of the software has already been deleted. If a dialog of "License Agreement" appears, click [ACCEPT] to install FSMDC once. (About installation, refer to the chapter 3.)

Click [Load FSM Data Connection Software] again after installation has finished.




- (4) A dialog window will appear that shows the name of running operating system and installed components.

Click [Uninstall] button.

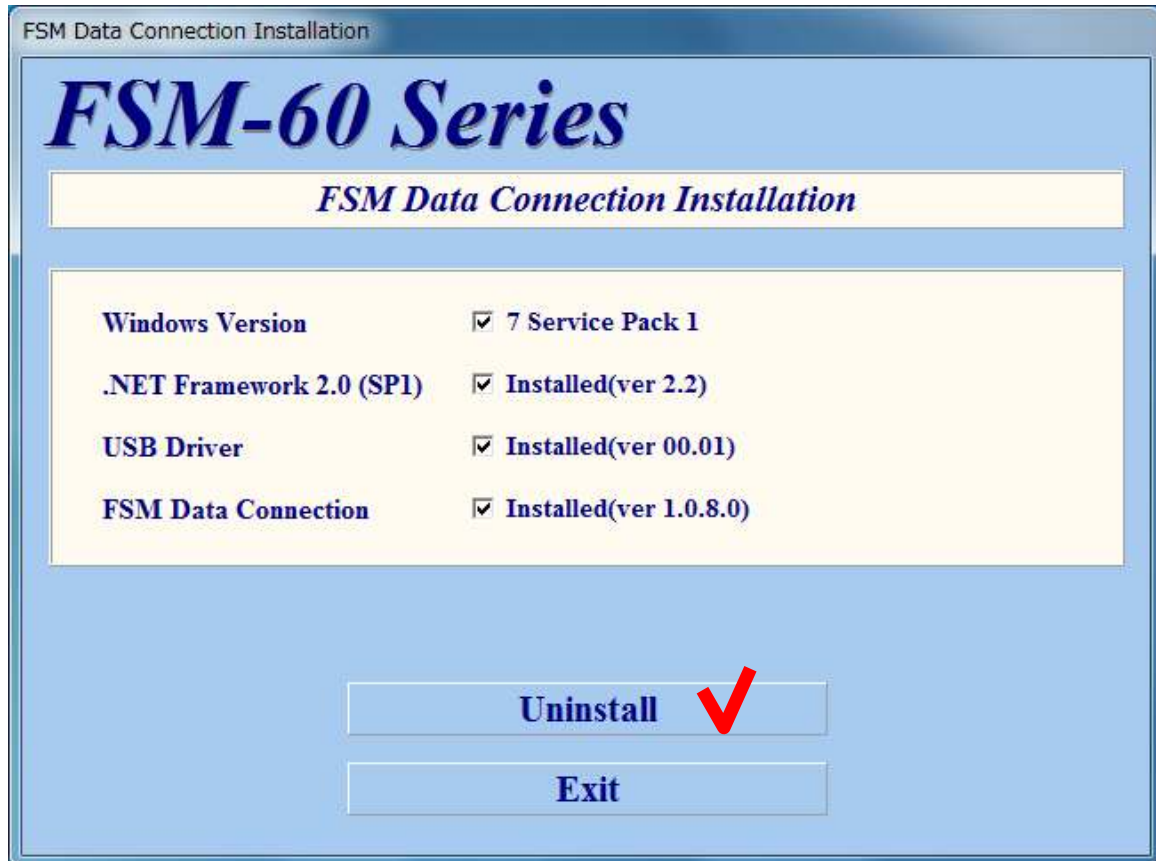


- (5) A confirmation dialog will appear. Click [OK] button to continue.

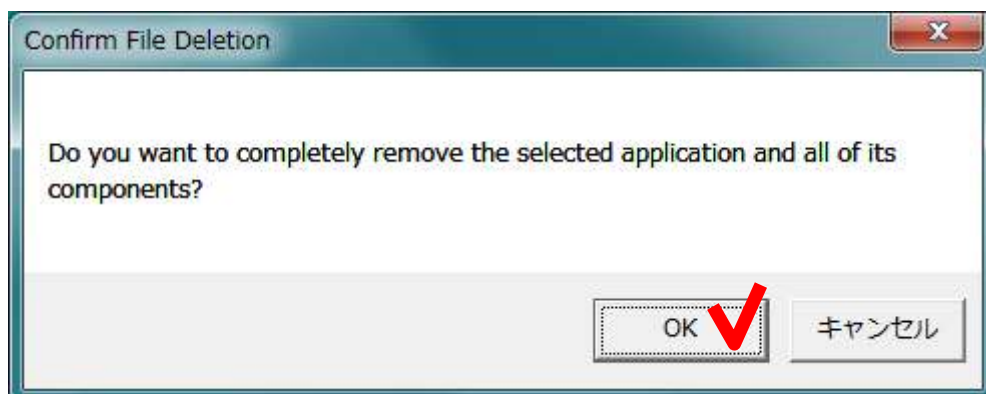

- (6) USB driver is uninstalled successfully if a window indicating “Maintenance Complete” appears.

Click [Finish] button so that main program of FSM Data Connection is uninstalled successively.

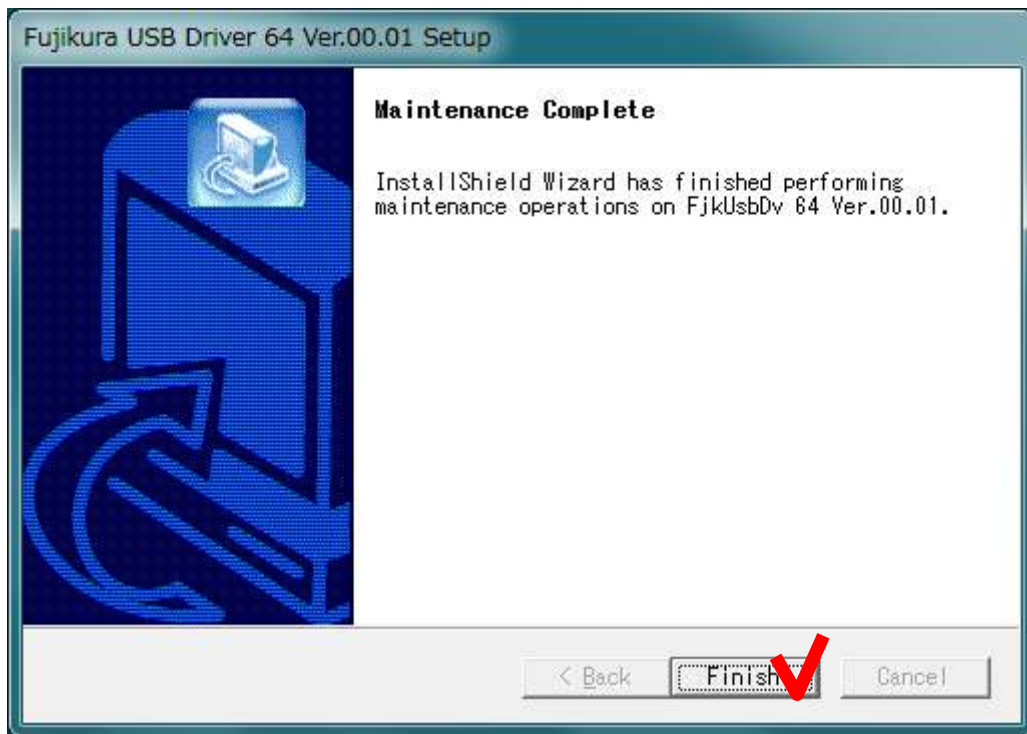

- (7) Uninstallation is completed. Click [Exit] button to finish uninstallation.



4.2 In case of 32bit system

(1) Insert the instruction CD into CD-ROM or DVD drive.

(2) After a few seconds, the instruction menu will appear.

* If the menu does not appear, double click the "fsmInstruction.exe" which is in the root of CD drive.

(3) Click [Setup FSM Data Connection] button.


Uninstaller cannot remove FSM Data Connection if the version of the installed software is old or some portion of the software has already been deleted. If a dialog of "License Agreement" appears, click [ACCEPT] to install FSMDC once. (About installation, refer to the chapter 3.)

Click [Load FSM Data Connection Software] again after installation finished.




- (4) A dialog window will appear that shows the name of running operating system and installed components.

Click [Uninstall] button.

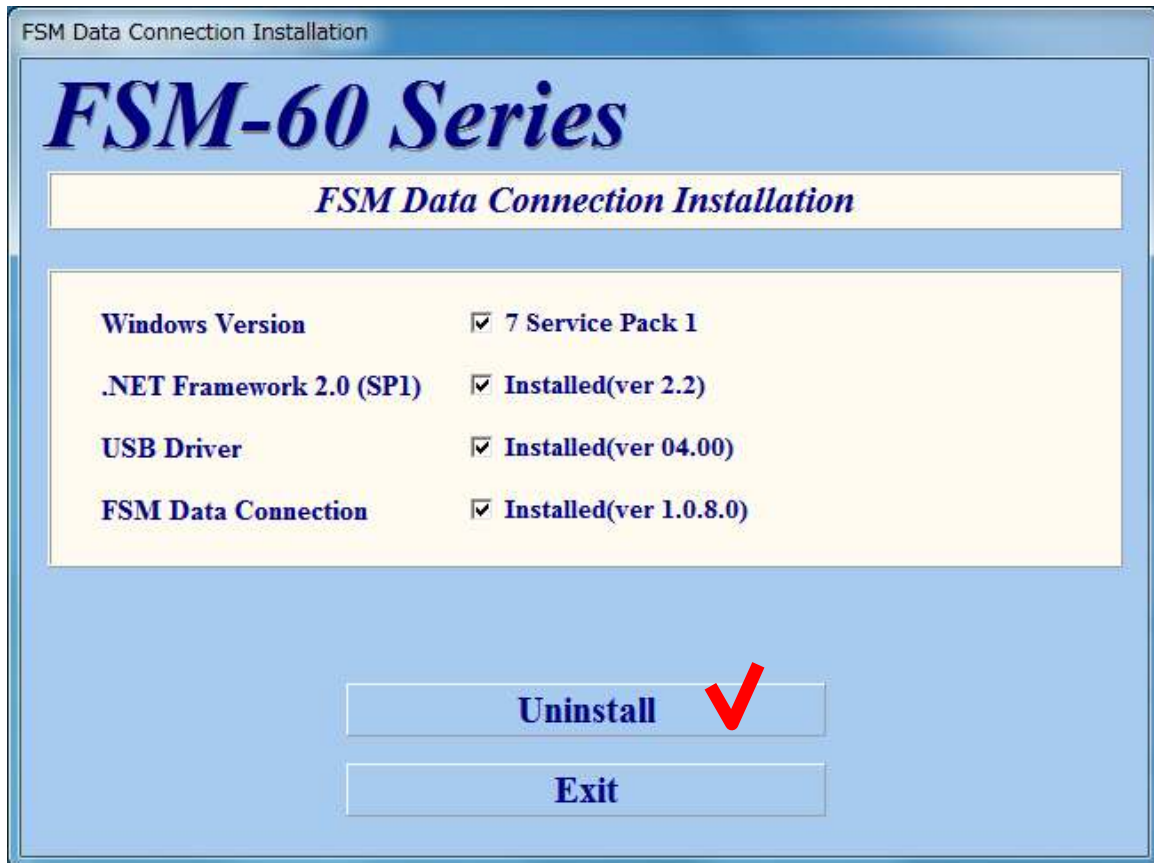


- (5) A confirmation dialog will appear. Click [OK] button to continue.

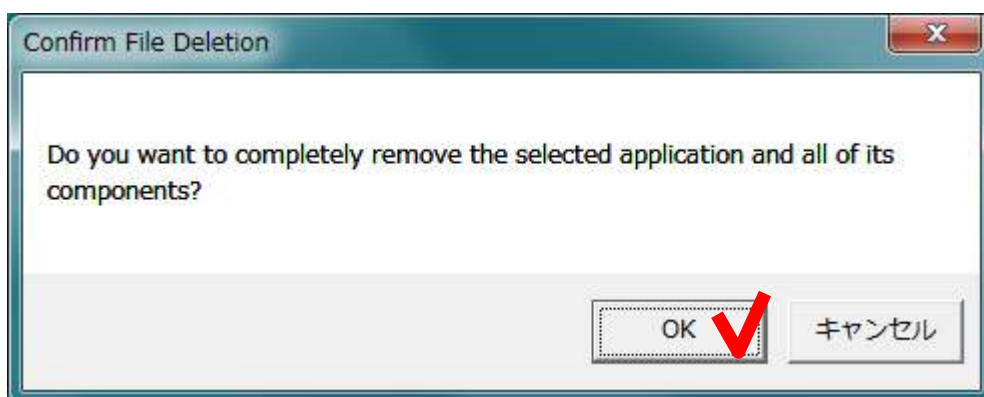

- (6) USB driver is uninstalled successfully if a window indicating “Maintenance Complete” appears.

Click [Finish] button so that main program of FSM Data Connection is uninstalled successively.

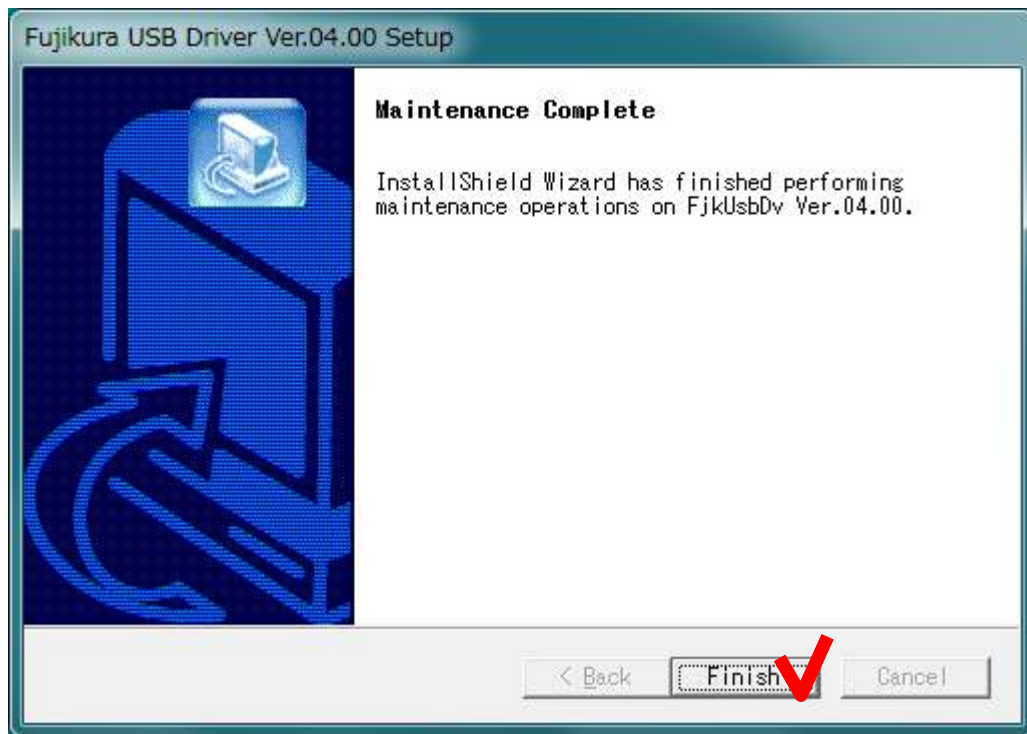

- (7) Uninstallation is completed. Click [Exit] button to finish uninstallation.



5 Contact Address

Inquiries concerning products should be made to the nearest distributor or one of the following:

Fujikura Europe Ltd.
C51 Barwell Business Park
Leatherhead Road, Chessington, Surrey KT9 2NY
England
Tel. +44-20-8240-2000 (Service: +44-20-8240-2020)
Fax. +44-20-8240-2010 (Service: +44-20-8240-2029)
URL <http://www.fujikura.co.uk>

AFL Telecommunications
260 Parkway E, Duncan, SC 29334
U.S.A.
Tel. +1-800-235-3423 (Service: +1-800-866-3602)
Fax. +1-864-433-5560 (Service: +1-800-433-5452)
P.O.Box 3127 Spartanburg, SC 29304-3127
URL <http://www.AFLtele.com>

Fujikura Asia Ltd.
460 Alexandra Road #22-01 PSA Building
Singapore 119963
Tel. +65-6-2711312 Fax. +65-6-2780965
URL <http://www.fujikura.com.sg>

Fujikura Ltd.
Optical Fiber & Equipment Department
International Sales & Marketing
1-5-1 Kiba, Koto-ku, Tokyo 135-8512
Japan
Tel. +81-3-5606-1164 Fax. +81-3-5606-1534
URL http://www.fujikura.co.jp/front_e.htm

----- End of Document -----