

Ascend

***Multiband
VSX T1***

Pipeline™, Multiband™, and Multiband Bandwidth-on-Demand™ are trademarks of Ascend Communications, Inc. Other trademarks and trade names mentioned in this publication belong to their respective owners.

Copyright © 1995 Ascend Communications, Inc.

This document contains information that is the property of Ascend Communications, Inc. This document may not be copied, reproduced, reduced to any electronic medium or machine readable form, or otherwise duplicated, and the information herein may not be used, disseminated or otherwise disclosed, except with the prior written consent of Ascend Communications, Inc.

PN 7820-0301-001

Declarations

Part 15 Warning

Warning

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case, the user will be required to correct the interference at his own expense.

Warning

To users of digital apparatus in Canada:

THE DIGITAL APPARATUS DOES NOT EXCEED THE CLASS A LIMITS FOR RADIO NOISE EMISSIONS FROM DIGITAL APPARATUS SET OUT IN THE RADIO INTERFERENCE REGULATIONS OF THE CANADIAN DEPARTMENT OF COMMUNICATION.

LE PRESENT APPAREIL NUMERIQUE N'EMET PAS DE BRUITS RADIO-ELECTRIQUES DEPASSANT LES LIMITES APPLICABLES AUX APPAREILS NUMERIQUES DE LA CLASSE A PRESCRITES DANS LE REGLEMENT SUR LE BROUILLAGE RADIOELECTRIQUE EDICTE PAR LE MINISTERE DES COMMUNICATIONS DU CANADA.

Customer Service

Customer Service

If you have questions about Ascend's Multiband VSX or desire assistance, contact Ascend Communications in one of the following ways:

- ◆ In the U.S., you can reach the Ascend Technical Assistance Center by telephone by dialing (800) ASCEND-4, that is (800) 272-3634. For the Ascend main office, dial (510) 769-6001.
- ◆ Outside the U.S., you can reach the Ascend Technical Assistance Center by telephone by dialing (510) 769-8027. For the Ascend main office, dial (510) 769-6001.
- ◆ You can send a facsimile transmission (FAX) to Ascend at (510) 814-2300.
- ◆ You can send electronic mail to Ascend at the Internet address:

`Support@Ascend.com`

- ◆ You can send written communications through U.S. Mail to Ascend at this address:

Ascend Communications, Inc.
1275 Harbor Bay Parkway
Alameda, CA 94502

Contents

	Preface	ix
	What We Cover in this Manual	ix
	What We Don't Cover in this Manual	ix
	How to Use this Manual	x
	Conventions Used in this Manual	xi
Chapter 1	Videoconferencing with the Multiband VSX	1
	Multiband VSX Features	2
	Overview of Videoconferencing	3
	Switched Digital Services and Inverse Multiplexing	4
	Advantages of the Multiband VSX	7
	Overview of Multiband VSX Call Types	7
	AIM	7
	BONDING	9
	2-Channel	9
	Suggested AIM Calls for Codecs	10
Chapter 2	Before You Connect Your Multiband VSX	11
	What You Configure on the Multiband VSX	12
	Codec Configuration Recommendations	13
	Configuration Information	14
	Configuration Records	25
Chapter 3	Connecting Your Multiband VSX	33
	What Is in Your Multiband VSX Package	34
	Back Panel of the Multiband VSX	35
	Connecting Your Multiband VSX	36
	Multiband VSX LEDs	37
	Installing the Expansion Module	38

Contents

Chapter 4	Getting Your Multiband VSX Up and Running	39
	Configuring Your Communications Program	40
	Configuring Your Multiband VSX Using a Computer	41
	Configuring for Your Telephone Lines	43
	Configuring for Your Codec	48
	Saving Your Configure Profile	49
	Testing Your Setup	49
	Configuring Your Multiband VSX Using the PalmTop Controller	53
	Configuring for Your Telephone Lines	54
	Configuring for Your Codec	57
	Saving Your Configure Profile	58
	Testing Your Setup	58
Chapter 5	User Interface	61
	Overview of the User Interface	62
	The Edit Window	63
	Status Windows	65
	Navigating Through the User Interface	66
	Getting to the Main Edit Menu in the Edit Window	66
	Choosing a Submenu from the Main Edit Menu or Another Submenu	67
	Choosing an Item from a Submenu	67
	Moving To and Between Status Windows	68
	User Interface Computer Keyboard Navigation Keystrokes	69
	User Interface PalmTop Controller Keypad Navigation Keystrokes	70
	Guide to Profiles	71
	Editing a Profile	72
	Selecting from Multiple Choices	72
	Entering Information Directly into the Field	73
	Saving Changes to a Profile	74
	Editing a Protected Profile	76
	Restarting Your Multiband VSX from the User Interface	80
	Interpreting Information in Status Windows	84
	10-100 Line Status	85
	00-200 System Events	86
	21-100 Host 1 Status	87
	22-100 Host 2 or Slave Port Status Windows	87

Chapter 6	Customizing the Directory 91
	Overview of the Directory and Call Profiles 92
	Getting to a Call Profile 93
Chapter 7	Placing and Clearing Calls 97
	Pre-Defined Call Profiles 98
	Considerations for Selecting a Call Type and Call Management Type 99
	Call Type Considerations 99
	AIM Call Management Type Considerations 100
	Placing a Call Through Your Codec 101
	Placing a Call Through the Multiband VSX 103
	Placing a Call Through the Configure Profile 103
	Placing a Call Through the Directory 107
	Placing a Call Through a Call Profile 109
	Clearing a Call 112
	Clearing a Call From Your Codec's Keypad 112
	Clearing a Call from the Multiband VSX 112
Chapter 8	Implementing Security 115
	Editing a Security Profile 116
	117
	Activating a Security Profile 118
Chapter 9	Managing Videoconference Calls 121
	Managing the Ascend Unit at the Remote Site 122
	Adjusting for Audio or Video Problems 123
	Adding Bandwidth to a Videoconference Call 125
	Subtracting Bandwidth 127
	128
Chapter 10	Advanced Configuration 129
	Overview of Advanced Configuration 130
	Getting to Advanced Configuration Parameters 131
	134
Chapter 11	Troubleshooting 135
	Problems Configuring the Multiband VSX 136
	No Profile Appears When I Start my Communications Program 136
	A Profile Appears But It Isn't the Configure Profile 138

Contents

	Test Call Failures	139
	Check Your T1 Connection	139
	Check to See if the Multiband VSX Is Talking to the Switch	140
	Check Your Cables	141
	Check To See if the Multiband VSX Can Place and Receive Calls	143
	Problems Conducting Videoconferences	143
	Audio and/or Video Distortions	143
	Remote Site Image Does Not Appear in the Video Screen	144
Chapter A	Cable Pinouts	147
	V.35 / RS-366 Cable to CLI	148
	V.35 / RS-366 Cable to PT	150
	RS-449 / RS-366 / DB-37 Cable to VTC	152
Chapter B	Uploading System Software	155
	What You Need to Upgrade System Software	155
	Upgrading System Software	156
	Activate a Security Profile that Allows for Field Upgrade	157
	Saving Your Configured Profiles	159
	Upgrading System Software	161
	Restoring your Configured Profiles	162
Chapter C	LEDs	165
Chapter D	ISDN Cause Codes	167
Chapter E	System Event Messages	171
	Index	175

Preface

Welcome to the Ascend Multiband VSX *Operations Guide*.

What We Cover in this Manual

This manual contains most of the information you need to install and configure your Multiband VSX, and use it to place and manage videoconference calls. It includes:

- ◆ An overview of videoconferencing
- ◆ An overview of configuration information and a table in which you can record your configuration
- ◆ Instructions for installing and configuring your Multiband VSX
- ◆ An overview of the user interface
- ◆ Instructions for placing and managing videoconference calls
- ◆ Instructions for customizing the directory and implementing security on the Multiband VSX
- ◆ Guidelines for diagnosing and resolving problems

Instructions are included for using the Multiband VSX when it is connected to a desktop computer as well as a PalmTop Controller.

What We Don't Cover in this Manual

This manual assumes that you know how to use your computer and are familiar with your communications software. If you have questions about using either one, refer to the manual for the product.

This manual also assumes that your T1 service provider or the service provider who installed your telephone lines can provide you with the information that is required for configuring your Multiband VSX for your T1 services.


How to Use this Manual

This manual gives you background in the basics of the videoconferencing application, then takes you step-by-step through instructions for setting up the Multiband VSX, using it to place and manage videoconference calls, and diagnosing and resolving problems you could encounter.

If you want to...	See...
Get an overview of videoconferencing	Chapter 1, "Videoconferencing with the Multiband VSX"
Install and configure the Multiband VSX	Chapter 2, "Before You Connect Your Multiband VSX" Chapter 3, "Connecting Your Multiband VSX" Chapter 4, "Getting Your Multiband VSX Up and Running"
Learn about the user interface	Chapter 5, "User Interface"
Place a videoconference call	Chapter 7, "Placing and Clearing Calls"
Manage a videoconference call	Chapter 9, "Managing Videoconference Calls"
Customize the directory	Chapter 6, "Customizing the Directory"
Implement security	Chapter 8, "Implementing Security"
Use Advanced configuration parameters	Chapter 10, "Advanced Configuration"
Diagnose and resolve problems	Chapter 11, "Troubleshooting" Appendix C, "LEDs" Appendix D, "ISDN Cause Codes" Appendix E, "System Event Messages"
See the technical specifications for cable pinouts	Appendix A, "Cable Pinouts"
Upload new a new version of the system software	Appendix B, "Uploading System Software"

Conventions Used in this Manual

This manual uses the following conventions:



The computer icon indicates instructions for using the Multiband VSX while it is connected to a desktop compute.



The PalmTop Controller icon indicates instructions for using the Multiband VSX while it is connected to a PalmTop Controller.

variables Variables are indicated by brackets [].

commands In instructions where you need to type a command, the syntax of the command is indicated by *courier* font.



When you see the instruction, "press *enter*," *enter* is either the Enter key or the Return key, depending on your keyboard.

Preface

1

Videoconferencing with the Multiband VSX

Welcome to the Multiband VSX *Operations Guide*. This chapter:

- ◆ Lists Multiband VSX features
- ◆ Provides an overview of videoconferencing
- ◆ Describes the advantages of using the Multiband VSX
- ◆ Provides an overview of call types available on the Multiband VSX
- ◆ Recommends AIM Calls for certain codecs

Multiband VSX Features

The Multiband VSX is Ascend's low-cost inverse multiplexer designed for videoconferencing. Its modular design comprises a base unit with one primary T1/PRI port, and an easy-to-install Expansion Module that provides T1 Drop-and-Insert capability. You can order the unit with the Expansion Module installed, or add it later as your requirements grow.

The Multiband VSX includes the following features:

- ◆ It supports videoconference speeds ranging from 112 kbits up to a full T1
- ◆ It implements Ascend Inverse Multiplexing (AIM) as well as BONDING protocols
- ◆ It can manage or be managed by an Ascend unit at a remote site
- ◆ It is software upgradable to accommodate added features
- ◆ With the Expansion Module installed, voice traffic destined for and originating from your PBX can be transmitted over the same T1 as your video traffic


Overview of Videoconferencing

A videoconference comprises three components:

- ◆ A videoconferencing system at each site
- ◆ A network that can accommodate the bandwidth requirements of a videoconference call
- ◆ A communication device (or devices) at each site that provides access to the network

Figure 1-1 illustrates the three components of a videoconference, using the Multiband VSX as the communication device and T1 or ISDN PRI services as the network service.

Figure 1-1: Videoconferencing Components

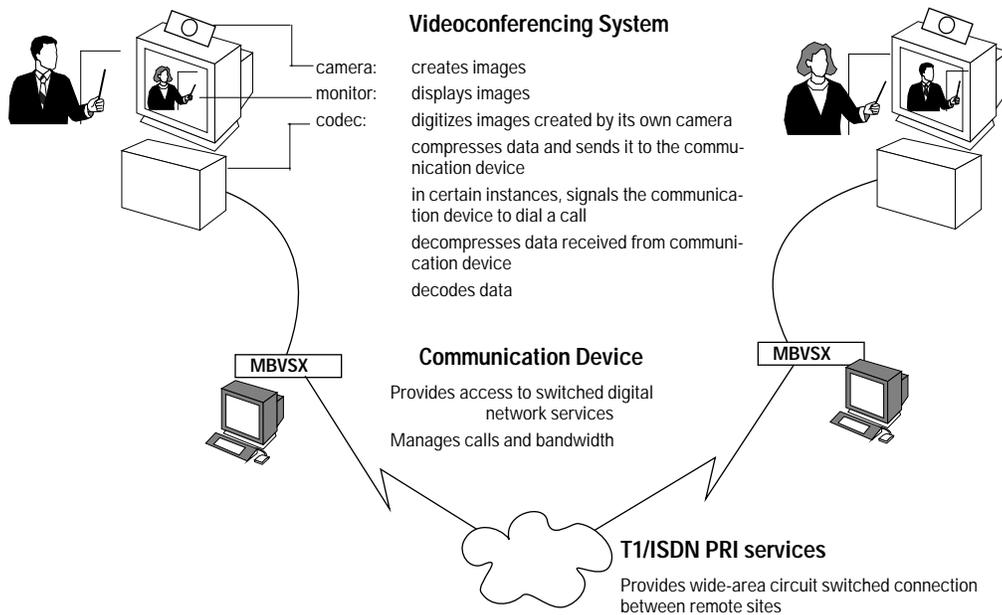

The high bandwidth requirements of early videoconferencing systems limited video teleconferencing to sites connected via leased lines. Three developments have made videoconferencing a more viable and affordable method of teleconferencing:

- ◆ Improved compression techniques in videoconferencing systems have reduced their bandwidth requirements
- ◆ The proliferation of affordable switched digital services, both Switched 56 and Integrated Services Digital Network (ISDN), has provided a more flexible and cost-effective means for transmitting calls
- ◆ The development of inverse multiplexers, communication devices that aggregate the bandwidth available on multiple channels or lines to provide a connection bandwidth equal to the sum of the combined channels, has provided a way to maximize the bandwidth available on switched digital services

Switched Digital Services and Inverse Multiplexing

Switched digital services provide a cost-effective means for the transient and flexible bandwidth requirements of data communications. Inverse multiplexing provides a way to aggregate switched digital bandwidth as needed to create a single connection equal to the sum of available channels.

112K to 128K Videoconference Calls (2-channel)


Switched 56K services were the first switched digital services used for videoconferencing. Users could achieve 112kpbs of bandwidth by aggregating two 56 kbps calls. Each port on a codec sent data to a data service unit (DSU) which then placed a call over the network.

As ISDN became available, users could achieve 128kbps of bandwidth by installing ISDN lines and replacing the DSUs with an ISDN terminal adapter (TA). The TA could access ISDN, thus providing for two 64kbps connections using the two B channels.


Figure 1-2 illustrates the two types of scenarios that require videoconferencing at rates of 112kbps to 128kbps.

Figure 1-2: 2-Channel Videoconferencing Scenarios

Using two Switched 56 calls for an aggregated 112 kbps:

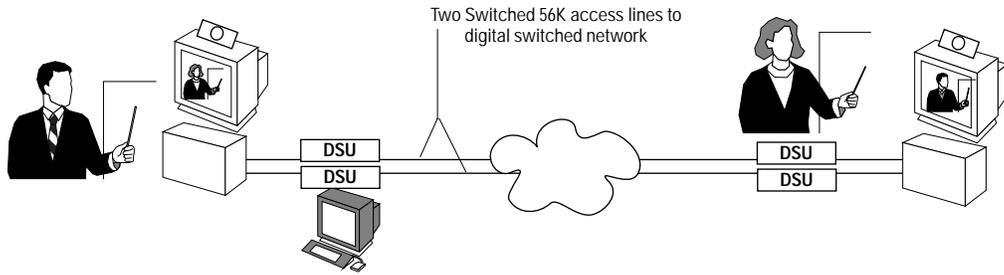

Using two ISDN B channels to aggregate 112-128kbps:

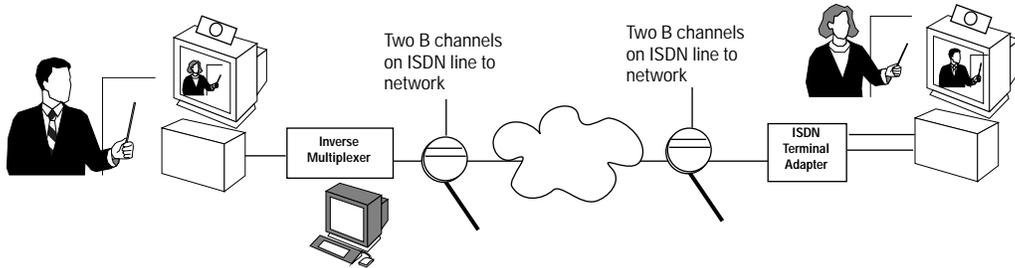

Inverse Multiplexed Calls


Inverse multiplexers, which replace the TAs as communication devices, combine individual switched connections at 56kbps to 64kbps to provide a single connection equal to the sum of all the individual switched connections. Inverse multiplexers provide for videoconferencing at data rates higher than 112kbps to 128kbps.

Ascend Inverse Multiplexing (AIM), a proprietary inverse multiplexing protocol, is implemented on all Ascend inverse multiplexing units. In addition to providing for higher data rates, the AIM protocol offers three ways to manage your calls.

BONDING is another inverse multiplexing protocol. It is implemented on many other vendor's products and is compatible with all Ascend units.

Figure 1-3 illustrates a scenario that can videoconference at data rates higher than 128kbps.

Figure 1-3: Videoconferencing at Data Rates Higher than 128 kbps

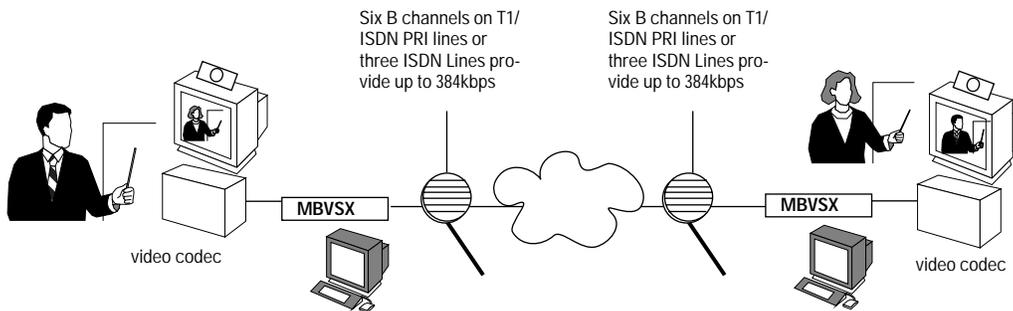

Advantages of the Multiband VSX

As videoconferencing and switched digital technology have advanced, Ascend products have kept pace with these improvements, allowing you to take advantage of new capabilities as well as connect with sites that use older technologies.

The Multiband VSX supports 2-channel calls to sites that are restricted to two channels (112kbps to 128 kbps) and AIM or BONDING (inverse multiplexing call types) to sites that have the capacity to videoconference at a higher data rate.

Overview of Multiband VSX Call Types

The three basic videoconference call types supported by the Multiband VSX are:

- ◆ AIM
- ◆ BONDING
- ◆ 2-Channel

The type of call you place depends on the videoconference configuration at your site as well as the remote site. Table 1-1 on page 10 lists call-type recommendations for selected codecs.

Chapter 7, "Placing and Clearing Calls," contains more guidelines for selecting a call type and, if you choose AIM, the management type you want to use.

The following sections describe the types of calls available on the Multiband VSX.

AIM

AIM is a proprietary inverse multiplexing protocol available on all Ascend units that perform inverse multiplexing. It provides for three call management types:

AIM Manual

AIM Manual is the most robust and feature rich of the three AIM call management types supported. The Multiband VSX performs inverse multiplexing and provides an end-to-end management channel for remote management, bandwidth management, and detection and correction of network slips, which requires 0.2% of the bandwidth.

Codecs that require an exact clocking rate, (that is, they expect to exchange data with the Multiband VSX at the same rate at which data is transferred over the communication's link) cannot spare the 0.2% bandwidth required by the Multiband VSX for this type of call.

AIM Static

When you place an AIM Static call, the Multiband VSX performs inverse multiplexing, but does not provide for an end-to-end management channel. Though you cannot remotely manage another unit or manage bandwidth, the video codec can take advantage of the complete aggregated bandwidth.

AIM Delta

AIM Delta mode provides the error control and monitoring capabilities of AIM Manual, and provides the codec with an exact clocking rate.

It provides this by placing the number of 56kbps calls necessary to aggregate bandwidth equal to a specified number of 64kbps calls, then using the extra bandwidth for management control and error monitoring.

For example, if the codec requires 384 kbps of bandwidth (an aggregate of six 64kbps channels), the Multiband VSX places seven 56kbps calls for an aggregate of 392kbps ($7 \times 56 = 392$). The codec uses 384 kbps of the bandwidth; the Multiband VSX uses the remaining 8kbps for management control and error monitoring.

AIM Delta calls do not allow you to control bandwidth, and they are more costly than AIM Manual or AIM Static calls because they require that more calls be placed than are actually required for the videoconference.

BONDING

BONDING is an inverse multiplexing protocol that is provided for compatibility with other vendor's equipment. Two BONDING management types are supported on the Multiband VSX:

BONDING Mode 0

BONDING Mode 0 calls are similar to 2-channel calls. This protocol can be used when the device on the far end is connected in dual port mode to a video codec however, 2-channel call type is recommended.

BONDING Mode 1

BONDING Mode 1 calls are similar to AIM static calls; the Multiband VSX performs inverse multiplexing, but does not provide an end-to-end management channel.

2-Channel

Two-channel calls, also known as dual port calls, use two switched channels to connect two ports of a single device to the remote site. The codec performs inverse multiplexing in this case.

Suggested AIM Calls for Codecs

The following table lists a few popular codecs and makes suggestions for the type of AIM call that works best with each:

Table 1-1: Suggested AIM Calls for Codecs

Codec	Recommended AIM Call
CLI	AIM Manual
GPT/BT	AIM Static
Mitsubishi	AIM Static
PictureTel 1000	AIM Static or Manual
PictureTel 3000	AIM Manual
PictureTel 4000	AIM Manual
VTel	AIM Manual

2

Before You Connect Your Multiband VSX

You should already have your T1 line installed at your site. Once you install your Multiband VSX, you need to configure it for your telephone line and your codec. This chapter provides:

- ◆ A description of what you need to configure on your Multiband VSX upon initial installation at your site
- ◆ A table that lists all configuration parameters and describes options available in each
- ◆ A table in which you can record your configuration requirements

What You Configure on the Multiband VSX

On installation, you configure the Multiband VSX for the following:

- ◆ Compatibility with your T1 line
- ◆ Compatibility with your codec

The Configure profile, illustrated below, provides you a convenient way to set up the Multiband VSX. It is displayed by the system software any time you power up the Multiband VSX, and is always accessible through the Main Edit Menu. (See Chapter 5, "User Interface," for information about the Main Edit Menu.)

```
BRANCH EDIT EDIT
Configure
My Name=Branch Edit
>2nd Line=D&I
Line 1...
Line 2...
Dial #=4155552222
Call-by-Call=N/A
PRI # Type=N/A
Data Svc=56K
Call Type=2 Chn1
Call Mgm=N/A
Dial=Terminal
Answer=Auto
Clear=DTR Inactive
Early CD=Both
Advanced...
Save=*
```

Recommendations for codec configuration values are contained in Table 2-1 and Table 2-2.

Table 2-3 on page 15 contains all the parameters listed on the Configure profile as well as descriptions for options available in each field. Once you have determined which values you want to use to configure your Multiband VSX, enter them in the Configuration Records Tables (beginning on page 25 so you have the information in a convenient place for future reference.

Codec Configuration Recommendations

You can configure your Multiband VSX so that you can dial videoconference calls through both the Multiband VSX and the codec, or restrict dialing of videoconference calls to the Multiband VSX.

The following tables list configuration values for both dialing modes. Table 2-1 lists the values you should enter if you want to allow videoconference calls to be dialed through the codec as well as the Multiband VSX; Table 2-2 lists the values you should enter if you want to restrict the dialing of videoconference calls to the Multiband VSX.

Once you have determined how you want to set-up the Multiband VSX for dialing videoconference calls, record the information in the table on page 25.

Table 2-1 Configuration Values for Codec-Controllable Dialing

Codec Type	Dial	Answer	Clear	Early CD
PictureTel	RS-366	Auto	DTR Inactive	None
	X.21	X.21	DTR Inactive	None
CLI	RS-366	Auto	DTR Inactive	Both
VTel	RS-366	DTR+Ring	DTR Inactive	None
	V.25 bis	V.25 bis	DTR Inactive	None
GPT/BT	RS-366	Auto	DTR Inactive	None

Table 2-2 Configuration Values for Codec-Restricted Dialing (Dialing restricted to Multiband VSX)

Codec Type	Dial	Answer	Clear	Early CD
PictureTel	Terminal	Auto	Terminal	None
CLI	Terminal	Auto	Terminal	None
VTel	Terminal	DTR+Ring	Terminal	None
GPT/BT	Terminal	Auto	Terminal	None

Configuration Information

The information you need to configure your Multiband VSX is described in Table 2-3. Configuration instructions are contained in Chapter 4, “Getting Your Multiband VSX Up and Running.”

For your convenience, tables in which you can record your configuration information are provided beginning on page 25. Complete the table and refer to it when you configure the Multiband VSX.

Table 2-3 list all the parameters on the Configure profile and describes all options available for each parameter. Parameters identified with italicized type face (for example, *Line 2*) are only valid if you have the Expansion Module installed).

Table 2-3 Configure Profile

My Name	The name you assign to your Multiband VSX. If the communication device at the remote site is a Multiband, it displays this name during the videoconference call.	
2nd Line	<p>This parameter only appears on the Configure profile if you have the Expansion Module installed. It tells the Multiband VSX how the T1 line handles voice traffic between it and a PBX.</p> <p>Disabled if you do <i>not</i> have the Expansion Module installed.</p> <p>D&I (drop and insert) if some channels of this line are passed on to your PBX.</p> <p>PBX-T1 if the signals on your PRI line need to be converted to inband signals for your PBX.</p>	
Line 1	Sig Mode	<p>Refers to signalling used by your T1 line. Options are:</p> <p>Inband (T1 Robbed-bit)</p> <p>ISDN (D-channel signaling)</p>
	Switch Type	<p>Refers to the central office switch used by your ISDN service provider. Options are:</p> <p>AT&T</p> <p>NT1</p> <p>NI-2</p> <p>[Country name]</p> <p>N/A if you selected Inband in the Sig Mode field.</p>
Line 1 (cont'd)	Rob Ctl	<p>Refers to the call control mechanism the Multiband VSX uses when your T1 service uses Inband signalling. Options are:</p> <p>Wink-Start if a wink acknowledgment is required for outgoing calls.</p> <p>Idle Start if no wink acknowledgment is required.</p> <p>Inc-W-200 if a wink acknowledgment is required for outgoing and incoming calls (Multiband VSX transmits a 200 msec wink for incoming calls).</p> <p>Inc-W-400 if a wink acknowledgment is required for outgoing and incoming calls (Multiband VSX transmits a 400 msec wink for incoming calls).</p> <p>N/A if Sig Mode is set to ISDN.</p>

Before You Connect Your Multiband VSX

Table 2-3 Configure Profile (Continued)

	Framing Mode	Refers to the framing mode required with your T1 line. Options are: D4 (Superframe format) (default) ESF (Extended Superframe format)
	Encoding	Refers to the line encoding required with your line. Options are: AMI (Alternate Mark Inversion) (default) B8Zs (Bipolar with 8-Zero Substitution) None
	FDL	Refers to the facilities data link (FDL) protocol used by your carrier. Options are: None (default) Sprint ANSI AT&T N/A if you selected D4 in the Framing Mode field.
Line 1 (cont'd)	Length	Refers to the T1 line length. If your Multiband VSX is a DSX model, lets you specify the length of the T1 cable that connects to the CSU. Options are: 1-133 ft (default) 134-266 ft 267-399 ft 400-533 ft 534-655 ft N/A appears in this field if your Multiband VSX is a DSX model.
	Buildout	Refers to the attenuation required by your network interface. Options are: 0 dB 7.5 dB 15 dB 22.5 dB

Table 2-3 Configure Profile (Continued)

	Clock Source	Specifies whether you want the signal received from the T1 line to be the synchronous timing source for the WAN and serial host interfaces. Options are: Yes (default) if you want the T1/PRI line to provide the source. No if you do not want the T1/PRI to provide the source.
	Ch 1...24	Specifies how this channel is used. Options are: Switched if this channel is used for switched connectivity. If you enter Switched in this field, you must enter a telephone number in the corresponding Ch# field. D&I if you select D&I in the 2nd Line field <i>and</i> this channel is passed through the Multiband VSX to another device. Unused if this channel is unused.
	Ch1#...Ch24#	If the channel is used for switched connectivity, enter the phone number assigned to the channel.
Line 2	<i>Rob Ctl</i>	Refers to the call control mechanism the Multiband VSX uses when your T1 service uses Inband signalling. Options are: Wink-Start if a wink acknowledgment is required for outgoing calls. Idle Start if no wink acknowledgment is required. Inc-W-200 if a wink acknowledgment is required for outgoing and incoming calls (Multiband VSX transmits a 200 msec wink for incoming calls) Inc-W-400 if a wink acknowledgment is required for outgoing and incoming calls (Multiband VSX transmits a 400 msec wink for incoming calls) N/A if Sig Mode is set to ISDN.
	<i>Framing Mode</i>	Refers to the framing mode required with your T1 line. Options are: D4 (Superframe format) (default) ESF (Extended Superframe format)

Before You Connect Your Multiband VSX

Table 2-3 Configure Profile (Continued)

	<i>Encoding</i>	Refers to the line encoding required with your line. Options are: AMI (Alternate Mark Inversion) (default) B8Zs (Bipolar with 8-Zero Substitution) None
	<i>FDL</i>	Refers to the facilities data link (FDL) protocol used by your carrier. Options are: None (default) AT&T ANSI Sprint N/A if you selected D&I in the 2nd Line field.
<i>Line 2 (cont'd)</i>	<i>Length</i>	Refers to the length of the cable that connects the Multiband VSX to the CSU. Options are: 1-133 ft (default) 134-266 ft 267-399 ft 400-533 ft 534-655 ft N/A appears in this field if your Multiband VSX is a DSX model.
	<i>Buildout</i>	Refers to the attenuation required by your network interface. Options are: 0 dB 7.5 dB 15 dB 22.5 dB

Table 2-3 Configure Profile (Continued)

	<p><i>Pbx Type</i></p>	<p>Refers to the signaling conversion the Multiband VSX provides when 2nd Line is set to PBX-T1. Options are:</p> <p>Voice (default) if you want the Multiband VSX to forward only voice calls to the PBX.</p> <p>Data if you want the Multiband VSX to forward calls that match the telephone number designated in the Ans# field or the service specified in the Ans Service field.</p> <p>Leased 1:1 if you want the Multiband VSX to map calls coming in on Line 1 PRI channels to the corresponding channels on Line 2.</p> <p>N/A if you selected D&I in the 2nd Line field.</p>
	<p><i>Delete Digits</i></p>	<p>Refers to the number of left-most digits the Multiband VSX deletes when it dials a call. N/A in the following circumstances:</p> <ul style="list-style-type: none"> ■ 2nd Line is set to Disabled or D&I. ■ Pbx Type is set to Leased 1:1.
<p>Line 2 (cont'd)</p>	<p><i>Add Number</i></p>	<p>Refers to the digits the Multiband VSX adds to the front of the dial string it gets from the PBX.</p> <p>The number of digits you enter in this field must be equal to the value you enter in the Delete Digits field.</p> <p>N/A in the following circumstances:</p> <ul style="list-style-type: none"> ■ 2nd Line is set to Disabled or D&I. ■ Pbx Type is set to Leased 1:1.
	<p><i>Call-by-Call</i></p>	<p>Refers to the Call -by-Call value on Line 2. This value is provided by your ISDN service provider.</p> <p>6 is the default. Any number between 0 and 31 is valid.</p> <p>N/A in the following circumstances:</p> <ul style="list-style-type: none"> ■ 2nd Line is set to Disabled or D&I. ■ Pbx Type is set to Leased 1:1.

Before You Connect Your Multiband VSX

Table 2-3 Configure Profile (Continued)

	<i>Ans #</i>	<p>If 2nd Line is set to PBX-T1, specifies the telephone number you want the Multiband VSX to forward to Line 2.</p> <p>If this field is left blank and Ans Service is set to None, the Multiband VSX will <i>not</i> forward any calls to Line 2.</p> <p>N/A in the following circumstances:</p> <ul style="list-style-type: none"> ■ 2nd Line is set to Disabled or D&I. ■ Pbx Type is set to Leased 1:1.
	<i>Ans Service</i>	<p>Specifies the type of calls you want the Multiband VSX to forward to Line 2. If you leave Ans # field empty, you must select an option other than None in this field if you want calls forwarded from Line 1 to Line 2.</p> <p>Options are:</p> <p>Voice (Default) if PBX type is set to voice.</p> <p>56K</p> <p>56KR</p> <p>None</p>
Line 2 (cont'd)	<i>Chn 1...24</i>	<p>Specifies how channels associated with this line are used. Options are:</p> <p>Switched</p> <p>Unused</p> <p>N/A if 2nd Line is set to Disabled.</p>
Dial#		<p>Refers to the phone number you want the Multiband VSX to call to place a videoconference call. This field is not required for configuring your Multiband VSX for operation, but is required for placing a call through the Configure profile (See Chapter 7, "Placing and Clearing Calls," for more details).</p>
Call-By-Call		<p>Refers to the Call-by-Call value line 1. This value is provided by your ISDN service provider. This field is not required for configuring your Multiband VSX for operation, but is required for placing a call through the Configure profile (See Chapter 7, "Placing and Clearing Calls," for more details).</p> <p>6 is the default. Any number between 0 and 31 is valid.</p> <p>N/A appears if Sig Mode is set to D&I.</p>

Table 2-3 Configure Profile (Continued)

<p>PRI# Type</p>	<p>Refers to how the Multiband VSX should format ISDN PRI calls. This field is not required for configuring your Multiband VSX for operation, but is required for placing a call through the Configure profile (See Chapter 7, "Placing and Clearing Calls," for more details).</p> <p>Options are:</p> <p>Unknown if you do not know the format of the call.</p> <p>Intl if you are located in the U.S. or Canada and placing a phone call to another country</p> <p>National if you are in the U.S. or Canada and placing a phone call within the U.S. or Canada</p> <p>Local if you are placing a call within your Centrex group.</p> <p>Abbrev</p> <p>N/A if Inband appears in the Sig Mode field.</p>
<p>Data Svc</p>	<p>Refers to the type of carrier service requested for a call. This field is not required for configuring your Multiband VSX for operation, but is required for placing a call through the Configure profile (See Chapter 7, "Placing and Clearing Calls," for more details).</p> <p>Options are:</p> <p>56KR (default) if your local phone company and the complete path to the remote site supports 56kbps. Same as 56K.</p> <p>Voice if you are sending data over the voice network.</p> <p>56K if your local phone company and the complete path to the remote site supports 56kbps service only.</p> <p>64K if your local phone company and the complete path supports 64kbps.</p>
<p>Call Type</p>	<p>Refers to the type of call you want to place. This field is not required for configuring your Multiband VSX, but is required for placing a call. See Chapter 7, "Placing and Clearing Calls," for recommendations for selecting a call type.</p> <p>Options are:</p> <p>1 Chnl</p> <p>2 Chnl</p> <p>AIM</p> <p>BONDING</p>

Before You Connect Your Multiband VSX

Table 2-3 Configure Profile (Continued)

Call Mgm	<p>Refers to the call management protocol you want to use for your videoconference call. This field is not required for configuring your Multiband VSX, but is required for placing a call through the Configure profile.</p> <p>Options are:</p> <p>Manual if you selected AIM in the Call Type field.</p> <p>Delta if you selected AIM in the Call Type field.</p> <p>Static if you selected AIM in the Call Type field.</p> <p>Mode 0 if you selected BONDING in the Call Type field.</p> <p>Mode 1 if you selected BONDING in the Call Type field.</p> <p>N/A if you selected 1 Chnl or 2 Chnl in the Call Type field.</p>
Dial	<p>Refers to how you want to control dialing: all dialing through the codec as well as the Multiband VSX, or restrict control of dialing to the Multiband VSX. The codec-controllable option you select depends on your codec type. See Table 2-1 and Table 2-2 for recommendations.</p> <p>Options are:</p> <p>Terminal if you want to restrict the placing of calls to dialing through the Multiband VSX user interface.</p> <p>RS-366 if you want to allow calls to be placed by dialing through either your codec or the Multiband VSX user interface <i>and</i> your codec supports the RS-366 dialing protocol. Most codecs purchased for use in North America support this protocol.</p> <p>X.21 if you want to allow calls to be placed by dialing through either your codec or the Multiband VSX user interface <i>and</i> your codec supports the X.21 dialing protocol. Most codecs purchased for use in Europe support this option.</p> <p>V.25 bis if you want to allow calls to be placed by dialing through either your codec or the Multiband VSX user interface <i>and</i> your codec supports the V.25 bis dialing protocol. Older model codecs (some V-Tel codecs, for example) support this protocol.</p>

Table 2-3 Configure Profile (Continued)

Answer	<p>Refers to how videoconference calls are answered. Options are as follows:</p> <p>Auto if you do <i>not</i> want to manually answer videoconference calls. If you choose this option, the Multiband VSX answers the call and automatically passes it to the codec.</p> <p>DTR+Ring if you want to answer videoconference calls manually from the codec keypad. If you choose this option, the Multiband VSX signals the codec when it answers a call, then waits for a DTR signal before it passes the call to the codec.</p> <p>None if you don't want to answer any videoconference calls. Choosing this option is equivalent to turning off the ringer on your telephone.</p>
Clear	<p>Specifies how videoconferencing calls are cleared. Options are as follows:</p> <p>Terminal if you want to clear calls only through the Multiband VSX user interface. If you choose this option, you cannot clear calls through your codec.</p> <p>DTR Inactive if you want to allow the clearing of calls through the codec's keypad.</p>
Early CD	<p>Tells the Multiband VSX whether it should activate carrier detect early (after the first channel of a multiple channel call is connected), or wait until all channels are connected. If you want to activate carrier detect early, this parameter lets you determine whether it should be activated early for incoming calls, outgoing calls, or both. Options are:</p> <p>None (Do not activate carrier detect early. This is the default.)</p> <p>Originate (Activate carrier detect early for outgoing calls.)</p> <p>Answer (Activate carrier detect early for incoming calls.)</p> <p>Both (Activate carrier detect early for both incoming and outgoing calls.)</p>
Advanced	<p>See Chapter 10 for detailed information about parameters in this field.</p>

Configuration Records

The Configuration Records below and on the following pages provide you a convenient way to plan for and record your configuration information for future reference. It only lists those parameters that are required to get your Multiband VSX up and running. Instructions for configuring your Multiband VSX are contained in Chapter 4, "Getting Your Multiband VSX Up and Running."

Table 2-4 Configuration Record

My Name			
2nd Line	<input type="checkbox"/> D&I	<input type="checkbox"/> PBX-T1	<input type="checkbox"/> Disabled
Line 1	Sig Mode	<input type="checkbox"/> Inband	<input type="checkbox"/> ISDN
	Switch Type	<input type="checkbox"/> AT&T <input type="checkbox"/> Country _____	<input type="checkbox"/> NTI <input type="checkbox"/> NI-1
	Rob Ctl	<input type="checkbox"/> Wink-Start <input type="checkbox"/> Inc-W-400	<input type="checkbox"/> Idle Start <input type="checkbox"/> N/A <input type="checkbox"/> Inc-W-200
	Framing Mode	<input type="checkbox"/> D4	<input type="checkbox"/> ESF
	Encoding	<input type="checkbox"/> AMI	<input type="checkbox"/> B8Zs <input type="checkbox"/> None
	FDL	<input type="checkbox"/> None <input type="checkbox"/> AT&T	<input type="checkbox"/> Sprint <input type="checkbox"/> N/A <input type="checkbox"/> ANSI
	Length	<input type="checkbox"/> 1-133 ft <input type="checkbox"/> 400-533 ft	<input type="checkbox"/> 134-266 ft <input type="checkbox"/> 534-655 ft <input type="checkbox"/> 267-399 ft <input type="checkbox"/> N/A
	Buildout	<input type="checkbox"/> 0 dB <input type="checkbox"/> 22.5 dB	<input type="checkbox"/> 7.5 dB <input type="checkbox"/> 15 dB
	Clock Source	<input type="checkbox"/> Yes	<input type="checkbox"/> No
	Chan 1...24	See Line 1 Chan Usage Table on page 27	
Ch1#...Ch24#	See Line 1 Chan # Table on page 29		

Table 2-4 Configuration Record (Continued)

<i>Line 2</i>	<i>Rob Ctrl</i>	<input type="checkbox"/> Wink-Start <input type="checkbox"/> Inc-W-400	<input type="checkbox"/> Idle Start <input type="checkbox"/> N/A	<input type="checkbox"/> Inc-W-200
	<i>Framing Mode</i>	<input type="checkbox"/> D4	<input type="checkbox"/> ESF	
	<i>Encoding</i>	<input type="checkbox"/> AMI	<input type="checkbox"/> B8Zs	<input type="checkbox"/> None
	<i>FDL</i>	<input type="checkbox"/> None <input type="checkbox"/> AT&T	<input type="checkbox"/> Sprint <input type="checkbox"/> N/A	<input type="checkbox"/> ANSI
	<i>Length</i>	<input type="checkbox"/> 1-133 ft <input type="checkbox"/> 400-533 ft	<input type="checkbox"/> 134-266 ft <input type="checkbox"/> 534-655 ft	<input type="checkbox"/> 267-399 ft <input type="checkbox"/> N/A
	<i>Buildout</i>	<input type="checkbox"/> 0 dB <input type="checkbox"/> 22.5 dB	<input type="checkbox"/> 7.5 dB	<input type="checkbox"/> 15 dB
	<i>Pbx Type</i>	<input type="checkbox"/> Voice <input type="checkbox"/> N/A	<input type="checkbox"/> Data	<input type="checkbox"/> Leased 1:1
	<i>Delete Digits</i>			
	<i>Add Number</i>			
	<i>Call-by-Call</i>			
	<i>Ans #</i>			
	<i>Ans Service</i>	<input type="checkbox"/> Voice <input type="checkbox"/> None	<input type="checkbox"/> 56K	<input type="checkbox"/> 56KR
<i>Ch 1...24</i>	See Line 2 Chan Usage Table on page 31			
<i>Dial</i>	<input type="checkbox"/> Terminal	<input type="checkbox"/> RS-366	<input type="checkbox"/> X.21	<input type="checkbox"/> V.25 bis
<i>Answer</i>	<input type="checkbox"/> Auto	<input type="checkbox"/> DTR+Ring	<input type="checkbox"/> None	
<i>Clear</i>	<input type="checkbox"/> Terminal	<input type="checkbox"/> DTR Inactive		
<i>Early CD</i>	<input type="checkbox"/> None	<input type="checkbox"/> Originate	<input type="checkbox"/> Answer	<input type="checkbox"/> Both

Before You Connect Your Multiband VSX

Table 2-5 Line 1 Channel Usage

Channel 1	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 2	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 3	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 4	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 5	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 6	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 7	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 8	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 9	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 10	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 11	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 12	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 13	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 14	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 15	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 16	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 17	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 18	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A

Channel 19	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
------------	-----------------------------------	---------------------------------	------------------------------

Table 2-5 Line 1 Channel Usage (Continued)

Channel 20	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 21	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 22	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 23	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 24	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A

Before You Connect Your Multiband VSX

Table 2-6 Line 1 Channel #

Channel 1#	
Channel 2#	
Channel 3	
Channel 4#	
Channel 5#	
Channel 6#	
Channel 7#	
Channel 8#	
Channel 9#	
Channel 10#	
Channel 11#	
Channel 12#	
Channel 13#	
Channel 14#	

Table 2-6 Line 1 Channel # (Continued)

Channel 15#	
Channel 16#	
Channel 17#	
Channel 18#	
Channel 19#	
Channel 20#	
Channel 21#	
Channel 22#	
Channel 23#	
Channel 24#	

Before You Connect Your Multiband VSX

Table 2-7 Line 2 Channel Usage

Channel 1	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 2	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 3	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 4	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 5	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 6	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 7	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 8	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 9	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 10	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 11	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 12	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 13	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 14	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 15	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 16	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 17	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 18	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A

Table 2-7 Line 2 Channel Usage (Continued)

Channel 19	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 20	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 21	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 22	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 23	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A
Channel 24	<input type="checkbox"/> Switched	<input type="checkbox"/> Unused	<input type="checkbox"/> N/A

Before You Connect Your Multiband VSX

3

Connecting Your Multiband VSX

You should already have ordered your T1 service and had the lines installed at your site.

This chapter:

- ◆ Describes what is in your Multiband VSX package
- ◆ Describes how to connect your Multiband VSX to your codec, computer, and telephone line or lines
- ◆ Describes the LEDs on the front panel
- ◆ Describes how to install the Multiband VSX Expansion Module

What Is in Your Multiband VSX Package

The following are packaged with your Multiband VSX:

- ◆ The Multiband VSX base unit
- ◆ If you ordered the Multiband VSX with the Expansion Module, it is installed on the base unit
- ◆ Cables:
 - ◇ 2 DB9-DB25 converter cables (part number 2510-0052-002)
 - ◇ 1 to 4 RJ48C Straight Through C cables (part number 2510-0064-001)
 - ◇ 1 Palm Top VT100 cable (part number 2510-0088-001)
- ◆ Power transformer (part number 4505-0020-001)
- ◆ This *Operations Guide*

In addition, you may have cables for your codec. The following lists some of the cables that may be included:


- ◆ For Picture Tel codecs: (2) part number MBHD449PT
- ◆ For CLI Eclipse codecs: (2) part number MBHDV.35
- ◆ For CLI Rembrandt or Radiance codecs: (2) part number MBHDV35CL
- ◆ For GPT/BT codecs: (1) part number MBHD949; (2) part number MBHDV.35
- ◆ For VTel codecs: (2) part number MBHD49VTC

See Appendix A, "Cable Pinouts," for information about cable pinouts.

Back Panel of the Multiband VSX

The following illustration is of the back panel of the Multiband VSX.

Figure 3-1: Back Panel of the Multiband VSAX

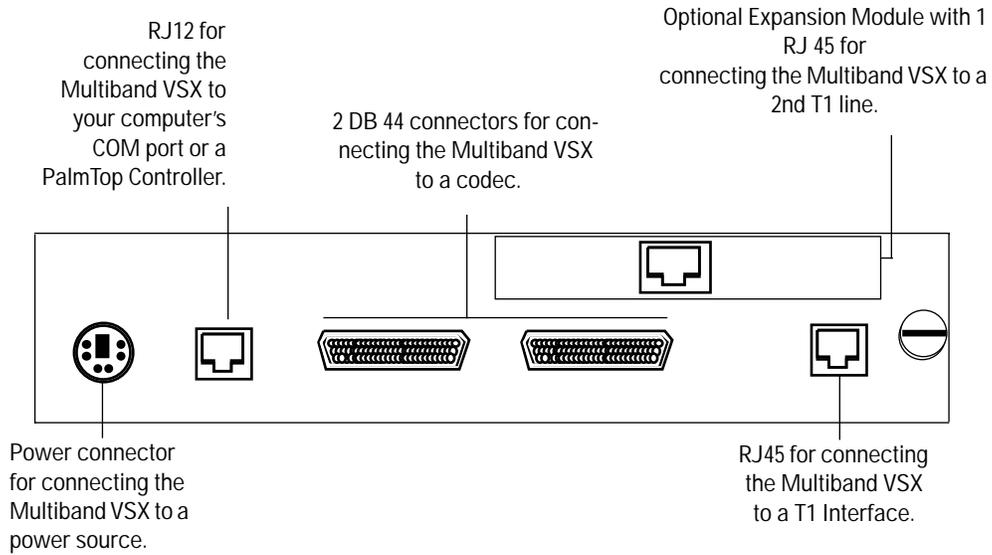


Connecting Your Multiband VSX

The Multiband VSX is easy to install. The following illustration of the back panel describes how to connect the Multiband VSX to:


- ◆ The COM port on your computer or, optionally, a PalmTop Controller
- ◆ Your video codec
- ◆ Your T1 line or, if the Upgrade Module is installed, your T1 lines
- ◆ A power source

Figure 3-2: Connecting Your Multiband VSX

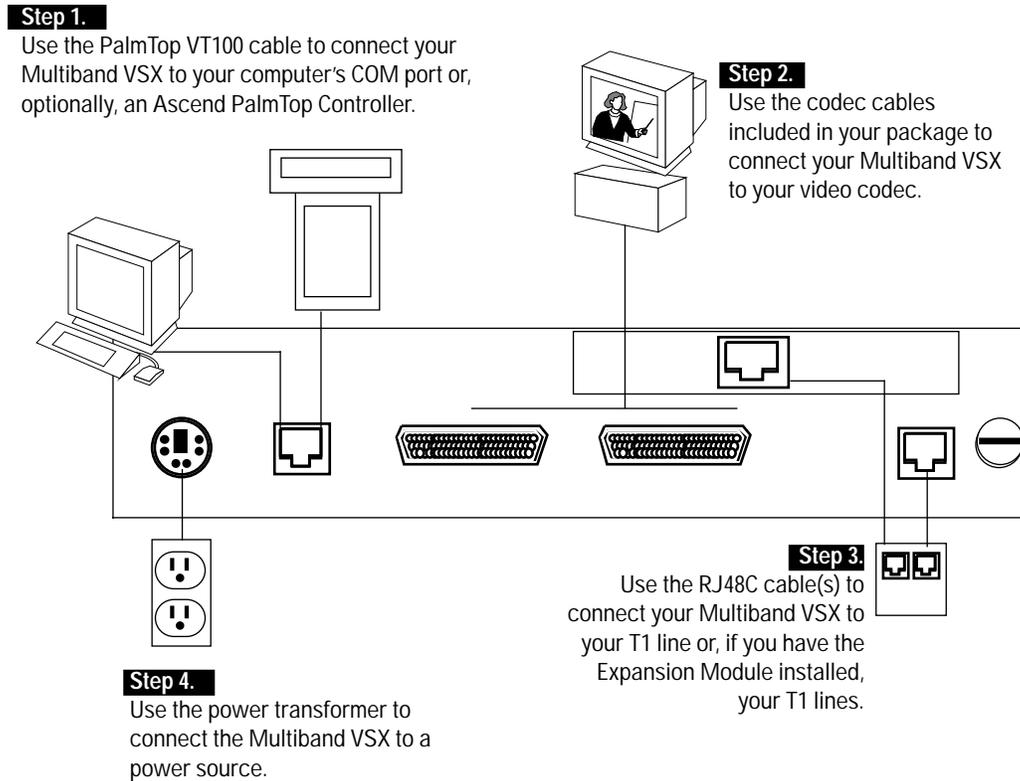

Multiband VSX LEDs


Figure 3-3: Multiband VSX LEDs

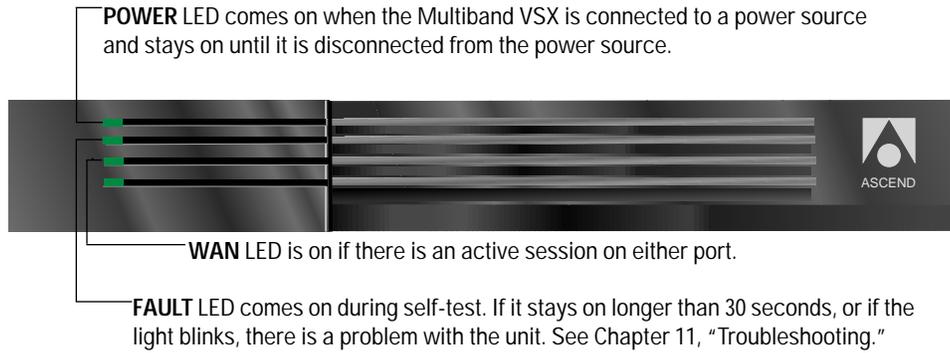

Installing the Expansion Module

The following illustrates how to install the Expansion Module:

Figure 3-4: Installing the Upgrade Module

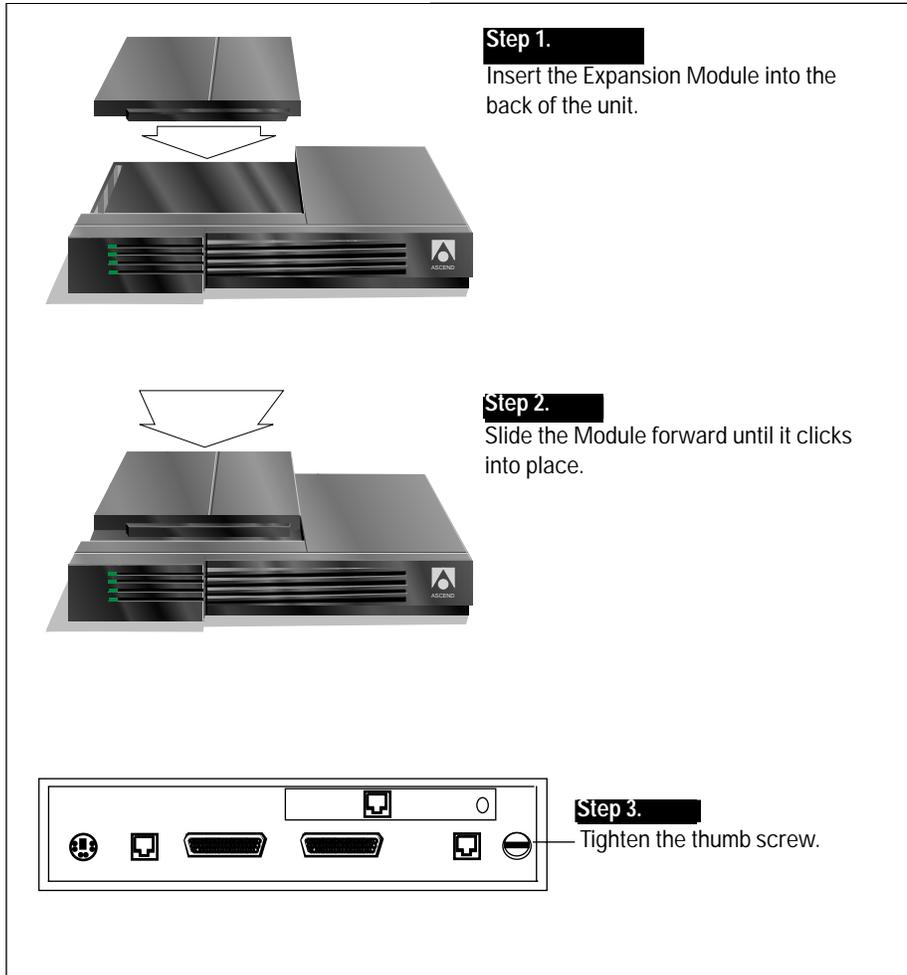

4

Getting Your Multiband VSX Up and Running

At this point, you should already have installed your T1 line or lines, connected your Multiband VSX to your codec, a power source, and your computer, and recorded your configuration in the tables that begin on page 24.

This chapter describes how to get your Multiband VSX up and running. It includes instructions for:

- ◆ Configuring your communications program
- ◆ Configuring the Multiband VSX:
 - ◇ for your telephone lines
 - ◇ for your codec
 - ◇ for a test call
 - ◇ advanced parameters
- ◆ Saving the Configure profile
- ◆ Testing your setup

Refer to the configuration tables in Chapter 2 as necessary to configure your Multiband VSX.

Configuring Your Communications Program

If you are not sure how to use your communications program, consult the manual for the program.

▲ Start your communications program and configure it as follows:

The program should be set for the following parameters:

- ◆ VT100
- ◆ 9600 bits per second
- ◆ 8 data bits
- ◆ No parity
- ◆ 1 stop bit
- ◆ No flow control
- ◆ Direct connect

Configuring Your Multiband VSX Using a Computer

If you have not already done so, review Chapter 2, “Before You Connect Your Multiband VSX,” and record your configuration information in the tables provided. Refer to them as necessary to configure your Multiband VSX.

Your Multiband VSX should be powered on and your communication program open. To begin configuring your Multiband VSX:



- 1 Press **ctrl-L** to refresh the screen.

The user interface appears with the Configure profile in the Edit window and the cursor at My Name:

```

BRANCH EDIT EDIT
Configure ??
>My Name=Branch Edit
2nd Line=PBX-T1
Line 1...
Line 2...
Dial #=4155552222
Call-by-Call=N/A
PRI # Type=N/A
Data Svc=56K
Call Type=2 Chnl
Call Mgm=N/A
Dial=Terminal
Answer=Auto
Clear=DTR Inactive
Early CD=Both
Advanced...
Save=*

10-100 1234567890 ??
L1/1S .....
12345678901234

00-200 00:00:28 ??
>M31 Line Ch

21-100 4155552222 ??
IDLE
0K 0 channels

22-100 [slave] ??
IDLE
0K 0 channels

21-600 Port Leads ??
DSR+ DTR- RTS- CD-
RI- acr- pnd- dp-
crq- dlo- digit

22-600 Port Leads ??
DSR+ DTR- RTS- CD-
RI- acr- pnd- dp-
crq- dlo- digit

21-300 4155552222 ??
Qual N/A 00:00:00
Max Rel Delay 0

00-100 Sys Option ??
>Security Prof: 1 ^
Software +4.4Ap11+
S/N: 5030383 v

Press Ctrl-n to move cursor to the next menu item. Press return to select it.
Press Tab to move to another window --- thick border indicates active window.

```

- 2 At My Name, press **enter**.

Brackets appear under the selection:

```

My Name:
[ ]

```

Getting Your Multiband VSX Up and Running

- 3 Type the name you want to assign to your unit in the brackets, and press **enter** to accept it.

The name you typed appears in the field, and an asterisk appears in the Save field. For example:


```
BRANCH EDIT EDIT
Configure
  Hq Name=Branch Edit
  2nd Line=D&l
  Line 1...
  Line 2...
  Dial #=415552222
  Call-by-Call=N/R
  PRI # Type=N/R
  Data Svc=56K
  Call Type=2 Chnl
  Call Mgm=N/R
  Dial=Terminal
  Answer=Auto
  Clear=DTR Inactive
  Early CD=Both
  Advanced...
  Save=*
```

An asterisk in the Save field indicates that you have made a change to the configuration.

- 4 If you have the Expansion Module installed, press **ctrl-N** to move the cursor to 2nd Line and press **enter** until the option you want to select for your 2nd line appears in the field. Then press **ctrl-N** to move the cursor to Line 1.

If you do not have the Expansion Module installed, press **ctrl-N** to move the cursor to Line 1

You are now ready to configure your Multiband VSX for your T1 lines. Continue to the next section.



Configuring for Your Telephone Lines

The cursor should be at Line 1. Refer to the Configuration Record, Channel Usage Tables and Channel # Table in Chapter 2, “Before You Connect Your Multiband VSX,” for the information you need to configure for your telephone line.

- 1 With the cursor on Line 1, press **enter**.

The parameters associated with Line 1 appear in the Edit window. The cursor is on Sig Mode:

```

EDIT
Configure... ??
Line 1...
>Sig Mode=ISDN
Switch Type=Japan
Rob Ctrl=N/A
Framing Mode=D4
Encoding=AMI
FDL=N/A
Length=N/A
Buildout=8 dB
Clock Source=Yes
Ch 1=Switched
Ch 1 #=#
Ch 2=Switched
Ch 2 #=#
Ch 3=Switched
Ch 3 #=#
  
```

- 2 If necessary, press **enter** until the option you want appears in the field. Then press **C-N** to move the cursor to Switch Type.
- 3 If necessary, press **enter** until your Switch Type appears in the field.
- 4 If you selected Inband in the Sig Mode field, press **ctrl-N** to move the cursor to Rob Ctrl and continue to the next step.
If you selected ISDN in the Sig Mode field, press **ctrl-N** twice to move the cursor to Framing Mode, and skip to step 6.
- 5 With the cursor on Rob Ctrl, press **enter** until your selection appears in the field, then press **ctrl-N** to move the cursor to Framing Mode.
- 6 With the cursor on Framing Mode, press **enter** until your option appears in the field, then press **ctrl-N** to move the cursor to Encoding.
- 7 With the cursor on Encoding, press **enter** until your selection appears in the field.

- 8 If you selected ESF in the Framing Mode field, press **ctrl** - **N** to move the cursor to FDL, and continue to the next step.
If you selected D4 in the Framing Mode field, press **ctrl** - **N** twice to move the cursor to Length and skip to step 10.
- 9 With the cursor on FDL, press **enter** until the option you want to select appears in the field. Then press **ctrl** - **N** to move the cursor to Length.
- 10 If your Multiband VSX is a DSX model, press **enter** until the option that describes the length of your cable appears in the field, then press **ctrl** - **N** to move the cursor to Buildout.
If your Multiband VSX is a CSU model (N/A appears in this field), press **ctrl** - **N** to move the cursor to Buildout.
- 11 With the cursor on Buildout, press **enter** until the option you want appears in the field, then press **ctrl** - **N** to move the cursor to Clock Source.
- 12 With the cursor on Clock Source, press **enter** until the option you want appears in the field. Then press **ctrl** - **N** to move the cursor to Ch1.
- 13 With the cursor on Ch1, press **enter** until the option you want appears in the field.
- 14 If you selected Switched in the Ch1 field, press **ctrl** - **N** to move the cursor to Ch 1# and continue to the next step.
If you selected Unused in the Ch1 field, press **ctrl** - **N** twice to move the cursor to Ch 2, and continue to step 16.
- 15 With the cursor on Ch1 #, press **enter** and type the phone number assigned to channel 1 in the brackets that appear under the parameter. Press **enter** to accept it. Then press **ctrl** - **N** to move the cursor to Ch 2, and continue to the next step.
- 16 Repeat the instructions in steps 13 to 15 for each channel.

- 17 When you have finished entering information for all the appropriate channels, press **esc**. The Configure profile appears in the Edit window.

```

BRANCH EDIT EDIT
Configure
My Name=Branch_Edit
2nd Line=PBX-T1
>Line 1...
Line 2...
Dial #=4155552222
Call-by-Call=6
PRI # Type=National
Data Svc=56K
Call Type=2.Chnl
Call Mgm=N/A
Dial=Terminal
Answer=Auto
Clear=DTR_Inactive
Early_CD=Both
Advanced...
Save=*
  
```

- 18 If you do *not* have the Expansion Module installed, press **ctrl-N** to move the cursor to Dial, and skip to the section titled Configuring for Your Codec. If you have the Expansion Module installed, press **ctrl-N** to move the cursor to Line 2, and continue to the next step.
- 19 With the cursor on Line 2, press **enter**.

Line 2 parameters appear in the Edit window with the cursor on Rob Ctrl:

```

EDIT
Configure...
Line 2...
>Rob Ctrl=N/A
Framing Mode=D4
Encoding=R11
FDL=N/A
Length=N/A
Buildout=8 dB
Pbx Type=N/A
Delete Digits=N/A
Add Number=N/A
Call-by-Call=N/A
Ans #=N/A
Ans Service=N/A
Ch 1=N/A
Ch 2=N/A
Ch 3=N/A
  
```

- 20 With the cursor on Rob Ctrl, press **enter** until the option you want appears in the field. Then press **ctrl-N** to move the cursor to Framing Mode.
- 21 With the cursor on Framing Mode, press **enter** until the option you want appears in the field. Then press **ctrl-N** to move the cursor to Encoding.

- 22 With the cursor on Encoding, press **enter** until the option you want appears in the field.
- 23 If you set 2nd Line to PBX-T1, press **ctrl** - **N** to move the cursor to FDL, and continue to the next step.
If you set the 2nd Line to D&I, press **ctrl** - **N** twice to move the cursor to Length, and skip to step 25.
- 24 With the cursor on FDL, press **enter** until the option you want appears in the field. Then press **ctrl** - **N** to move the cursor to Length.
- 25 If your Multiband VSX is a DSX model (N/A appears in the field), press **ctrl** - **N** to move the cursor to Buildout, and skip to step 26.
If your Multiband VSX is a CSU model, press **enter** until the option that describes the length of your cable appears in the field, then press **ctrl** - **N** to move the cursor to Buildout. Continue to the next step.
- 26 With the cursor on Buildout, press **enter** until your option appears in the field, then press **ctrl** - **N** to move the cursor to Pbx type.
- 27 If you set 2nd Line to D&I, press **ctrl** - **N** six times to move the cursor to Ch 1, and skip to step 33.
If you set 2nd Line to PBX, with the cursor on Pbx type, move the cursor until the option you want appears in the field. Then press **ctrl** - **N** to move the cursor to Delete Digits, and continue to the next step.
- 28 If you set Pbx type to Leased 1:1, press **ctrl** - **N** five times to move the cursor to Ch 1.
Otherwise, with the cursor on Delete Digits, press **enter** and, in the brackets that appear under the parameter, type the number of digits the PBX deletes when it dials an extension. Press **enter** to accept your entry, then press **ctrl** - **N** to move the cursor to Add Number.
- 29 With the cursor on Add Number, press **enter** and, in the brackets that appears under the parameter, type the dial string the PBX deletes when it dials an extension. Then press **ctrl** - **N** to move the cursor to Call-by-Call.

- 30 With the cursor on Call-by-Call, press **enter** and, in the brackets that appear under the parameter, type the value for the voice service on your line. Press **enter** to accept your entry, then press **ctrl** - **N** to move the cursor to Ans #.
- 31 With the cursor on Ans #, press **enter** and, in the brackets that appear under the parameter, type the telephone number you want the Multiband VSX to forward to line 2. Press **enter** to accept your entry, then press **ctrl** - **N** to move the cursor to Ans Service.
- 32 With the cursor on Ans Service, press **enter** until the option you want appears in the field, then press **ctrl** - **N** to move the cursor to Ch 1.
- 33 With the Cursor on Ch 1, press **enter** until the option you want appears in the field, then press **ctrl** - **N** to move the cursor to Ch 2.
- 34 Repeat step 33 for Ch 2 to Ch 24.
- 35 When you have finished assigning usage to all channels, press **esc**.
The Configure profile appears in the Edit window:

```

BRANCH EDIT EDIT
Configure
My Name=Branch Edit
2nd Line=PBX-T1
Line 1:
>Line 2:
Dial #=4155552222
Call-by-Call=N/A
PRI # Type=N/A
Data Svc=56K
Call Type=2 Chn1
Call Mgn=N/A
Dial=Terminal
Answer=Auto
Clear=DTR Inactive
Early CD=Both
Advanced...
Save=*

```

You are now ready to configure your Multiband VSX for your Codec. Continue to the next section.



Configuring for Your Codec

The cursor should be on Call Type. Refer to the Configuration Tables in Chapter 2, “Before You Connect Your Multiband VSX,” for the information you need to configure the Multiband VSX for your codec.

- 1 With the cursor on Dial, press **enter** until the dialing protocol you want to use for dialing calls appears in the field. Then press **ctrl** - **N** to move the cursor to Answer.
- 2 Press **enter** until the protocol you want to use for answering calls appears in the field. Then press **ctrl** - **N** to move the cursor to Clear.
- 3 Press **enter** until the protocol you want to use for clearing calls appears in the field. Then press **ctrl** - **N** to move the cursor to Early CD.
- 4 Press **enter** until the option you want to use for activating carrier detect appears in the field.

You are now ready to save the Configure profile.



Saving Your Configure Profile

Your configuration does not become active until you save your Configure profile. To save your Configure profile:

- ▲ Press **ctrl** - **N** to move the cursor to Save, then press **enter**.

A message indicating that the profile has been stored appears in the Edit window, then is replaced by the Configure profile. The name you assigned to the Multiband VSX appears in the title bar:

```

BRANCH EDIT EDIT
Message #117
Profile stored
Configure
Ny Name=Branch Edit
2nd Line=PBX-T1
Line 1...
Line 2...
Dial #=4155552222
Call-by-Call=N/A
FR1 # Type=N/A
Data Svc=56K
Call Type=2 Chn1
Call Mgm=N/A
Dial=Terminal
Answer=Auto
Clear=OTR Inactive
Early CD=Both
Advanced...
>Save=
  
```

You are now ready to test your setup.



Testing Your Setup

Once you have configured the Multiband VSX, you can place a 1-channel call to test your setup. To place a test call:

- 1 Press **ctrl** - **N** until the cursor reaches Dial #, then press **enter**.

Brackets appear under the field.

- 2 Type your telephone number in the brackets, then press **enter**, then press **ctrl** - **N** to move the cursor to Data Svc.

When you press **enter**, the number appears in the Dial # field. When you press **ctrl** - **N** the cursor move to Data Svc.

- 3 If necessary, with the cursor on Data Svc, press **enter** to select your data service. Then press **ctrl** - **N** to move the cursor to Call-by-Call.

Getting Your Multiband VSX Up and Running

- 4 With the cursor on Call-by-Call press **enter** and type the call-by call value assigned by your service provider in the brackets that appear under the parameter. Press **enter** to accept your entry.
- 5 If ISDN appears in the Sig Mode field, press **ctrl** - **N** to move the cursor to PRI# Type and continue to the next step.
If Inband appears in the Sig Mode field, press **ctrl** - **N** twice to move the cursor to Call Type, and skip to step 7.
- 6 With the cursor on PRI # Type, press **enter** until your ISDN PRI call format appears in the field.
- 7 Press **ctrl** - **D** to display the Do Menu.

The Do menu appears in the Edit window:

```
BRANCH OFFICE EDIT
Configure...
DO...
>0=Esc
1=Dial
F=Password
```

- 8 Press **ctrl** - **N** until the cursor reaches 1=Dial, then press **enter**.

The Multiband VSX places a call to itself. The messages in the status windows track the progress of the call:

```

21-100 917007370+ (
CALLING
0K      0 channels

21-100  1 channel !
HANDSHAKE
56K    1 channels

21-100 Bridge Po+ 0
ONLINE
56K    1 channels

```

You can see the image created by the camera and hear the sounds from the room in which the camera is located.

- 9 When the test call is successfully completed, press **ctrl** - **D** to display the Do menu.

The Do menu appears in the Edit window:

```

01 1 port, 56k
02 .
03 .
04=Esc
05=Hang Up
06=Extend BH
07=Contract BH
08=Beq/End Run LD
09=Beq/End Run Tans
10=Keyboard
11=Resynchronize
12=Save
13=Load

```

- 10 Press **ctrl** - **N** to move the cursor to 2=Hang Up, then press **enter**.

The call is cleared.

You are now ready to place a call and/or customize your directory. If you already know how to use the user interface, skip to Chapter 6, "Customizing the Directory."

If you want to place a call, skip to Chapter 7, "Placing and Clearing

Getting Your Multiband VSX Up and Running

Calls.”

Configuring Your Multiband VSX Using the PalmTop Controller

If you have not already done so, review Chapter 2, “Before You Connect Your Multiband VSX,” and record the information in the tables provided. Refer to them as necessary to configure your Multiband VSX.

Your Multiband VSX should be powered on and your communications program open. The Configure profile is displayed in the PalmTop Controller screen. The cursor is on My Name:

```
Configure...
My Name=...
2nd Line=PBX-T1
Line 1...
```

To begin configuring your Multiband VSX:



- 1 At My Name, press **➤**.

Brackets appear under the selection:

```
My Name:
 [ ]
```

- 2 Type the name you want to assign to your unit in the brackets, and press **➤** to accept it.

The name you typed appears in the field.

- 3 If you have the Expansion Module installed, press **⏴** to move the cursor to 2nd Line and press **➤** until the option you want to select for your 2nd line appears in the field. Then press **⏴** to move the cursor to Line 1.

If you do not have the Expansion Module installed, press **⏴** to move the cursor to Line 1

You are now ready to configure your Multiband VSX for your T1 lines. Continue to the next section.



Configuring for Your Telephone Lines

The cursor should be at Line 1. Refer to the configuration tables in Chapter 2, “Before You Connect Your Multiband VSX,” for the information you need to configure for your telephone line.

- 1 With the cursor on Line 1, press **➤**.

The parameters associated with Line 1 appear. The cursor is on Sig Mode.

- 2 If necessary, press **➤** until the option you want appears in the field. Then press **▼** to move the cursor to Switch Type.
- 3 If necessary, press **➤** until your Switch Type appears in the field.
- 4 If you selected Inband in the Sig Mode field, press **▼** to move the cursor to Rob Ctrl and continue to the next step.
If you selected ISDN in the Sig Mode field, press **▼** twice to move the cursor to Framing Mode, and skip to step 6.
- 5 With the cursor on Rob Ctrl, press **➤** until your selection appears in the field, then press **▼** to move the cursor to Framing Mode.
- 6 With the cursor on Framing Mode, press **➤** until your option appears in the field, then press **▼** to move the cursor to Encoding.
- 7 With the cursor on Encoding, press **➤** until your selection appears in the field.
- 8 If you selected ESF in the Framing Mode field, press **▼** to move the cursor to FDL and continue to the next step.
If you selected D4 in the Framing Mode field, press **▼** twice to move the cursor to Length and skip to step 10.
- 9 With the cursor on FDL, press **➤** until the option you want to select appears in the field. Then press **▼** to move the cursor to Length.
- 10 If your Multiband VSX is a DSX model, press **➤** until the option that describes the length of your cable appears in the field, then press **▼** to move the cursor to Buildout.
If your Multiband VSX is a CSU model (N/A appears in this field), press **▼** to move the cursor to Buildout.

- 11 With the cursor on Buildout, press **➤** until the option you want appears in the field, then press **▼** to move the cursor to Clock Source.
- 12 With the cursor on Clock Source, press **➤** until the option you want appears in the field. Then press **▼** to move the cursor to Ch1.
- 13 With the cursor on Ch1, press **➤** until the option you want appears in the field.
- 14 If you selected Switched in the Ch1 field, press **▼** to move the cursor to Ch 1# and continue to the next step.
If you selected Unused in the Ch1 field, press **▼** twice to move the cursor to Ch 2, and continue to step 16.
- 15 With the cursor on Ch1 #, press **➤** and type the phone number assigned to channel 1 in the brackets that appear under the parameter. Press **➤** to accept it. Then press **▼** to move the cursor to Ch 2, and continue to the next step.
- 16 Repeat the instructions in steps 13 to 15 for each channel.
- 17 When you have finished entering information for all the appropriate channels, press **■**-**z**. The Configure profile appears.
- 18 If you do *not* have the Expansion Module installed, press **▼** to move the cursor to Dial, and skip to the section titled Configuring for Your Codec.
If you have the Expansion Module installed, press **▼** to move the cursor to Line 2, and continue to the next step.
- 19 With the cursor on Line 2, press **➤**.
Line 2 parameters appear with the cursor on Rob Ctrl.
- 20 With the cursor on Rob Ctrl, press **➤** until the option you want appears in the field. Then press **▼** to move the cursor to Framing Mode.
- 21 With the cursor on Framing Mode, press **➤** until the option you want appears in the field. Then press **▼** to move the cursor to Encoding.

- 22 With the cursor on Encoding, press **➤** until the option you want appears in the field.
- 23 If you set 2nd Line to PBX-T1, press **▼** to move the cursor to FDL, and continue to the next step.
If you set the 2nd Line to D&I, press **▼** twice to move the cursor to Length and skip to step 25.
- 24 With the cursor on FDL, press **➤** until the option you want appears in the field. Then press **▼** to move the cursor to Length.
- 25 If your Multiband VSX is a DSX model (N/A appears in the field), press **▼** to move the cursor to Buildout, and skip to step 26.
If your Multiband VSX is a CSU model, press **➤** until the option that describes the length of your cable appears in the field, then press **▼** to move the cursor to Buildout. Continue to the next step.
- 26 With the cursor on Buildout, press **➤** until your option appears in the field, then press **▼** to move the cursor to Pbx type.
- 27 If you set 2nd Line to D&I, press **▼** six times to move the cursor to Ch 1, and skip to step 33.
If you set 2nd Line to PBX, with the cursor on Pbx type, move the cursor until the option you want appears in the field. Then press **▼** to move the cursor to Delete Digits, and continue to the next step.
- 28 If you set Pbx type to Leased 1:1, press **▼** five times to move the cursor to Ch 1.
Otherwise, with the cursor on Delete Digits, press **➤** and, in the brackets that appear under the parameter, type the number of digits the PBX deletes when it dials an extension. Press **➤** to accept your entry, then press **▼** to move the cursor to Add Number.
- 29 With the cursor on Add Number, press **➤** and, in the brackets that appears under the parameter, type the dial string the PBX deletes when it dials an extension. Then press **▼** to move the cursor to Call-by-Call.

- 30 With the cursor on Call-by-Call, press **➤** and, in the brackets that appear under the parameter, type the value for the voice service on your line. Press **➤** to accept your entry, then press **▼** to move the cursor to Ans #.
- 31 With the cursor on Ans #, press **➤** and, in the brackets that appear under the parameter, type the telephone number you want the Multiband VSX to forward to line 2. Press **➤** to accept your entry, then press **▼** to move the cursor to Ans Service.
- 32 With the cursor on Ans Service, press **➤** until the option you want appears in the field, then press **▼** to move the cursor to Ch 1.
- 33 With the Cursor on Ch 1, press **➤** until the option you want appears in the field, then press **▼** to move the cursor to Ch 2.
- 34 Repeat step 33 for Ch 2 to Ch 24.
- 35 When you have finished assigning usage to all channels, press **■**-**z**.
The Configure profile appears.

You are now ready to configure your Multiband VSX for your Codec. Continue to the next section



Configuring for Your Codec

The cursor should be on Call Type. Refer to the configuration tables in Chapter 2, “Before You Connect Your Multiband VSX,” for the information you need to configure the Multiband VSX for your codec.

- 1 With the cursor on Dial, press **➤** until the dialing protocol you want to use for dialing calls appears in the field. Then press **▼** to move the cursor to Answer.
- 2 Press **➤** until the protocol you want to use for answering calls appears in the field. Then press **▼** to move the cursor to Clear.
- 3 Press **➤** until the protocol you want to use for clearing calls appears in the field. Then press **▼** to move the cursor to Early CD.
- 4 Press **➤** until the option you want to use for activating carrier detect appears in the field.

You are now ready to save the Configure profile.



Saving Your Configure Profile

Your configuration does not become active until you save your Configure profile. To save your Configure profile:

- ▲ Press **▼** to move the cursor to Save, then press **▶**.

A message indicating the profile has been stored appears in the Edit window, then is replaced by the Configure profile. The name you assigned to the Multiband VSX appears in the title bar:

```
Message #117
Profile stored
```

You are now ready to test your setup.



Testing Your Setup

Once you have configured the Multiband VSX, you can place a 1-channel call to test your setup. To place a test call:

- 1 Press **▶** until the cursor reaches Dial #, then press **▶**.
Brackets appear under the field.
- 2 Type your telephone number in the brackets, then press **▶**.
When you press **▶**, the number appears in the Dial # field.
- 3 Type your telephone number in the brackets, then press **▶**, then press **▼** to move the cursor to Data Svc.
When you press **▶**, the number appears in the Dial # field. When you press **▼** the cursor move to Data Svc.
- 4 If necessary, with the cursor on Data Svc, press **▶** to select your data service. Then press **▼** to move the cursor to Call-by-Call.
- 5 With the cursor on Call-by-Call press **▶** and type the call-by call value assigned by your service provider in the brackets that appear under the parameter. Press **▶** to accept your entry.
- 6 If ISDN appears in the Sig Mode field, press **▼** to move the cursor to PRI# Type and continue to the next step.

If **Inband** appears in the **Sig Mode** field, press **▼** twice to move the cursor to **Call Type**, and skip to step 8.

- 7 With the cursor on **PRI # Type**, press **▶** until your ISDN PRI call format appears in the field.
- 8 Press **DO**.

The Do menu appears in the Edit window:

```
01 1 port, 56k
00...
>0=Esc
1=Dial
```

- 9 Press **▼** until the cursor reaches **1= Dial**, then press **▶**.

The Multiband VSX places a call to itself. You can see the image created by the camera and hear the sounds from the room in which the camera is located.

- 10 When the test call is successfully completed, press **DO** to display the Do menu.

The Do menu appears in the Edit window:

```
01 1 port, 56k
00...
>0=Esc
2=Hang Up
```

- 11 Press **▼** to move the cursor to **2=Hang Up**, then press **▶**.

The call is cleared.

You are now ready to place a call and/or customize your directory. If you already know how to use the user interface, skip to Chapter 6, “Customizing the Directory.”

If you want to place a call, skip to Chapter 7, “Placing and Clearing Calls.”

5

User Interface

This chapter describes the user interface. It includes:

- ◆ A general overview of the user interface
- ◆ A description of the windows in the user interface
- ◆ An overview of menus and profiles, and instructions for how to move between them
- ◆ An illustrated guide for locating profiles, and a table that lists the keystrokes you use to move around in the user interface
- ◆ Instructions for editing profiles
- ◆ Instructions for restarting your Multiband VSX from the user interface
- ◆ An overview of status windows and information about how to interpret the information displayed in them

Overview of the User Interface

The system software that resides on the Multiband VSX tells it how to operate. The user interface gives you access to the system software so you can:

- ◆ Configure Multiband VSX operating parameters
- ◆ Activate security on your Multiband VSX
- ◆ Place calls manually
- ◆ View information about calls, telephone lines, and the Multiband VSX's system
- ◆ Restart your Multiband VSX

The user interface comprises two types of windows:


- ◆ The Edit window
- ◆ Status windows

All windows are displayed when your Multiband VSX is connected to a computer.

View of the user interface when the Multiband VSX is connected to a computer.

⇒NOTE⇒

Flashing question marks indicate a problem with the PRI interface.

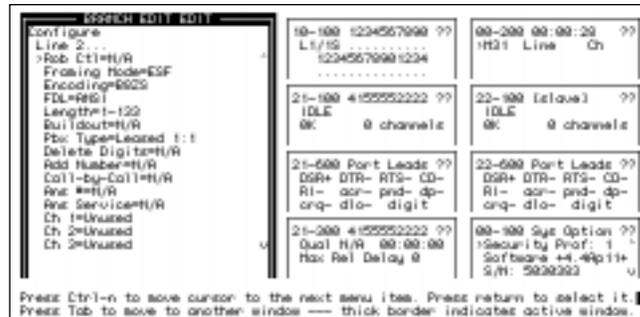

Three lines of a window are visible at a time when the Multiband VSX is connected to a PalmTop Controller. For example:

View of the user interface on a PalmTop Controller

```
Configure...
>My Name=
Switch Type=
Line 1...
```

The Edit Window

Menus and profiles are displayed in the Edit window.


Menus

There are two types of menus in the user interface:

- ◆ The Main Edit Menu
- ◆ Submenus

Main Edit Menu

The Main Edit Menu is the entry point for all profiles. The Configure profile, Directory submenu, Diagnostics submenu, and Security submenu are listed on the Main Edit Menu:

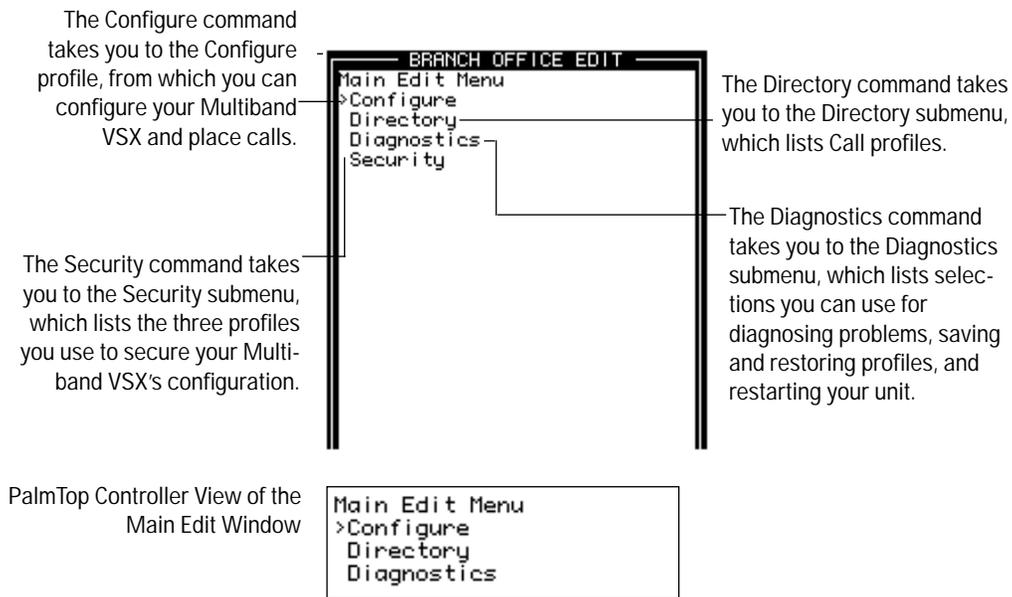

Submenus

Submenus list either profiles or other submenus. The following example is the submenu that is displayed when you select the Directory submenu from the Main Edit Menu:




View of the Directory Submenu on a PalmTop Controller.

Profiles

Profiles list the parameters associated with a feature or capability, as well as the fields in which you enter a value to set the parameters.

The following illustration is an example of a Call profile. A Call profile is displayed when you select it from the Directory submenu:



View of a Call Profile on a PalmTop Controller.


Status Windows

Status windows give you a tool for diagnosing problems and viewing the status of the Multiband VSX. They display information about:


- ◆ The current session
- ◆ Your telephone line
- ◆ The status of calls
- ◆ Events on host ports 1 and 2
- ◆ The status of port leads
- ◆ The Multiband VSX's system

For information about interpreting information displayed in status windows, see "Interpreting Information in Status Windows" on page 84 of this *Operations Guide*.

The eight status windows display information that helps you monitor calls.

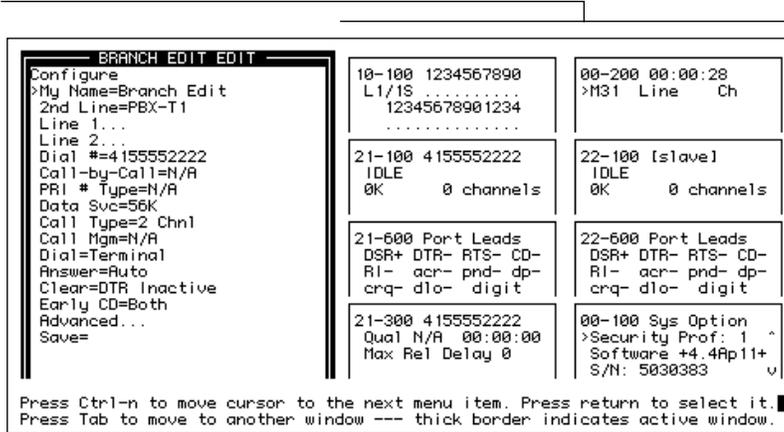

View of a status window on a PalmTop Controller.



Navigating Through the User Interface

This sections describes how to get around in the user interface. It includes:

- ◆ Instructions for getting to the Main Edit Menu
- ◆ Instructions for choosing a submenu from either the Main Edit Menu or another submenu
- ◆ Instructions for moving to and between status windows
- ◆ A guide for finding profiles
- ◆ A list of the keystrokes you use to navigate through the user interface

Getting to the Main Edit Menu in the Edit Window

To get to the Main Edit Menu from any other menu in the User Interface:



- ▲ Press **ESC** until you see the Main Edit Menu.

If you press **ESC** when you are in a profile and get a message asking you if you want to Exit and save or Exit and discard, see “Saving Changes to a Profile” on page 74 later in this chapter.



- ▲ Press **ESC-Z** until you see the Main Edit Menu.

If you press **ESC-Z** when you are in a profile and get a message asking you if you want to Exit and save or Exit and discard, see “Saving Changes to a Profile” on page 74 later in this chapter.

Choosing a Submenu from the Main Edit Menu or Another Submenu

To choose a submenu from the Main Edit Menu or a submenu:



1 If necessary, press **ctrl** - **N** until the cursor reaches the submenu you want to select.

2 Press **enter** to accept the selection.

The submenu you select appears in the Edit window.



1 If necessary, press **V** until the cursor reaches the submenu you want to select.

2 Press **▶** to accept the selection.

The submenu you select appears in the Edit window.

Choosing an Item from a Submenu

To choose an item from a submenu:



1 If necessary, press **ctrl** - **N** until the cursor reaches the item you want to select.

2 Press **enter** to accept the selection.

The submenu or profile you select appears in the Edit window.



1 If necessary, press **V** until the cursor reaches the item you want to select.

2 Press **▶** to accept the selection.

The submenu or profile you select appears in the Edit window.

Moving To and Between Status Windows

Status windows 00-200 and 00-100 contain more information than can be displayed in the window at one time. By making the window active, you can scroll through it to view the additional information.

To move from the Edit window to a status window:



- ◆ Press **tab** until the thick border appears around the status window you want to select.

The following is an example of the 00-100 status window after it has become active:

```

BRANCH EDIT EDIT
Configure
>My Name=Branch Edit
2nd Line=PBX-T1
Line 1...
Line 2...
Dial #=415552222
Call-by-Call=N/R
PRI # Type=N/R
Data Svc=56K
Call Type=2 Chnl
Call Mgm=N/R
Dial=Terminal
Answer=Auto
Clear=DTR Inactive
Early CD=Both
Advanced...
Save=

10-100 1234567890
L1/IS .....
12345678901234
.....

21-100 415552222
IDLE 0 channels

22-100 [slave]
IDLE 0 channels

21-500 Port Leads
DSR+ DTR- RTS- CD-
RI- acq- prd- dp-
crq- dio- digit

22-500 Port Leads
DSR+ DTR- RTS- CD-
RI- acq- prd- dp-
crq- dio- digit

21-300 415552222
Qual N/R 00:00:00
Max Rel Delay 0

00-100 Sys Option
>Security Prof: 1 ^
Software +4.4Ap11+
S/N: 5030383 v
    
```

Press Ctrl-n to move cursor to the next menu item. Press return to select it.
 Press Tab to move to another window --- thick border indicates active window.

A thick black border appears around the 00-100 status window, indicating that it is active. You can scroll through the window to view additional information about your Multiband VSX's system.



- 1 Press **Esc**.
The Main Status menu appears.
- 2 Press **↓** to move the cursor to the status window you want to view, then press **→** to select it.
The status window you selected appears.



User Interface Computer Keyboard Navigation Keystrokes

Table 5-1, “User Interface Computer Keystrokes,” lists the keystrokes available for navigating through the user interface when the Multiband VSX is connected to a computer.

Table 5-1: User Interface Computer Keystrokes

Press	to...
ctrl - N	move to the next item on a menu or profile.
ctrl - P	move to the previous item on a menu or profile.
ctrl - L	refresh the screen.
ctrl - D	display the Do menu.
ctrl - O	move to the previous window.
ctrl - I or tab	move to the next window.
delete	delete characters from a field.
esc	move between menus and profiles.
enter	accept an entry in a field or a menu.

⇒NOTE⇒

If your communications program is set up for the arrow keys, you can use the down and up arrow keys instead of **ctrl** - **N** and **ctrl** - **P** to move between items on a menu or profile.



User Interface PalmTop Controller Keypad Navigation Keystrokes

Table 5-2: “User Interface PalmTop Controller Keystrokes,” lists the keystrokes available for navigating through the user interface when the Multiband VSX is connected to a PalmTop Controller.

Table 5-2: User Interface PalmTop Controller Keystrokes

Press	to...
	move to the next item on a menu or profile.
	move to the previous item on a menu or profile.
	display the Do menu.
	delete characters from a field.
	move between menus and profiles.
	accept an entry in a field or a menu.
	move to a status window.

Editing a Profile

You edit a profile by changing the its parameter values. You change a parameter's value by:

- ◆ Selecting from multiple choices within a field, or
- ◆ Entering the information directly into a field

⇒NOTE⇒

If you try to edit a profile and the user interface does not let you make changes, a Security profile that requires a password has been activated. See "Editing a Protected Profile" on page 76 for instructions for how to edit a protected profile.

Selecting from Multiple Choices

For items in which you are limited to specific choices — for example, Call Type in the Configure profile — the selections available to you are displayed in the parameter's field. The default choice appears in the field the first time you choose the profile and remains until you change it.

To enter information in fields where multiple choices are offered:



- 1 If necessary, press **ctrl** - **N** to move the cursor to the parameter in which you want to make a selection.
- 2 Press **enter**.
The selection in the field changes to the next available choice.
- 3 Continue pressing **enter** until the selection you want appears in the field.
- 4 Press **ctrl** - **N** to move the cursor to the next field.



- 1 If necessary, press **V** to move the cursor to the parameter in which you want to make a selection.
- 2 Press **➤**.
The selection in the field changes to the next available choice.
- 3 Continue pressing **➤** until the selection you want appears in the field.
- 4 Press **V** to move the cursor to the next field.

Entering Information Directly into the Field

For items in which you are not limited to given selections — for example, the name you use to identify a site on a Call profile — you enter information by typing it in the field.

To enter information directly into a field:



- 1 Press **ctrl** - **N** to move the cursor to the field in which you want to enter information.

- 2 Press **enter**.

Brackets appear underneath the selection. For example:

Dial #:
[]

- 3 Type your entry and press **enter** to accept it.



- 1 Press **√** to move the cursor to the field in which you want to enter information.

- 2 Press **➤**.

Brackets appear underneath the selection. For example:

Dial #:
[]

- 3 Type your entry and press **➤** to accept it.

Saving Changes to a Profile

To implement changes you make to a profile, you must save it. You save changes to the Configure profile by selecting the Save feature listed on the profile. To save changes to all other profiles:



- 1 In any profile, when you are finished editing the appropriate parameters, press **ESC**.

The following message appears:

```
EDIT
EXIT?
?0=ESC (Don't exit)
1=Exit and discard
2=Exit and accept
```

- 2 Press **ctrl-N** to move the cursor to 2=Exit.
- 3 Press **enter** to select it.

A message indicating that the profile has been saved is displayed in the Edit window:

```
EDIT
Status Msg #11?
Profile stored
```

⇒NOTE⇒

If, when you try to save a profile, you see the following message displayed: "Security violation. Invalid Security level.", a security profile that requires a password has been activated. See "Editing a Protected Profile" on page 76.



- 1 In any profile, when you are finished editing the appropriate parameters, press **ESC-Z**.

The following message appears:

```
EXIT?
>0=ESC (Don't exit)
 1=Exit and discard
 2=Exit and accept
```

- 2 Press **↓** to move the cursor to 2=Exit.
- 3 Press **→** to select it.

A message indicating that the profile has been saved is displayed in the Edit window:

```
Message #117
Profile stored
```

⇒NOTE⇒

If, when you try to save a profile, you see the following message displayed: "Security violation. Invalid Security level.", a security profile that requires a password has been activated. See "Editing a Protected Profile" on page 76.

Editing a Protected Profile

If a restricted security profile is activated on your Multiband VSX, you may have to activate a non-restricted security profile in order to edit the profile you want. (See Chapter 8, "Implementing Security," later in this manual for information about how security is implemented on the Multiband VSX.)



- 1 Check the 00-100 status window to see which Security profile is activated.

The activated Security profile is listed in the 00-100 Sys Option status window. For example:

```
00-100 Sys Option
Security Prof: 1
Software: 4.30p23+
Date: 9941293
```

— Activated Security profile.

- 2 Press **ctrl** - **D** to display the Do menu.

The Do menu appears in the Edit window:

```
BRANCH OFFICE EDIT
Configure...
00...
^@=Esc
^I=Digl
^P=Password
```

- 3 Press **ctrl** - **N** until the cursor reaches P=Password. Then press **enter** to select it.

A message appears asking you to select the Security profile for which you want to enter a password:



- 4 If necessary, press **ctrl** - **N** to move the cursor to the Security profile you want to activate. Then press **enter** to select it.

A message appears in the Edit window asking you for your password:



- 5 In the brackets, type the password for the profile you want to activate and press **enter** to accept it.

The following message appears briefly in the Edit window:




When the message disappears, the profile or submenu from which you accessed the System Do menu appears in the Edit window.

- 6 Follow the instructions on page 72 to continue editing the profile.



- 1 Check the 00-100 status window to see which Security profile is activated.


The activated Security profile is listed in the 00-100 Sys Option status window. For example:



—Activated Security profile.

- 1 Press **DO** to display the Do menu.

The Do menu appears in the Edit window:



- 2 Press **▼** until the cursor reaches P=Password. Then press **▶** to select it.
A message appears asking you to select the Security profile for which you want to enter a password:

```
Configure...
Security profile...?
>00-301 Default
  00-302 BranchOffice
```

- 3 If necessary, press **▼** to move the cursor to the Security profile you want to activate. Then press **▶** to select it.

A message appears in the Edit window asking you for your password:

```
Configure...
Enter Password:
[ ]
```

- 4 In the brackets, type the password for the profile you want to activate and press **▶** to accept it.

The following message briefly appears:

```
Message #119
Password accepted.
Using new security
level.
```


When the message disappears, the profile or submenu from which you accessed the System Do menu appears in the Edit window.

- 5 Follow the instructions on page 72 to continue editing the profile.

Restarting Your Multiband VSX from the User Interface

You can restart your Multiband VSX by disconnecting it from its power source, then reconnecting it.

You can also restart using the Sys Reset command, which is listed on the Diagnostics submenu.

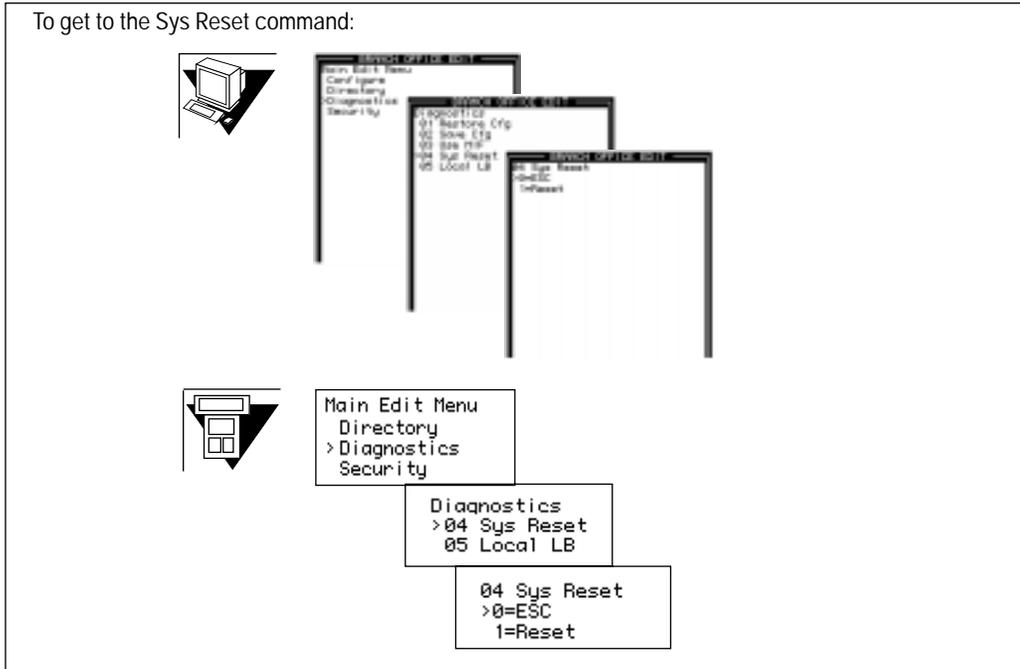

To restart your Multiband VSX using the Sys Reset command:



- 1 With the 04 Sys Reset command appearing in the Edit window, press **ctrl-N** until the cursor reaches 1=Reset, then press **enter** to select it.

The Multiband VSX begins resetting itself and the following message appears in the Edit window:



When the reset process is complete, the following message appears in the Edit window:



User Interface

When the Self Test is complete, the Configure profile appears in the Edit window:

```
BRANCH EDIT EDIT
Configure
Pty Name=Branch Edit
2nd Line=PBX-T1
Line 1...
Line 2...
Dial #=415552222
Call-by-Call=N/A
PRI # Type=N/A
Data Svc=56K
Call Type=2 Chn1
Call Mgm=N/A
Dial=Terminal
Answer=Auto
Clear=DTR inactive
Early CD=Both
Advanced...
Save=
```



Flashing question marks indicate a problem with the PRIPRI interface.



- 1 With the 04 Sys Reset command appearing in the Edit window, press **✓** until the cursor reaches 1=Reset, then press **▶** to select it.

The Multiband VSX begins resetting itself and the following message appears in the Edit window:

```
Message #134
System reset
in progress
```

When the reset process is complete, the following message appears in the Edit window:

```
Multiband VSX    ??
Power-On Self Test
Running
```

When the Self Test is complete, the Configure profile appears:

```
Configure...
>My Name=
Switch Type=
Line 1...
```

⇒NOTE⇒

Flashing questions marks indicate a problem with the PRI interface.

Interpreting Information in Status Windows

The tables on the following pages describe the information displayed in each status window, and provide guidelines for interpreting the information.

```

10-100 1234567890
L1/1S .....
12345678901234
.....

```

10-100 Line Status


The 10-100 Line Status window displays the dynamic status of each T1/PRI line, the status of its physical and logical link to the carrier, and the status of each line's individual channels.

Table 5-3: 10-100 Line Status Window

Provides information about	Indicator	Meaning
Channel	1...0	Column header for channels 1-10
	1...4	Column header for channels 11-24
Link status	L/A	Link active
	RA	Red Alarm (no physical link)
	YA	Yellow Alarm (no logical link)
	DF	D-Channel Failure (ISDN only)
	IS	Keep Alive
	DS	Disabled Link
Status of Channel	•	Channel not available; link is disabled, has no physical link, does not exist, or is marked as Unused in the Line profile.
	*	Channel connected in a current call.
	-	Channel currently idle (but in service).
	b	Backup NFAS D channel (ISDN only).
	c	Channel currently available because it is in the process of clearing the most recent call or because it is in the process of sending echo cancellation tones to receive a call (Robbed-bit only).
	d	Dialing from this channel for an outgoing call.
	r	Ringling channel for incoming call.

Table 5-3: 10-100 Line Status Window (Continued)

Provides information about	Indicator	Meaning
Status of Channel (cont'd)	m	Channel in maintenance/backup (ISDN only).
	o	Channel out of service (ISDN only).
	s	Active D channel (ISDN only).
	x	Drop & Insert (D&I) channel (Robbed-bit only).



Note: Indicates time since startup; cannot be set.

00-200 System Events

The 00-200 System Events status window displays the last 31 events that have happened on the Multiband VSX since it was powered up. Tab to the System Events status window and press **ctrl-N** to move through the list of events. (To help you diagnose problems, Appendix D lists ISDN codes and their meanings; Appendix E lists system event messages and their meanings.)

Table 5-4: 00-200 System Events Status Window

Field	Indicators	Meaning
>M31 Line [] Ch []	M[]	Message number (1-31)
	Line	Line where event occurred. If field is blank, line was not involved in event.
	Ch	Channel where event occurred. If field is blank, no channel was involved in event.

```
21-100 665
IDLE
0% @ channel:c
```

21-100 Host 1 Status

The 21-100 Host 1 Status window displays information about the status of a call on port 1.

Table 5-5: 10-100 Host 1 Line Status Window

Indicators	Meaning
Idle	No call is up.
Handshake	Multiband VSX is negotiating with communication device on far end.
Online	Call is up.
BW Added	Bandwidth has been added to the call.
BW Removed	Bandwidth has been removed from the call.

```
22-100 (slave)
IDLE
0% @ channel:c
```

22-100 Host 2 or Slave Port Status Windows

The 22-100 Host 2 or Slave Port Status window displays information about the call on port 2.

Table 5-6: 10-100 Host 2 Line Status Window

Indicators	Meaning
Idle	No call is up
Handshake	Multiband VSX is negotiating with communication device on far end.
Online	Call is up.
BW Added	Bandwidth has been added to the call.
BW Removed	Bandwidth has been removed from the call.

User Interface



21-600 and 22-600 Port Leads

The 21-600 and 22-600 Port Leads status windows displays the status of port leads on host 1 and host 2. The Multiband VSX uses port leads to control port communication.

Table 5-7: 21-600 and 22-600 Port Leads Status Windows

Indicators	Meaning
DSR	Data Set Ready.
DTR	Data Terminal Ready.
RTS	Ready to Send.
CD	Carrier Detect.
RI	Ring Indicator.
acr	Abandon call and retry.
pnd	Present new digit.
dp	Digit present.
crq	Call request.
dlo	Data line occupied.
digit	Last digit dialed.

```
21-300 665
Qual N/A 00:00:00
Max Rel Delay 0
```

21-300 Line Quality

The 21-300 Line Quality status window displays information about the your telephon lines.

Table 5-8: 21-600 Line Quality Status Window

Field	Indicators	Meaning
Qual	Good Fair Marg Poor N/A	
Max Rel Delay	Number (up to 3072)	Maximum relative delay (number of frames) between channels

```
00-100 Sys Option
>Security Prof: 1
Software +4.30p23+
S/N: 5041705
```

00-100 Sys Option

The 00-100 Sys Option status window displays the following information about your Multiband VSX:

- ◆ The Security profile that is activated
- ◆ The software version that is currently installed
- ◆ Its serial number

In addition, you can view information about its configuration by pressing **ctrl-N** (**V** if you are using the PalmTop Controller) to scroll through the status window.

User Interface

6

Customizing the Directory

The user interface has a Directory that lets you configure and store in Call profiles the parameters for videoconference calls. You can create additional Call profiles or customize existing ones.

This chapter:

- ◆ Provides an overview of Call profiles
- ◆ Describes how to get to a Call profile
- ◆ Includes a table that lists the parameters on the Call profile and describes all possible entries in their fields

Overview of the Directory and Call Profiles

The Directory lists all Call profiles. Call profiles contain all the information the Multiband VSX requires for videoconference calls. The following is an example of a Directory and a Call profile:

Asterisks indicate that the profile labeled "665" is the active profile.

The profile you use to place a call is the active profile. Until you load another profile into the codec's keypad or select another profile to use for placing a call, the Multiband VSX uses the parameters of the active profile to place a call. This feature is similar to the redial function on a telephone.

```
BRANCH EDIT EDIT
Directory
> ** Factory
01 1 port, 56k
02 1 port, 64k
03 2 port, 56k
04 2 port, 64k
05 Bond 56x6
06 Bond 64x6
07 AIM M 56x6
08 AIM M 64x6
09 AIM S 56x6
10 AIM S 64x6
11 AIM D 64x6
12 Bond 56x12
13 Bond 64x12
14 AIM M 56x12
15 AIM M 64x12
```

A Call profile, which is accessible through the Directory submenu, contains information required for the call.

```
BRANCH EDIT EDIT
** 415552222
> Name=415552222
Dial # =415552222
Call Type=2 Chn1
Call Mgm=N/A
Data Svc=56K
Force 56=No
Base Ch Count=N/A
Call-by-Call=N/A
PRI # Type=N/A
Transit # =N/A
```

Getting to a Call Profile

To get to the Call profile you want to edit, select it from the Directory submenu. The Directory submenu is accessible through the Main Edit Menu:



- 1 At the Main Edit Menu, select Directory and press **enter** to display the Directory submenu.
- 2 At the Directory submenu, select a Call profile and press **enter** to display it.

```
BRANCH OFFICE EDIT
Main Edit Menu
Configure
Directory
Diagnostics
Security
Directory
>*** 665
01 1 port, 56k
02 1 port, 64k
03 2 p
04 2 p
05 Bon
06 Bon
07 AIM
08 AIM
09 AIM
10 AIM
11 AIM
12
>Name=4155552222
Dial #=4155552222
Call Type=2 Chnl
Call Mgm=N/A
Data Svc=56K
Force 56=No
Base Ch Count=N/A
Call-by-Call=N/A
PRI # Type=N/A
Transit #=N/A
```



- 1 At the Main Edit Menu, select Directory and press **right arrow** to display the Directory submenu.
- 2 At the Directory submenu, select a Call profile and press **right arrow** to display it.

```
Main Edit Menu
>Directory
Diagnostics
Security
Directory
>***
07 AIM Manual 56k
08 AIM Manual 64k
08 AIM Manual 64k
>Name=AIM Manual 64k
Dial #=
Call Type=AIM
```

Use the information in Table 6-1 on page 94 to edit the profile.

If you have any questions about how to use the user interface, See Chapter 5, "User Interface," for instructions.

Table 6-1: Call Profile	
Name	Enter a descriptive name for this profile.
Dial #	Enter the phone number for the remote site. If you are placing a 2-channel call, and each channel has a unique phone number, the syntax is: (phone number) ! (phone number)
Call Type	Refers to the type of call you want to place. Options are: 1chnl if you want to place a test call to yourself. 2chnl if you want to connect two ports of a single device to the remote site over two switched channels. This is also referred to as a dual channel call. If you make this selection, N/A appears in the Call Mgm field. BONDING if the unit on the remote site is anything other than an Ascend unit, you want to place the call over switched channels, and you want the Multiband VSX to perform inverse multiplexing to provide the bandwidth required for the call. AIM if the unit on the remote site is an Ascend unit, you want to place the calls over switched channels, and you want the Multiband VSX to perform inverse multiplexing to provide the bandwidth required for the call.

Table 6-1: Call Profile (Continued)	
Call Mgm	<p>Refers to how you want the Multiband VSX to manage AIM or BONDING calls.</p> <p>AIM Options are:</p> <p>Manual if you want the Multiband VSX to provide an end-to-end management channel for bandwidth management, remote management, and session control. This type of call requires 0.2% of the bandwidth to monitor for bad channels and network slips. Some codecs cannot spare the 0.2% bandwidth required by the Multiband VSX for this type of call.</p> <p>Static if you want the Multiband VSX to perform inverse multiplexing and your codec requires 100% of the bandwidth used for the call.</p> <p>Delta if you want the Multiband VSX to perform inverse multiplexing and provide an end-to-end management channel <i>and</i> your codec needs 100% of the bandwidth required for the call. The Multiband VSX creates multiples of 64kbps calls out of 56kbps calls, then uses extra bandwidth for management control and error monitoring. An AIM Delta call does not allow you to control bandwidth, and the call is more costly than an AIM manual call.</p> <p>BONDING Options are:</p> <p>Mode 0 if the communication device at the far end uses the BONDING protocol and is connected in dual port mode to a codec.</p> <p>Mode 1 if the communication device at the far end is <i>not</i> an Ascend unit <i>and</i> the codec the Multiband VSX is connected to requires an exact clocking rate.</p>
Data Svc	<p>56K (default) if your local phone company and the complete path to the remote site supports 56kbps only.</p> <p>Voice if you are sending data over the voice network.</p> <p>56KR if your local phone company and the complete path to the remote site supports 56kbps service only. Same as 56K, but required on some older switches.</p> <p>64K if your local phone company and the complete path supports 64kbps.</p>
Base Ch Count	<p>Refers to the number of channels you want the Multiband VSX to use when placing a call. Default value is 2 if you are using only the base unit; 8 if you have the Upgrade Module installed.</p> <p>1 or 2 are valid entries if you are using the base unit only. Any number between 1 and 8 is valid if you have the Upgrade Module installed.</p>

Table 6-1: Call Profile (Continued)	
Call-By-Call	<p>Refers to the AT&T switch-type voice services on line 1. This value is provided by your ISDN service provider.</p> <p>6 is the default. Any number between 0 and 31 is valid.</p> <p>N/A appears if Sig Mode is set to D&I.</p>
PRI# Type	<p>Refers to how the Multiband VSX should format ISDN PRI calls. This field is not required for configuring your Multiband VSX for operation, but is required for placing a call through the Configure profile (See Chapter 7, "Placing and Clearing Calls," for more details).</p> <p>Options are:</p> <p>Unknown if you do not know the format of the call.</p> <p>Intl if you are located in the U.S. or Canada and placing a phone call to another country</p> <p>National if you are in the U.S. or Canada and placing a phone call within the U.S. or Canada</p> <p>Local if you are placing a call within your Centrex group.</p> <p>Abbrev</p>
Transit #	<p>Refers to your PRI Interexchange Carrier for a long distance call. Generally, is the same characteristic digits used to prefix a phone number dialed over a BRI, T1 access, or voice interface. If you do not enter a value, any available IEC is used for long distance calls.</p> <p>N/A appears if your set 2nd Line to D&I or Sig Mode to Inband.</p>

7

Placing and Clearing Calls

If you configured the Multiband VSX so you can control dialing through your codec, you can place a call through either the codec or your Multiband VSX's user interface. Before placing a videoconference call, you need to determine the call type and, if necessary, the call management type you want to use for the call.

This chapter describes:

- ◆ Pre-defined Call profiles
- ◆ The considerations for selecting the call type and management type you need for a videoconference
- ◆ How to place a call through your codec
- ◆ How to place a call through the Multiband VSX user interface
- ◆ How to clear calls through your codec
- ◆ How to clear calls through the Multiband VSX user interface

If you have any questions about the types of calls and types of call management available on the Multiband VSX, see Chapter 1, "Videoconferencing with the Multiband VSX," in this *Operations Guide*.

See Chapter 3, "Configuration Overview," if you have any questions about dialing modes.

Pre-Defined Call Profiles

The Multiband VSX supports AIM, BONDING, and 2-channel call types. If you place an AIM call, you also need to determine the call management type you want to use.

For your convenience, several of the Call profiles have been preconfigured for the most common variations of call types. These Call profiles are listed in the Directory:

```
BRANCH EDIT EDIT
Directory
>*** 4155552222
01 1 port, 56k
02 1 port, 64k
03 2 port, 56k
04 2 port, 64k
05 Bond 56x6
06 Bond 64x6
07 AIM M 56x6
08 AIM M 64x6
09 AIM S 56x6
10 AIM S 64x6
11 AIM D 64x6
12 Bond 56x12
13 Bond 64x12
14 AIM M 56x12
15 AIM M 64x12
```

The Directory contains profiles preconfigured for:

- 1-channel call at 56 and 64kbps
- 2-channel calls at 56 and 64kbps
- BONDING calls at 56 and 64kbps (NX6 and NX12)
- AIM Manual calls at 56 and 64kbps (NX6 and (NX12)
- AIM Static calls at 56 and 64kbps (NX6)
- AIM Delta calls at 64kbps (NX6)

Considerations for Selecting a Call Type and Call Management Type

The type of call you select for a videoconference call depends on the type of communication device the remote site is using. If you can use an AIM call, the call management type depends on your codec's bandwidth requirements.

Call Type Considerations

To determine the call type you want to use for a videoconference call, contact the remote site and ask the following question:

- 1 **Which of the following describes the communication device you are using?**
 - ◇ Multiband VSX or other Ascend unit
 - ◇ Inverse multiplexer manufactured by anyone other than Ascend
 - ◇ ISDN Terminal Adapters (TA)
 - ◇ 2 Data Service Units (DSUs)
 - ◇ Communication device is installed in video codec
- 2 **Once you have identified the communication device used by the remote site, consult the following table to select a call type.**

Table 7-1: Call Types by Communication Device

Communication Device	Call Type
Multiband VSX or other Ascend Unit	AIM
Inverse multiplexer (non-Ascend)	BONDING
ISDN Terminal Adapter	2-channel
2 Data Service Units (DSUs)	2-channel
Communication device installed in video codec	2-channel

If you can place an AIM call, continue to the next section to determine the call management type you can use for the call.

If you must place a 2-channel or BONDING call type, continue to the section “Placing a Call Through Your Codec” on page 101 for instructions for placing a call.

AIM Call Management Type Considerations

An AIM Manual call is the most robust and feature rich of the three AIM call management types. It allows you to:

- ◆ Remotely manage a Multiband VSX
- ◆ Monitor for errors (such as bad channels and network slips)
- ◆ Manage bandwidth
- ◆ Control a session

AIM Manual calls usually work when the remote site’s videoconferencing setup matches yours:

- ◆ They are using an Ascend unit for inverse multiplexing
- ◆ Their codec is the same make and model as yours

However, there are certain circumstances in which an AIM Manual call may not work. For example, if your codec requires an exact clock rate (it expects to exchange data with the Multiband VSX at the same rate at which data is transferred over the communication’s link), you may experience audio or video distortions with an AIM Manual call.

In general, use the following guideline for selecting a call management type:

- ▲ **Try placing an AIM Manual call.**
- ▲ **If there are audio or video glitches with an AIM Manual call *and* you want to manage a Multiband VSX at a remote site, try placing an AIM Delta call; if you don’t care about management capabilities, try placing an AIM Static call.**
- ▲ **If there are audio or video glitches with an AIM Delta call try placing an AIM Static call.**

Placing a Call Through Your Codec

To place a call through your codec, you must have the Multiband VSX configured for a codec-controllable dialing mode. See Chapter 2, “Before You Connect Your Multiband VSX,” if you have any questions about how to configure the Multiband VSX to control dialing through your codec.

Consult the documentation for your codec for detailed instructions on how to place a call through your codec.

To Place a Call Using the Active Call Profile

To place a call using the active Call profile (the one you last used to place a call):

1 Press the key that initiates a call.

For example, on PictureTel codecs, the key is labeled “Video Call.”

When you press the key, the codec displays a request for a telephone number on the video screen.

2 Use the keypad to enter the phone number or numbers for the remote site and press the Enter key.

The codec displays a request for a second telephone number on the video screen.

3 If you are placing a 2-channel call enter the phone number for the second channel. Otherwise skip to the next step.

4 Press the key (usually the Enter key) that places the call.

The codec signals the Multiband VSX to dial a call, using the profile it last used to place a call. When the call connects, the image from the remote site is displayed in the monitor.

Placing and Clearing Calls

To Change the Call Profile and Place a Call

If you want to use a profile other than the active profile (the one you last used) to place a call, you must load the new Call profile:

1 Press the key that initiates the call.

For example, on PictureTel codecs, the key is labeled "Video Call."

When you press the key, the codec displays a request for a telephone number on the video screen.

2 Load a Call profile by pressing #0[call profile number] on the codec's keypad, and enter the phone number for the site to which you want to place the call.

The Call profile you use depends on the type of call (call type/call mgn) you want to place.

Call Type/Mgm	Profile #
1-channel	01: 56K 02: 64K
2-channel	03: 56K 04: 64K
BONDING	05: 56K 06: 64K
AIM/Manual	07: 56K 08: 64K
AIM/Static	09: 56K 10: 64K
AIM/Delta	11 (64K only)

If the Call profile has a phone number entered in the Dial # field, you do not have to enter a phone number.

- 3 **Press Enter.**
The codec displays a request for a second telephone number on the video screen.
- 4 **If you entered profile 03 or 04 in Step 2, enter #0[call profile you entered in Step 2], and the phone number for the second channel. Otherwise skip to the next step.**
- 5 **Press Enter.**
- 6 **Press the appropriate key (usually the Enter key) to place the call.**
The codec signals the Multiband VSX to dial the call using the Call profile you entered in the codec's keypad.

Placing a Call Through the Multiband VSX

You can place a call through the Configure profile, the Directory sub-menu, or a Call profile.

Placing a Call Through the Configure Profile

To place a call through the Configure Profile:



- 1 **If necessary, press **BSC** to get to the Main Edit Menu.**
- 2 **At the Main Edit Menu, with the cursor on Configure press **enter**.**

The Configure profile appears in the Edit window:

```

BRANCH EDIT EDIT
Configure...
My Name=Branch Edit
2nd Line=D&I
Line 1...
Line 2...
Dial #=
Call-by-Call=N/A
PRI # Type=N/A
Data Svc=56KR
Call Type=1 Chn1
Call Mgn=N/A
Dial=RS-366 Ext1
Answer=Auto
Clear=DTR Inactive
Early CD=None
Advanced...
>Save=

```

Placing and Clearing Calls

- 3 Press **ctrl** - **N** until the cursor reaches the Dial # field, then press **enter**. Brackets appear under the field:

```
Dial #:  
[ ]
```

- 4 Enter the phone number for the remote site in the brackets, then press **enter**. If you are placing a 2-channel call, enter the phone number as follows:

```
(1st channel number)!(2nd channel number)
```

The number you entered appears in the field. The following is an example of an entry for a 2-channel call:

```
>Dial #=4155552222!415552223  
Data Svc=56K
```

- 5 Press **ctrl** - **N** to move the cursor to Call-by-Call.
- 6 With the cursor on Call-by-Call, press **enter**, then type the call-by-call value provided to you by your service provider and press **enter** to accept it.
- 7 Press **ctrl** - **N** to move the cursor to PRI # Type and press **enter** until the appropriate selection appears in the field. Then press **ctrl** - **N** to move the cursor to Data Svc.
- 8 With the cursor on Data Svc, press **enter** until the appropriate selection appears in the field. Then press **ctrl** - **N** to move the cursor to Call Type.
- 9 With the cursor on Call Type, press **enter** until the call type you want to select for the call appears in the field.
- 10 Press **ctrl** - **N** until the cursor reaches the Call mgm field, then press **enter** until the call management option you want to select for the call appears in the field.
- 11 Press **ctrl** - **D** to display the Do menu.
The Do menu is displayed in the Edit window:

```

Ascend Multiband VSX
Configure
Dial #
P#Password
    
```

- 12 Press **ctrl-N** to move the cursor to 1=Dial, then press **enter**.
The Multiband VSX dials the call.



- 1 If necessary, press **ctrl-Z** to get to the Main Edit Menu.
- 2 At the Main Edit Menu, with the cursor on Configure press **right arrow**.
The Configure profile appears:

```

Configure...
>My Name=
Switch Type=
Line 1...
    
```

- 3 Press **down arrow** until the cursor reaches the Dial # field, then press **right arrow**.
Brackets appear under the field:

```

Dial #:
[ ]
    
```

- 4 Enter the phone number for the remote site in the brackets, then press **right arrow**.
If you are placing a 2-channel call, enter the phone number as follows:

(1st channel number)!(2nd channel number)

The number you entered appears in the field. The following is an example of an entry for a 2-channel call:

Placing and Clearing Calls

```
>Dial #=4155552222!415552223  
Data Svc=56K
```

- 5 Press **▼** to move the cursor to Call-by-Call.
- 6 With the cursor on Call-by-Call, press **▶**, then type the value that identifies your voice service and press **▶** to accept it.
- 7 Press **▼** to move the cursor to PRI # Type and press **▶** until the appropriate selection appears in the field. Then press **▼** to move the cursor to Data Svc.
- 8 With the cursor on Data Svc, press **▶** until the appropriate selection appears in the field. Then press **▼** to move the cursor to Call Type.
- 9 With the cursor on Call Type, press **▶** until the call type you want to select for the call appears in the field.
- 10 Press **▼** until the cursor reaches the Call mgm field, then press **▶** until the call management option you want to select for the call appears in the field.
- 11 Press **DO** to display the Do menu.

The Do menu is displayed in the Edit window:

```
01 1 port, 56k  
00...  
>0=Esc  
1=Dial
```

- 12 Press **▼** to move the cursor to 1=Dial, then press **▶**.

The Multiband VSX dials the call.

Placing a Call Through the Directory

You can place a call through the Directory using a Call profile that has a phone number entered in its Dial # field.

To place a call through the Directory:



- 1 If necessary, press **ESC** to get to the Main Edit Menu.
- 2 At the Main Edit Menu, press **ctrl - N** to move the cursor to Directory, then press **enter**.

The Directory submenu appears in the Edit window:

```
BRANCH EDIT EDIT
Directory
0** Factory
01 1 port, 56k
02 1 port, 64k
03 2 port, 56k
04 2 port, 64k
05 Bond 56x6
06 Bond 64x6
07 RIM N 56x6
08 RIM N 64x6
09 RIM S 56x6
10 RIM S 64x6
11 RIM D 64x6
12 Bond 56x12
13 Bond 64x12
14 RIM N 56x12
15 RIM N 64x12
```

- 3 Press **ctrl - N** until the cursor reaches the Call profile you want to select for placing a call.
- 4 Press **ctrl - D** to display the Do menu.

The Do menu is displayed in the Edit window:

```
BRANCH EDIT EDIT
Configura
DO...
P=Esc
I=Dial
P=Password
```

Placing and Clearing Calls

- 5 Press **ctrl-N** to move the cursor to 1=Dial, then press **enter**.
The Multiband VSX dials the call.



- 1 If necessary, press **sh-z** to get to the Main Edit Menu.
- 2 At the Main Edit Menu, press **v** to move the cursor to Directory, then press **>**.

The Directory submenu appears:

```
Directory
>***
 01 1 port, 56k
 02 1 port, 64k
```

- 3 Press **v** until the cursor reaches the Call profile you want to select for placing a call.
- 4 Press **do** to display the Do menu.

The Do menu is displayed in the Edit window:

```
01 1 port, 56k
00...
>0=Esc
1=Dial
```

- 5 Press **v** to move the cursor to 1=Dial, then press **>**.
The Multiband VSX dials the call.

Placing a Call Through a Call Profile

To place a call through a Call profile:



- 1 If necessary, press **ESC** to get to the Main Edit Menu.
- 2 At the Main Edit Menu, press **ctrl** - **N** to move the cursor to Directory, then press **enter**.

The Directory submenu appears in the Edit window:

```
BRANCH EDIT EDIT
Directory
> ** Factory, 56k
01 1 port, 56k
02 1 port, 64k
03 2 port, 56k
04 2 port, 64k
05 Bond 56x6
06 Bond 64x6
07 AIM H 56x6
08 AIM H 64x6
09 AIM S 56x6
10 AIM S 64x6
11 AIM D 64x6
12 Bond 56x12
13 Bond 64x12
14 AIM H 56x12
15 AIM H 64x12
```

- 3 Press **ctrl** - **N** until the cursor reaches the Call profile you want to select for placing a call. Then press **enter**.

The Call profile appears in the Edit window. For example:

```
BRANCH EDIT EDIT
02 1 port, 64k
>Name=1_port, 64k
Dial #=
Call Type=1 Chn1
Call Mgn=N/A
Data Suc=64K
Force 56=No
Base Ch Count=N/A
Call-by-Call=6
PRI # Type=National
Transit #=
```

Placing and Clearing Calls

- 4 Press **ctrl** - **D** to display the Do menu.

The Do menu is displayed in the Edit window:



- 5 Press **ctrl** - **N** to move the cursor to 1=Dial, then press **enter**.

The Multiband VSX dials the call.



- 1 If necessary, press **ESC**-**Z** to get to the Main Edit Menu.
- 2 At the Main Edit Menu, press **V** to move the cursor to Directory, then press **>**.

The Directory submenu appears:

```
Directory
>:**
01 1 port, 56k
02 1 port, 64k
```

- 3 Press **V** until the cursor reaches the Call profile you want to select for placing a call. Then press **>**.

The Call profile appears. For example:

```
08 AIM Manual 64k
>Name=AIM Manual 64k
Dial #=
Call Type=AIM
```

- 4 Press **DO** to display the Do menu.

The Do menu appears:

```
08 AIM Manual 64k
00...
>0=Esc
1=Dial
```

- 5 Press **V** to move the cursor to 1=Dial, then press **>**.

The Multiband VSX dials the call.

Clearing a Call

You can clear a call from either your codec or the Multiband VSX's user interface.

Clearing a Call From Your Codec's Keypad

To clear a call from your codec's keypad:

- ▲ Press the appropriate key to clear the call.

The call is cleared.

Clearing a Call from the Multiband VSX

To clear a call from the Multiband VSX's user interface:



- 1 Press **ctrl** - **D** to display the Do menu.

The Do menu is displayed in the Edit window:



- 2 Press **ctrl** - **N** to move the cursor to 2=Hang Up, then press **enter**.

The Multiband VSX clears the call.



- 1 Press **DO** to display the Do menu.

The Do menu appears:



- 2 Press **V** to move the cursor to 2=Hang Up, then press **▶**.

The Multiband VSX clears the call.

Placing and Clearing Calls

8

Implementing Security

Once you have configured your Multiband VSX, you should protect your configured profiles from unauthorized or inadvertent edits. Three Security profiles let you protect your configuration:

- ◆ 01 Default Security

The default profile lets you define the set of profiles for which edit privileges are *not* restricted by a password.

- ◆ 02 [User defined name]

This profile lets you define the set of profiles for which you want to restrict edit privileges with a password.

- ◆ 03 Full Access

This level of security allows, with a password, edit privileges for all profiles.

To implement security on the Multiband VSX, you edit the Security profile, then activate the profile.

Editing a Security Profile


To edit a Security profile:

1 Get to the Security profile you want to edit.

The following illustrations shows how to go from the Main Edit menu to a Security profile.



- 1 At the Main Edit Menu, select Security and press **enter** to display the Security submenu.
- 2 At the Security submenu, select a Security profile and press **enter** to display it.

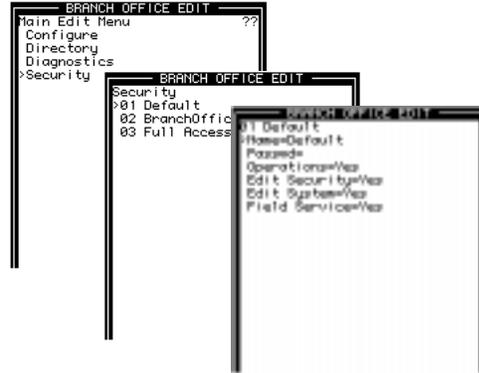

- 1 At the Main Edit Menu, select Security and press **>** to display the Security submenu.
- 2 At the Security submenu, select a Security profile and press **>** to display it.



2 Use the information in Table 8-1: Security Profile, on page 117, to set the parameters.

Table 8-1: Security Profile	
Name	Enter a descriptive name for the Security profile. This field is read only for 01 Default and 03 Full Access.
Passwd	Enter the password you want to assign to this Security profile. The password you enter here restricts users to the parameters you define below. This field is read only for 01 Default.
Operations	No if you want to restrict the manual placement and clearing of calls and performance of any on-line diagnostics associated with a connection. If you select No in this field, N/A appears in all other fields. Yes (default) if you do not want to restrict the manual placement and clearing of calls and performance of any on-line diagnostics associated with a connection. This field is read only for 03 Full Access.
Edit Security	No if you want to restrict edit privileges to Security profiles. Yes (default) if you do not want to restrict edit privileges to Security profiles. This field is read only for 03 Full Access.
Edit System	No if you want to restrict edit privileges to profiles other than Security profiles. Yes (default) if you do not want to restrict edit privileges to profiles other than Security profiles. This field is read only for 03 Full Access.
Field Service	No if you want to restrict access to the terminal server interface and Ascend-provided field service operations (such as the upload of new software). Yes (default) if you do not want to restrict access to Ascend-provided field service operations. This field is read only for 03 Full Access.

Activating a Security Profile

Follow the steps below to activate a Security profile:



- 1 From anywhere in the user interface, press **ctrl** - **D** to display the Do menu.

The Do menu appears in the Edit window:



- 2 Press **ctrl** - **N** until the cursor reaches P=Password. Then press **enter** to select it.

A message appears asking you to select the Security profile you want to activate:



- 3 If necessary, press **ctrl-N** to move the cursor to the Security profile you want to select. Then press **enter** to select it.

A message appears asking you for your password:



- 4 Type the appropriate password in the brackets and press **enter** to accept it.

The following message appears briefly in the Edit window:



When the message disappears, the profile or submenu from which you accessed the System Do menu appears in the Edit window.

Implementing Security



- 1 From anywhere in the user interface, press **DO** to display the Do menu.

The Do menu appears:

```
Configure...
>0=Esc
1=Diag
```

- 2 Press **V** until the cursor reaches P=Password. Then press **>** to select it.

A message appears asking you to select the Security profile you want to activate:

```
Configure...
Security profile...?
>00-301 Default
```

- 3 If necessary, press **V** to move the cursor to the Security profile you want to select. Then press **>** to select it.

A message appears asking you for your password:

```
Configure...
Enter Password:
[ ]
```

- 4 Type the appropriate password in the brackets and press **>** to accept it.

The following message appears briefly:

```
Message #117
Profile stored
```

When the message disappears, the profile or submenu from which you accessed the System Do menu appears.

9

Managing Videoconference Calls

AIM Manual and AIM Delta calls let you take advantage of the Multi-band VSX's on-line management capabilities.

Both types of call management allow you to manage the Ascend unit at the remote site.

In addition, if you have the Upgrade Module installed, AIM Manual calls let you add and subtract bandwidth during a call, which gives you a tool for managing the quality of the videoconference session.

This chapter describes:

- ◆ How to adjust for audio or video problems
- ◆ How to manage the Ascend unit at the remote site
- ◆ How to add bandwidth during a videoconference call
- ◆ How to subtract bandwidth during a videoconference call

Managing the Ascend Unit at the Remote Site

If you placed a call using AIM Manual or Delta as the call management type, you can manage the Ascend unit at the remote site.



- 1 While a call is up, press **ctrl** - **D** to display the Do Menu.

The Do menu appears in the Edit window:

```

07 AIM Manual 55k
DO...
0=Esc
2=Hang Up
4=Contend BU
3=Contract BU
6=Beg/End Rem LB
7=Beg/End Rem Term
P=Password
R=Resynchronize
S=Save
L=Load
    
```

- 2 Press **ctrl** - **N** to move the cursor to 7=Beg/End Rem Term, and press **enter**.

The remote site's Edit window and status windows appear in the User Interface. The following is an example of an Ascend MAX unit.

REMOTE EDIT		
<pre> Main Edit Menu >00-000 System 10-000 Net/T1 20-000 Host/Dual 30-000 Host/ATM6 40-000 Host/Dual 50-000 Host/BRI 60-000 Net/BRI 70-000 Ethernet 80-000 Empty </pre>	<pre> 10-100 1234567890 L1/LA *-----* 12345678901234 -----s </pre>	<pre> 10-200 1234567890 L2/LA nnn----- 12345678901234 -----nnn </pre>
	<pre> 21-100 Plus BRI 0 ONLINE 44K 1 channels </pre>	<pre> 21-200 02:16:59 0 >M31 Line Ch Handshake Complete </pre>
	<pre> 31-100 Factory IDLE 0K 0 channels </pre>	<pre> 31-200 05:02:53 >M31 Line Ch Call Terminated </pre>
	<pre> 41-100 Factory IDLE 0K 0 channels </pre>	<pre> 00-200 02:16:51 >M31 Line 01 Ch 10 Incoming Call MBID 097 </pre>

Press Ctrl-n to move cursor to the next menu item. Press return to select it. ■
 Press Tab to move to another window --- thick border indicates active window.

Adjusting for Audio or Video Problems



If the remote site does not appear on your video screen, try the following:

1 Make sure your call is connected.

Look at the 21-100 status window to see if the message “Online” appears. If “Online” appears, proceed to the next step.

If “Idle” appears in the status window, place the call again.

2 Press **ctrl - **D** to display the Do Menu.**

The Do Menu appears in the Main Edit window:



3 In the Do menu, press **ctrl - **N** until the cursor reaches R=Resynchronize, and press **enter**.**

The image from the remote end should appear on the video screen. If it does not, see Chapter 11, “Troubleshooting.”

Managing Videoconference Calls



1 Make sure your call is connected.

Look at the 21-100 status window to see if the message “Online” appears. If Online appears, proceed to the next step.

If “Idle” appears in the status window, place the call again.

2 Press **DO** to display the Do Menu.

The Do Menu appears in the Main Edit window:

```
Ø1 1 port, 56k
00...
>Ø=Esc
```

3 In the Do menu, press **V** until the cursor reaches R=Resynchronize, and press **>**.

The image from the remote end should appear on the video screen. If it does not, see Chapter 11, “Troubleshooting.”

Adding Bandwidth to a Videoconference Call

If the videoconference call is an AIM Manual call *and* you have the Upgrade Module installed, you can add bandwidth to the call to see if it improves the quality of the audio or video image.

To add bandwidth to a call:



- 1 While a call is up, press **ctrl**-**D** to display the Do Menu.

The Do menu appears in the Edit window:

```

PLUS BR EDIT
21-1** br: test 0
00...
>0=Esc
2=Hang Up
4=Extend BW
5=Contract BW
6=Beg/End Rem LB
7=Beg/End BERT
8=Beg/End Rem Term
P=Password
R=Resynchronize
S=Save
    
```

- 2 Press **ctrl**-**N** to move the cursor to 4=Extend BW, and press **enter**.

Messages displayed in status windows 21-100 and 21-200 track the progress of the added bandwidth. For example:

21-100 Bridge Port S0 SETUP ADD/ONLINE 64K 1 channels	21-200 16:04:50 S0 >M31 Line Ch Handshake Complete
21-100 Bridge Port 1 HANDSHAKE 128K 2 channels	21-200 16:07:45 1 >M31 Line Ch Added Bandwidth 01 Channels
1-100 Bridge Port 0 ONLINE 128K 2 channels	21-200 16:07:45 0 >M31 Line Ch Added Bandwidth 01 Channels

Managing Videoconference Calls



- 1 While a call is up, press **DO** to display the Do Menu.

The Do menu appears in the Edit window:

```
01 1 port, 56k
00...
>0=Esc
```

- 2 Press **V** to move the cursor to 4=Extend BW, and press **➤**.

Messages displayed in status windows 21-100 and 21-200 track the progress of the added bandwidth.

Subtracting Bandwidth

Once you have added bandwidth to the call, you can subtract it at any time.



- 1 While a call is up, press **ctrl**-**D** to display the Do Menu.

The Do menu appears in the Edit window:

```

PLUS BRI EDIT
21-11* br-i test 0
DO
>0=Esc
2=Hang Up
4=Extend BW
5=Contract BW
6=Req/End Rem LB
7=Req/End BERT
8=Req/End Rem Term
P=Password
R=Resynchronize
S=Save
    
```

- 2 Press **ctrl**-**N** to move the cursor to 5=Contract BW, and press **enter**.

Messages displayed in status windows 2-100 and 21-200 track the progress of the bandwidth being subtracted from the call.

21-100 Bridge Po+ ! HANDSHAKE 128K 2 channels	21-200 16:09:12 ! >M31 Line Ch Removed Bandwidth 01 Channels
21-100 Bridge Po+ 0 ONLINE 128K 2 channels	21-200 16:09:12 0 >M31 Line Ch Removed Bandwidth 01 Channels

Managing Videoconference Calls



- 1 While a call is up, press **DO** to display the Do Menu.

The Do menu appears in the Edit window:

```
01 1 port, 56k
00...
>0=Esc
```

- 2 Press **V** to move the cursor to 4=Extend BW, and press **>**.

Messages displayed in status windows 21-100 and 21-200 track the progress of the added bandwidth.

10 Advanced Configuration

Using Advanced configuration parameters you can customize certain Multiband VSX operations. This chapter:

- ◆ Describes how to get to Advanced configuration parameters
- ◆ Contains a table that lists the parameters and describes options in each field

Overview of Advanced Configuration

The Advanced configuration parameters allow you to do the following:


- ◆ Change the default rate at which the Multiband VSX communicates with your communications program
- ◆ Change the user interface to a command line (MIF) interface
- ◆ Prevent the Multiband VSX from being managed from a remote site
- ◆ Configure the Multiband VSX to dial multiple channels simultaneously
- ◆ Configure the Multiband VSX to revert to the default Security profile if it detects no user activity for the amount of time specified in the Idle logout field
- ◆ Defines the duration of time the Multiband VSX should wait before reverting to the default Security profile
- ◆ Disable the dual port feature



If you have any questions about changing Multiband VSX operations using any parameter listed under Advanced, check with your system administrator or other technical advisor before attempting to edit any of them.

Getting to Advanced Configuration Parameters

Advanced configuration parameters are accessible through the Configure profile, illustrated below:

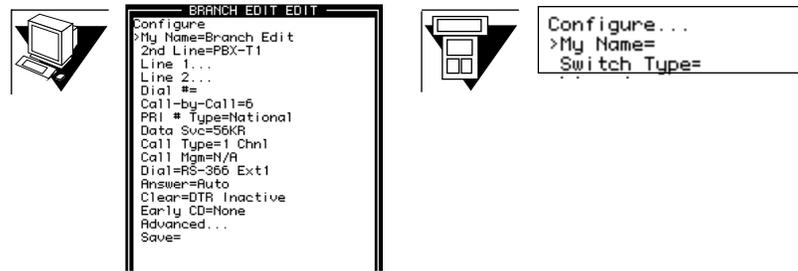

- 1 If necessary, press **esc** until the Configure profile appears in the Main Edit window.
- 2 Press **ctrl-N** to move the cursor to Advanced, and press **enter**.
Advanced parameters appear in the Main Edit window when you press **enter**:



- 3 Use the information in Table 10-1 on page 133 to change the Advanced configuration parameters.

If you have any questions about how to change the parameters, review Chapter 5, "User Interface."

Advanced Configuration



- 1 If necessary, press **Esc-Z** until the Configure Profile appears in the Main Edit window.
- 2 Press **V** to move the cursor to Advanced, and press **Enter**.
Advanced parameters appear in the Main Edit window when you press **Enter**:

```
Configure
Advanced...
>Term Rate=9600
```

- 3 Use the information in Table 10-1 on page 133 to change the Advanced configuration parameters.
If you have any questions about how to change the parameters, review Chapter 5, "User Interface."

Table 10-1: Advanced Configuration Parameters

Term Rate	Tells the Multiband VSX the rate at which it should talk to your communications program. 9600 is the default.
Console	Tells the Multiband VSX the system software interface you want it to display. Options are: Standard (default) displays the Edit window and 8 status windows. MIF (Machine Interface Format) displays a command-line interface.
Remote Mgmt	Yes (default) if you want to allow the Multiband VSX to be managed from a remote site. No if you do <i>not</i> want to allow the Multiband VSX to be managed from a remote site.
Parallel Dial	Tells the Multiband VSX how many channels it can dial at once. If you are using the base unit only, 1 or 2 are valid entries. If the Upgrade Module is installed, any number between 1 and 8 is valid.
Auto Logout	Yes if you want the Multiband VSX to automatically log out of a session when it is disconnected from the computer's com port or the PalmTop Controller for the amount of time specified in the Idle logout field. If you select Yes in this field, you must enter a value in the Idle logout field. No (default) if you do <i>not</i> want the Multiband VSX to automatically log out.
Idle Logout	Refers to the number of minutes you want the Multiband VSX to wait after it is disconnected from the computer's com port or PalmTop Controller before it logs out of a session. Any number between 0 and 60 is valid.
Dual Port Enable	Tells the Multiband VSX to perform dual port videoconferencing. 1&2 Dual (default) if you want the second port to be active. No if you do <i>not</i> want the second port to be active.

11

Troubleshooting

This chapter contains a description of problems you could run into while configuring or conducting videoconferences using the Multiband VSX, as well as instructions for diagnosing problems and some suggestions for solving them.

This chapter is divided into the following sections:

- ◆ Problems Configuring the Multiband VSX
- ◆ Test Call Failures
- ◆ Problems Conducting Videoconferences

Problems Configuring the Multiband VSX

There are two symptoms described in this section:

- ◆ No profile appears when you start your communications program
- ◆ A profile appears, but it isn't the Configure profile

No Profile Appears When I Start my Communications Program

If no profile appears when you start your communications program, one of the following could be the problem:

- ◆ Your Multiband VSX is not receiving power
- ◆ Your Multiband VSX is not connected to the serial port of your computer or a PalmTop Controller
- ◆ Your communication program is not configured correctly for your Multiband VSX
- ◆ There is a hardware problem with the Multiband VSX

Follow the steps below to diagnose and correct the problem.

- 1 Check the POWER LED on the front panel of the Multiband VSX.



If the POWER LED is not on, the unit is not receiving power. It may not be connected to a power source. Continue to step 2.

If the light is on, continue to step 4.

2 Connect your Multiband VSX to a power source.

If your Multiband VSX is plugged into a power strip or surge protector, make sure the power strip or surge protector is plugged in and turned on.

Once you are sure the Multiband VSX is connected to a power source, if the POWER LED is on, continue to step 3.

If the POWER LED is still not on, contact the Ascend Technical Assistance Center at 1-800-ASCEND-4.

3 Check the FAULT LED

If the FAULT LED goes off within 30 seconds after you have connected the Multiband VSX to a power source, continue to step 4.

FAULT LED should go off within 30 seconds after you power it up.



If the FAULT LED is blinking or on more than 30 seconds after you have connected the Multiband VSX to a power source, contact the Ascend Technical Assistance Center at 1-800-ASCEND-4.

4 Press **ctrl-L to refresh the screen.**

If no profile appears, continue to step 5.

If a profile appears but it isn't the Configure profile, go to the next section, "A Profile Appears But It Isn't the Configure Profile."

5 Check to see if your Multiband VSX is connected to your computer's serial port.

If necessary, connect the Multiband VSX to your computer. Then continue to step 6.

If your Multiband VSX is connected to your computer, continue to step 6.

6 Press **ctrl-L to refresh the screen.**

If no profile appears, continue to step 7.

If a profile appears but it isn't the Configure profile, go to the next section, "A Profile Appears But it Isn't the Configure Profile."

7 Check to see if your communications program is configured for the Multiband VSX.

Your communications program should be configured as follows:

VT100
9600 bits per second
8 data bits
No parity
1 stop bit
No flow control
Direct connect

8 Press `ctrl-L` to refresh the screen.

If a profile appears but it isn't the Configure profile, continue to the next section.

A Profile Appears But It Isn't the Configure Profile

If a profile other than the Configure profile appears when you power up the Multiband VSX, it may have already been configured.

- ▲ Either press `esc` until the Main Edit Menu appears, then choose Configure from the Main Edit Menu, or
- ▲ Unplug the Multiband VSX and plug it in again.

Test Call Failures

If your test call fails, it may be due to one of the following:

- ◆ The Multiband VSX may not be connected to your T1 lines
- ◆ The Multiband VSX may not be talking to the switch
- ◆ There is a problem with the Multiband VSX's configuration
- ◆ There may be a problem with the cables that connect the Multiband VSX to your Codec
- ◆ There is a network problem

The steps in the following sections give you guidelines for diagnosing and resolving problems with your test call.

Check Your T1 Connection

If question marks appear in the upper right hand corner of windows in the user interface (see the illustration below this paragraph), you may not be connected to your T1 line.



If no questions marks appear, continue to the section “Check Your Cables.”

1 If necessary, connect to your T1 lines.

See Chapter 2, “Connecting your Multiband VSX,” if you have any questions about how to connect your Multiband VSX to your T1 line.

Once you are sure you are connected to your T1 line, check to see if the question marks still appear in the windows.

Troubleshooting

If question marks still appear in the windows, proceed to the next section “Check to See if the Multiband VSX Is Talking to the Switch.”

If they no longer appear, try your call again. If you still have problems with the test call, proceed to step 2.

- 2 **If you are sure you are connected to your T1 lines and the test call still fails, check for an ISDN cause code.**

Cause codes appear in the 00-200 status window. For example:

```
00-200 00:05:16
>M31 Line 01 Ch 01
No Connection
Cause code 042
```

Refer to Appendix D, “ISDN Cause Codes,” for information on how to interpret ISDN Cause codes.

Check to See if the Multiband VSX Is Talking to the Switch

If your test call fails and you are sure you are connected to your T1 line, the Multiband VSX may not be configured correctly.

Try the following:

- ▲ **Compare the values entered in the Switch type or Line parameters fields on the Configure profile with the information you entered in the Configuration table in Chapter 2, “Before You Connect Your Multiband VSX.”**

If necessary, make any corrections.

If the information in the Configure profile matches the information entered in the configuration table, contact your service provider to make sure the table reflects the correct information. Make any necessary adjustments.

Once you are sure the configuration information is entered correctly in the Configure profile, try the call again.

If the call still fails, proceed to the next section.

Check Your Cables

The cables you received from Ascend for connecting your Multiband VSX to your codec are specific to your codec type.

- 1 Make sure your cables are connected securely to the Multiband VSX and your codec.**

If necessary, secure the cables tightly, then try the test call again.

If you are sure both ends of the cables are securely fastened and your test call still fails, continue to the next step.

- 2 Compare the part number imprinted on the cable you received for your codec with the part numbers listed in “What Is in Your Multiband VSX Package” on page 26 of this manual to verify that you received the correct cables for your codec.**

If the cables are appropriate, proceed to the next step.

If you received the wrong cable, contact the Ascend Technical Assistance Center at 1-800-ASCEND-4.

Troubleshooting

- 3 Press **esc** to get to the Main Edit Menu. At the Main Edit Menu, press **ctrl-N** until the cursor reaches Diagnostics, then press **enter** to select it.

The Diagnostics submenu appears in the Main Edit window:

```
BRANCH OFFICE EDIT
Diagnostics
>01 Restore Cfg
02 Save Cfg
03 Use MIF
04 Sys Reset
05 Local LB
```

- 4 Press **ctrl-N** to move to 05 Local LB and press **enter** to select it.
- 5 Press **ctrl-N** to move to CD, and press **enter** until Active appears in the field.

If the message "Loop mast" appears in the 21-100 status window, your cables are okay:

```
21-100 Bridge Po+ L
LOOP MAST
56K      1 channels
```

If the message does not appear, contact the Ascend Technical Assistance Center at 800 ASCEND-4 (800 272-3634).

- 6 Press **esc** twice to exit from the Local LB submenu.

The Main Edit Menu appears in the Edit window. Continue to the next step.

Check To See if the Multiband VSX Can Place and Receive Calls

If your cables are okay, check to see if the your carrier service is a problem:

1 Dial a known phone number using the Multiband VSX.

If the call goes through, you know you can place calls. Continue to the next step.

If the call does not go through, contact your T1 service provider.

2 Have someone call the telephone number or numbers (My num A and/or My num B) you entered in your Configure profile.

If the calling party can reach you, your carrier service is not the problem. Contact the Ascend Technical Assistance Center at 1-800-ASCEND-4 and describe the steps you have taken to diagnose the problem.

If the calling party cannot reach you, your carrier service may be the problem. Contact your service provider.

Problems Conducting Videoconferences

There are generally two types of problems while conducting videoconferences:

- ◆ Audio or video distortions
- ◆ No image appears in the video screen

The following sections provide some guidelines for resolving problems when conducting videoconferences.

Audio and/or Video Distortions

If you experience audio and/or video problems during a videoconference call, you may need to place the call again using a different call type and/or management type.

- ◆ If you placed an AIM Manual call, try placing it again using AIM Delta as the call type and management type. Dial more channels than you did in Manual mode.

Troubleshooting

- ◆ If you placed an AIM Delta call, try placing it again using AIM Static as the call type and management type.
- ◆ If you place an AIM Static call, try placing it again using BONDING as the call type.
- ◆ If your BONDING call does not work, try placing the call again using 2-channel as the call type.

Remote Site Image Does Not Appear in the Video Screen

If you cannot see the remote site when you place your call, try the following:

1 Make sure your call is connected.

Look at the 21-100 status window to see if the message "Online" appears. If "Online" appears, proceed to the next step.

If "Idle" appears in the status window, place the call again.

2 Press **ctrl-D to display the Do Menu.**

The Do Menu appears in the Main Edit window:



3 In the Do menu, press **ctrl-N until the cursor reaches R=Resynchronize, and press **enter**.**


The image from the remote end should appear on the video screen. If it does not, continue to the next step.

- 4 In the Do menu, press **ctrl-N** until the cursor reaches 2=Hang Up, then press **enter**.

The call is cleared and the message "Idle" appears in the 21-100 status window. Proceed to the next step.

- 5 Press **esc** to get to the Main Edit Menu. At the Main Edit Menu, press **ctrl-N** until the cursor reaches Diagnostics, then press **enter** to select it.

The Diagnostics submenu appears in the Main Edit window:

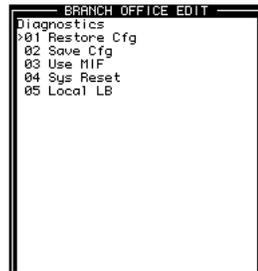

- 6 Press **ctrl-N** to move to 06=Beg/End Rem LB and press **enter** to initiate remote loopback.

If you see an image on the video screen, you do not have a problem at your site. Contact the remote site and request that they perform a remote loopback procedure. If the remote site sees an image on their video screen when they perform remote loopback, the problem may be with the network. Continue to the next step.

If you do not see an image at your site when you perform a remote loopback operation, continue to the next step.

- 7 With the cursor on 06=Beg/End Rem LB, press **enter** to end remote loopback.

If you have determined that the problem may be with the network, contact your T1 service provider. Otherwise, continue to the next step.

- 8 Press **esc** to exit from the Do Menu. If necessary, continue pressing **esc** until the Main Edit menu appears in the Edit window.

- 9 Press **ctrl-N** to move the cursor to Configure and press **enter** to select it. The Configure profile appears in the Edit window.



- 10 Press **ctrl-N** to move the cursor to Clear, and press **enter** until Terminal appears in the field.
- 11 Press **ctrl-D** to display the Do Menu.



- 12 Press **ctrl-N** to move the cursor to 1=Dial, then press **enter**. The Multiband VSX places a call to the far side. If you see an image in the video screen when the call connects, the problem may be with your codec. Consult the manual for your codec. If you do not see an image, contact the Ascend Technical Assistance Center at (800) ASCEND-4 (272-3634).

A

Cable Pinouts

The tables in this Appendix identify the pinouts for your codec cables.

Cable Pinouts

V.35 / RS-366 Cable to CLI

This cable (model number MBHD-V35CLI, part number 2510-0094-001) is used to connect to V.35 ports of the Compression Labs Rembrandt II codec with support for RS-366 dialing. It has the following pinouts:

Pair #	Signal	ABC MAX Male DB-44	Host V.35/RS-366 Male DB-25
1	V.35 FGND V.35 DTR	1 8	1 8
2	V.35 SD+ V.35 SD-	26 27	2 14
3	V.35 RD+ V.35 RD-	2 3	3 15
4	V.35 ST+ V.35 ST-	4 5	4 16
5	V.35 RT+ V.35 RT-	14 15	5 17
6	V.35 DSR V.35 DCD/CTS	6 36	6 19
7	V.35 RTS V.35 RI	7 43	7 18
8	V.35 TT+ V.35 TT-	16 17	4 16
9	RS-366 DPR RS-366 ACR	9 10	9 10
10	RS-366 CRQ RS-366 PND	11 12	11 12

Pair #	Signal	ABC MAX Male DB-44	Host V.35/RS-366 Male DB-25
11	RS-366 DLO SGND	13 25	13 25
12	RS-366 NB1 RS-366 NB2	21 22	21 22
13	RS-366 NB4 RS-366 NB8	23 24	23 24
14	RX/SEL	28, 44*	

* Pin positions separated by commas are jumped to each other.

Cable Pinouts

V.35 / RS-366 Cable to PT

This cable (model number MBHD-449PT, part number 2510-0093-001) is used to connect to V.35 ports of the PictureTel codec with support for RS-366 dialing. It has the following pinouts:

Pair #	Signal	ABC MAX Male DB-44	Host Female DB-37	RS-366 Female DB-25
1	FGND	1	1	
2	SD+ SD-	26 27	4 22	
3	RD+ RD-	2 3	6 24	
4	ST+ ST-	4 5	5 23	
5	RT+ RT-	14 15	8 26	
6	DSR DCD/CTS	6 36	11 9, 13*	
7	RTS RI	7 43	7 15	
8	DTR SGND	8 25	12 19, 20, 37*	
9	TT+ TT-	16 17	17 35	
10	DPR ACR	9 10		2 3
11	CRQ PND	11 12		4 5

Cable Pinouts

Pair #	Signal	ABC MAX Male DB-44	Host Female DB-37	RS-366 Female DB-25
12	DLO SGND	13 25		22 7
13	NB1 NB2	21 22		14 15
14	NB4 NB8	23 24		16 17
15	DSC	36		13
16	RX/SEL	28, 44*		

* Pin positions separated by commas are jumped to each other.

RS-449 / RS-366 / DB-37 Cable to VTC

This cable (model number MBHD-449VTC, part number 2510-0081-001) is used to connect to RS-449 ports of the VTel codec with support for RS-366 dialing. It has the following pinouts:

Pair #	Signal	ABC MAX Male DB-44	Host RS-449/RS-366 Male DB-37
1	FGND FGND	1 1	1 19
2	SD+ SD-	29 30	4 22
3	RD+ RD-	40 39	6 24
4	ST+ ST-	42 41	5 23
5	RT+ RT-	37 38	8 26
6	DSR DCD/CTS	6 36	2 9, 11, 18*
7	RTS RI	7 43	7 15
8	DTR SGND	8 25	12 37
9	RS-366 DPR RS-366 ACR	9 10	14 3
10	RS-366 CRQ RS-366 PND	11 12	10 33
11	RS-366 DLO	13	21

Cable Pinouts

Pair #	Signal	ABC MAX Male DB-44	Host RS-449/RS-366 Male DB-37
12	RS-366 NB1	21	16
	RS-366 NB2	22	28
13	RS-366 NB4	23	32
	RS-366 NB8	24	34
14	RX/SEL	20, 28*	

* Pin positions separated by commas are jumped to each other.

** This cable does not support terminal timing.

Cable Pinouts

B

Uploading System Software

System software is continually being enhanced to support new features and improve performance by the Multiband VSX. The Multiband VSX is designed so that you can upgrade the system software and take advantage of these new features without returning the unit to the factory.

Contact the Ascend Technical Assistance Center at (800) 272-3634 for information about the latest version of system software and how to get it, then follow the instructions on the following pages to upgrade the system software on your Multiband VSX.

What You Need to Upgrade System Software

To upgrade the system software you need the following:

- ◆ The upgraded system software (supplied by Ascend Communications, Inc.)
- ◆ A personal computer with a serial port to which you can connect the Multiband VSX. If you receive the upgraded software on a floppy disk, you also need a 3.5" floppy disk drive attached to your computer.
- ◆ A communication program that supports VT100 terminal emulation and Xmodem transfer. It must be configured as follows:
 - VT100 emulation
 - 9600 bits per second
 - 8 data bits
 - No parity
 - 1 stop bit
 - No flow control
 - Direct connect
 - Sending and receiving ASCII text



If you are using a Macintosh communications program, Macbinary must be turned off.

Upgrading System Software

Upgrading system software is a three- or four-part process, depending on the Security profile that is currently activated. The steps required can include:


- 1 If necessary, activate a Security profile that allows for field upgrade.
- 2 Save your configured profiles to your computer's hard disk.
- 3 Download the system software to the Multiband VSX.
- 4 Restore your configured profiles to the Multiband VSX.

Instructions for completing these tasks are described in this appendix. Before you go any further, check to see which version of the system software is currently installed on your Multiband VSX and which Security profile is activated.

- ▲ With your communication program open, press **ctrl-L** to refresh the screen; verify the version of the system software that is currently running and determine which Security profile is activated.

The software version and active Security profile appear in the 00-100 Sys Option status window:

The version of the software currently installed on your Multiband VSX as well as the active Security profile appear in the 00-100 Sys Option status window.

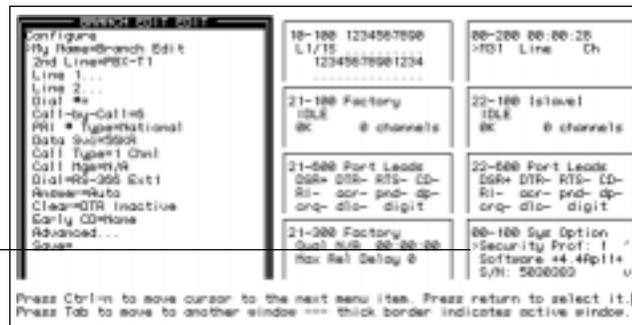

Activate a Security Profile that Allows for Field Upgrade

If the Security profile that is currently activated has Field Service disabled, you need to activate a Security profile that has Field Service enabled in order to upgrade your system software.


- 1 From anywhere in the Configuration Software, press **ctrl** - **D** to display the Do menu.

The Do menu appears in the Edit window:



- 2 Press **ctrl** - **N** until the cursor reaches P=Password. Then press **enter** to select it.

The Configuration Software asks you to select the Security profile for which you want to enter a password:

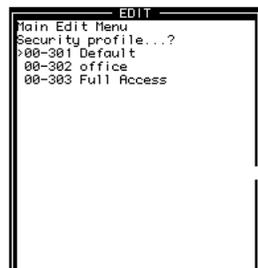

Uploading System Software

- 3 If necessary, press **ctrl-N** to move the cursor to the Security profile you want to activate. Then press **enter** to select it.

The Configuration Software asks you for your password:



- 4 In the brackets, type the password for the profile you want to activate. Then press **enter** to accept it.

The following message appears briefly in the Edit window:



When the message disappears, the Configuration Software returns to the profile or submenu from which you accessed the Do menu.

You are now ready to save your configured profiles to your computer's hard disk. Continue to the next section.

Saving Your Configured Profiles

This procedure lets you save all configured profiles (except the password for your Security profiles) to your computer's hard disk.

⇒NOTE⇒

Field Service must be enabled on all Security profiles before you can save your system software to your hard disk.

- 1 If necessary, press **esc** until you see the Main Edit Menu in the Edit window.



- 2 At the Main Edit Menu, Press **ctrl** - **N** to move the cursor to Diagnostics, then press **enter**.

The Diagnostics submenu appears in the Edit window:



- 3 Press **ctrl** - **N** to move the cursor to 02 Save Config. Then press **enter**.

The following message appears:

Ready to download - type any key to start...

- 4 **Turn on the capture feature of your communications program and name the file to which you want to save your configured profiles.**

Consult the documentation for your communications program if you have any questions about how to turn on the capture feature.

- 5 **Press any key to start saving your configured profiles.**

Rows of configuration information are displayed on the screen as the file is downloaded to your hard disk. When the file has been downloaded to your hard disk file, your communications program displays a message indicating that the download is complete.

⇒NOTE⇒

You can abort the save process at any time by typing **ctrl** - **C**.

- 6 **Turn off the capture feature of your communications program.**

Consult the documentation for your communications program if you have any questions about how to turn off the capture feature.

- 7 **Print a copy of your configured profiles for later reference.**

If the printed copy seems to have fewer lines than what was displayed as the file was downloaded, repeat the save process.

You are now ready to upgrade the system software to your Multiband VSX. Continue to the next section.

Upgrading System Software

Contact the Ascend Technical Assistance Center at (800) 272-3634 for upgraded software.

WARNING▶▶

Uploading system software overwrites all existing profiles. Save your current profiles to your hard disk before you begin upgrading system software or you will have to reconfigure all your profiles. See “Saving Your Configured Profiles” earlier in this chapter.

- 1 In rapid succession, type the following key sequence:

`esc [esc - D enter .`

You must type all four keys within one (1) second in order for the Multiband VSX to recognize the sequence.

When the Multiband VSX recognizes the key sequence, it begins displaying the following string of Xmodem control characters:

CKCKC

- 2 As soon as the Xmodem strings are displayed, use the Xmodem file transfer protocol to send the upgraded system software file to the Multiband VSX.

If you have any questions about how to send files using the Xmodem file protocol, consult the documentation for your communications program.

⇒NOTE⇒

If you are using a Macintosh communications program, make sure Macbinary is turned off.

Your communications program begins sending the file to your Multiband VSX. This normally takes anywhere from 5 to 15 minutes.

⇒NOTE⇒

The time displayed on the screen does not represent real time. Don't worry if your communication program displays several “bad batch” messages. This is normal.

Uploading System Software

When the upload process is complete, the Multiband VSX resets itself. When the self-test is complete, the Configure profile appears in the Edit window with all parameters set to default values.

```
BRANCH EDIT EDIT
Configure
>My Name=Branch Edit
2nd Line=PBX-T1
Line 1...
Line 2...
Dial #=
Call-by-Call=5
PRI # Type=National
Data Svc=56KR
Call Type=1 Chnl
Call Nam=N/A
Dial=RS-366 Ext1
Answer=Auto
Clear=DTR Inactive
Early CD=None
Advanced...
Save=
```

You are ready to restore your configured profiles to your Multiband VSX. Continue to the next section.

Restoring your Configured Profiles

Once you have upgraded your system software, you can restore your saved configured profiles.

To restore configured profiles:

- 1 Press **ESC** until the Main Edit Menu appears in the Edit window.

```
BRANCH OFFICE EDIT
Main Edit Menu
>Configure
Directory
Diagnostics
Security
```

- 2 Press **ctrl** - **N** to move the cursor to Diagnostics. Then press **esc**.

The Diagnostics submenu appears in the Edit window with the cursor on Restore Cfg:

```
BRANCH OFFICE EDIT
Diagnostics
>01 Restore Cfg
02 Save Cfg
03 Use MIF
04 Sys Reset
05 Local LB
```

- 3 With the cursor on Restore Cfg, press **enter**.

The following message appears:

```
Waiting for upload data...
```

- 4 Send the configured profiles you saved to your hard disk to the Multiband VSX.

If you have any questions about how to send an ASCII file, consult the documentation for your communication program.

When the configured profiles have been restored, the following message appears:

```
Restore complete - type any key to return to menu
```

5 Type any key to display the Edit and status windows.

When you type any key, the Main Edit Menu appears in the Edit window:



All configured profiles that you saved are restored to the Multiband VSX except for the password on your Security profiles.

⇒NOTE⇒

If the upgraded system software includes new parameters, you may have to reconfigure some parameters, as well as configure the new parameters.

6 If you want to activate security on your Multiband VSX, set the password on the appropriate Security profile.

If you have any questions about how to activate Security profiles, see Chapter 5, “Implementing Security.”

C

LEDs

POWER LED comes on when the Multiband VSX is connected to a power source and stays on until it is disconnected from the power source.



WAN LED is on if there is an active session on either port.

FAULT LED comes on during self-test. If it stays on longer than 30 seconds, or if the light blinks, there is a problem with the unit. See Chapter 11, "Troubleshooting,".

LEDs

D

ISDN Cause Codes

ISDN cause codes help you diagnose problems with calls. They appear in the 00-200 System Events status window:

ISDN cause codes are displayed in the 00-200 System Events status window.

The screenshot shows a terminal window titled "BRANCH EDIT EDIT" with a thick border. The left pane contains configuration details for a branch, including line names, dial numbers, and call management settings. The right pane displays status for three ISDN lines: 10-100, 21-100, and 21-300. Line 10-100 is in a "Factory" state, while lines 21-100 and 21-300 are in an "IDLE" state. A bottom status bar provides navigation instructions.

```
BRANCH EDIT EDIT
Configure
My Name=Branch Edit
2nd Line=PBX-T1
Line 1...
Line 2...
Dial #=
Call-by-Call=6
PRI # Type=National
Data Svc=56KR
Call Type=1 Chnl
Call Mgm=N/A
Dial=RS-366 Ext1
Answer=Auto
Clear=DTR Inactive
Early CD=None
Advanced...
Save=

10-100 1234567890
L1/16 .....
12345678901234
.....

21-100 Factory
IDLE
0K 0 channels

22-100 [slave]
IDLE
0K 0 channels

21-500 Port Leads
DSR+ DTR- RTS- CD-
RI- acr- pnd- dp-
crq- d1o- digit

22-500 Port Leads
DSR+ DTR- RTS- CD-
RI- acr- pnd- dp-
crq- d1o- digit

21-300 Factory
Qual N/A 00:00:00
Max Rel Delay 0

00-100 Sys Option
>Security Prof: 1
Software +4.4Rp11+
S/N: 5030383

Press Ctrl-n to move cursor to the next menu item. Press return to select it.
Press Tab to move to another window --- thick border indicates active window.
```

Table D-1, "ISDN Cause Codes," on page 168, lists all ISDN cause codes.

ISDN Cause Codes



The cause codes listed on this table are not valid for German 1TR6 networks (WANs).

Table D-1: ISDN Cause Codes

Code	Cause
1	Unallocated (unassigned) number.
2	No route to specified transit network (WAN).
6	Channel unacceptable.
16	Normal clearing.
17	User busy.
18	No user responding.
21	Call rejected.
22	Number changed.
28	Invalid number format (incomplete number).
29	Facility rejected.
30	Response to STATUS ENQUIRY.
31	Normal, unspecified.
34	No circuit/channel available.
38	Network (WAN) out of order.
41	Temporary failure.
42	Switching equipment congested.
43	Access information discarded.
44	Requested circuit channel not available.
45	Pre-empted.
50	Requested facility not subscribed.
52	Outgoing calls barred.

Table D-1: ISDN Cause Codes (Continued)

Code	Cause
54	Incoming calls barred.
58	Bearer capability not presently available.
63	Service or option not available, unspecified.
65	Bearer service not implemented.
66	Channel type not implemented.
69	Requested facility not implemented.
81	Invalid call reference value.
82	Identified channel does not exist.
88	Incompatible destination.
96	Mandatory information element is missing.
97	Message type non-existent or not implemented.
98	Message not compatible with call state, or message type non-existent or not implemented.
100	Invalid information element contents.
102	Recovery on timer expired.
127	Internetworking, unspecified.

ISDN Cause Codes

E

System Event Messages

System event messages display all the events that have happened on the Multiband VSX since it was powered up. They appear in the 00-200 System Events status window:

```

BRANCH EDIT EDIT
Configure
>My Name=Branch Edit
2nd Line=PBX-T1
Line 1...
Line 2...
Dial #=
Call-by-Call=6
PRI # Type=National
Data Svc=56KR
Call Type=1 Chnl
Call Mgm=N/A
Dial=RS-366 Ext1
Answer=Auto
Clear=DTR Inactive
Early CD=None
Advanced...
Save=

10-100 1234567890
L1/IS .....
12345678901234
.....

21-100 Factory
IDLE
0K 0 channels

22-100 [slave]
IDLE
0K 0 channels

21-500 Port Leads
DSR+ DTR- RTS- CD-
RI- acr- pnd- dp-
crq- dlo- digit

22-500 Port Leads
DSR+ DTR- RTS- CD-
RI- acr- pnd- dp-
crq- dlo- digit

21-300 Factory
Qual N/A 00:00:00
Max Rel Delay 0

00-100 Sys Option
>Security Prof: 1 ^
Software +4.4Rp11+
S/N: 5030383 v

Press Ctrl-n to move cursor to the next menu item. Press return to select it.
Press Tab to move to another window --- thick border indicates active window.

```

Table E-1, “System Events,” on page 172, lists all possible system event messages and their meaning.

System Event Messages

Table E-1: System Events

Event Message	Meaning
Busy	The phone number was busy when the call was dialed.
No Connection	The far end did not answer when the call was dialed.
No Channel Avail	No channel was available to dial the initial call.
Not Enough Chans	A request to dial multiple channels or to increase bandwidth could not be completed because there were not enough channels available at that time.
No Chan Other End	No channel was available on the far end to establish the call.
Network Problem	The call setup was faulty because of problems within the WAN network or in the Line Profile configuration.
Call Disconnected	The call has ended unexpectedly.
Far End Hung Up	The far end terminated the call normally.
Internal Error	Call setup failed because of a lack of system resources, such as insufficient memory. If this type of error occurs, notify the Ascend Technical Assistance Center.
Incoming Glare	Multiband VSX could not place a call because it saw an incoming “glare” signal from the switch. If you receive this error message, you probably have selected incorrect Line Profile parameters. Glare occurs when an incoming call was placed simultaneously with an outgoing one.
Wrong Sys Version	The far-end product version was incompatible with the near-end Multiband VSX. The software version appears on the 00-100 Sys Option status menu.

Table E-1: System Events (Continued)

Event Message	Meaning
Request Ignored	The request to manually change bandwidth during a call was denied because the Call Mgm Call Profile parameter had the value <i>Dynamic</i> . With this value, Multiband VSX only allows automatic bandwidth changes.
Remote Mgmt Denied	A request to run the far-end Multiband VSX by AIM remote management was rejected because the Remote Mgmt System Profile parameter at the far end had the value <i>No</i> .
Call Refused	An incoming call could not be connected to the specified serial host port because the resource was busy or otherwise unavailable.
No Phone Number	No phone number exists in the Call Profile being dialed.
Not FT1-B&O	The local Multiband VSX attempted to connect an FT1-B&O call to the far-end, but the call failed because the call type at the far end was not FT1-B&O.
No system DS0 Mins	No maximum has been specified for the Max DS0 Mins System Profile parameter.
No port DS0 Mins	No maximum has been specified for the Max DS0 Mins or Max Call Mins Port Profile parameter.
Dual Port req'd	The call could not be placed because both ports of the dual-port pair were not available.

System Event Messages

Index

Numerics

- ? (question mark) flashing 62, 82, 83
- 00-200 System Events status window 86
- 00-301 Default 115
- 00-301 Default Security profile 115
- 00-302 user-defined security profile 115
- 00-303 Full Access profile 115
- 22-100 Host 2 or Slave Port Status Window 87
- 56kbps, Data Svc value 95
- 56KR, Data Svc value 95
- 64kbps, Data Svc value 95

A

- activating
 - security after upgrading system software 164
 - security system 117
- active connections, status window information 87
- AIM Manual 8
- AIM Static 8
- Ascend Communications
 - contacting iv
 - customer service iv
- Ascend Technical Assistance Center 155, 161

Index

B

BONDING

- described 9
 - Mode 0 9
 - Mode 1 9
- brackets xi

C

cabling

- RS-449/RS-366 152
- V.35 for RS-366 dialing 150
- V.35/RS-366 150
- V.35/RS-366 to CLI 148

call type

- AIM Delta 8
- AIM static 8

call types

- described 7
- Canadian digital apparatus regulations iii
- Ch status window indicator 86

clearing calls

- restricting manual clearing 117

CLI

- codec-controllable dialing modes for 13
- Multiband VSX-controllable dialing modes for 14
- suggested AIM call type 10

codec

- controllable dialing modes 13
- suggested AIM call types for 10

command font xi

communications software

- Macintosh computers 155
- Computer icon xi

- configuration
 - editing profiles 72–73
 - single-LAN access from remote site 63
 - upgrading system software 164
- Configuration Table 25
- Configure profile 82, 83
 - illustration of 12
- configured profiles
 - restoring 162–164
 - saving 159–160
- connections
 - single-LAN remote site 63
 - status window information 87
- customer service iv
- D**
- default security profile
 - overview 115
- defaults
 - changing for profiles 72, 73
- Do menu
 - illustrated 76, 78, 118, 120, 157
 - saving protected profiles 76, 78, 118, 120, 157
- Dyn Status status window 86
- E**
- Edit Security, security profile parameter 117
- Edit System, security profile parameter 117
- Edit window
 - overview 62

Index

- editing profiles 72, 73
 - entering information directly 73
 - restricting edit privileges 117
 - security profiles 117
 - selecting from multiple choices 72
- electronic mail address for Ascend iv
- e-mail address for Ascend iv
- Enter key xi
- error information 171
- Ethernet submenu
 - getting to 63
- events
 - types of 171
 - status window information 86
- F**
- FCC rules iii
- Federal Communications Commission rules iii
- field service operations
 - enabling 157–158
- field service operations, restricting access 117
- Field Service, security profile parameter 117
- fields
 - entering information directly 73
 - selecting information from multiple choices 72
- flashing question marks 62, 82, 83
- full access security profile
 - overview 115

G**GPT/BT**

- dialing modes for 13
- Multiband VSX-controllable dialing modes for 14
- suggested AIM call type 10

I

Installing the Upgrade Module 38

Internet address for Ascend iv

inverse multiplexers

- and switced digital services 4
- defined 4

ISDN

- WAN interface problems 167

L

Line status window indicator 86

M

M status window indicator 86

M31 Line Ch status window field 86

Macbinary 155

Macintosh communications software 155

Main Edit Menu

- getting to 66
- illustrated 63
- overview 63
- submenus 64

map, profile 155, 165, 171

Index

menus

- Configure menu 83
 - Do menu 76, 78, 118, 120, 157
 - Main Edit Menu 63
 - navigating 66
 - submenus 64
- Mitsubishi
- suggested AIM call type 10
- Multiband VSX
- back panel 35
 - features 2
 - instructions for connecting to 36

N

Name

- security profile parameter 117

naming

- security profiles 117

navigating

- Configuration Software menus and profiles 71
- paths to profiles 71
- status window information 68
- user interface menus and profiles 66

No

- Edit Security value 117
- Edit System value 117
- Field Service value 117
- Operations value 117

O

- on-line diagnostics, restricting performance 117
- Operations, security profile parameter 117
- outbound calls
 - restricting manual placement 117

P

- PalmTop Controller icon xi
- parameters
 - entering information directly 73
 - selecting information from multiple choices 72
 - upgrading system software 164
- Passwd, security profile parameter 117
- passwords
 - security profile parameter 117
 - security profile types and 115
 - upgrading system software 164
- phone numbers
 - Ascend Communications iv
- PictureTel
 - codec-controllable dialing modes for 13
 - Multiband VSX-controllable dialing modes for 14
- PictureTel 1000
 - suggested AIM call type 10
- PictureTel 3000
 - suggested AIM call type 10
- PictureTel 4000
 - suggested AIM call type 10
- placing calls
 - restricting manual placement 117

Index

profiles

- navigation to 66
- overview 66
- paths to 71
- profile map 155, 165, 171
- restoring configured profiles 162–164
- saving configured profiles 159–160

Q

- question mark (?) flashing 62, 82, 83

R

- radio interference iii
- remote site connections
 - single-LAN site 63
 - status window information 87
- Restarting 80
- restoring configured profiles 162–164
- Return key xi
- RS-366
 - dialing interface
 - RS-449 cable for 152
 - V.35 cable for 148, 150
- RS-449 cable 152

S

Saving 74

saving

 configured profiles 159–160

security

 activating after upgrading system software 164

 passwords 77–78, 79, 117, 118, 119, 120, 157, 158

 profiles 117

security passwords 115

security profiles 116–117

 default profile 115

 full access profile 115

 parameters 94, 117

 passwords 77–78, 79, 115, 117, 118–119, 120, 157–158

 restricting edit privileges 117

 user-defined profile 115

selecting

 profile parameters 72

 profiles to edit 66

 status windows 68

 submenu items 67

service and support iv

status windows 82, 83

 illustrated 65

 interpreting information 84–89

 moving to and between 68

 overview 62, 82, 83

submenus

 choosing items 67

 overview 64

support iv

System Events status window 86

Index

T

Technical Assistance Center 155, 161

telephone numbers

Ascend Communications iv

troubleshooting

flashing question marks 62, 82, 83

ISDN cause codes 167–169

restricting on-line diagnostics 117

Two channel call

defined 9

U

Upgrade Module

installing 38

upgrading system software

enabling Field Service 157–158

overview 156

requirements 155

restoring configured profiles 162–164

saving configured profiles 159–160

uploading system software 161–162

uploading system software 161–162

user-defined security profile 115

V

V.35 cable 150

variables indicator xi

Videoconferencing

components 3

Voice, Data Svc value 95

VTel

dialing modes for 13

Multiband VSX-controllable dialing modes for 14

suggested AIM call type 10

W

windows

- Edit window 62
- status windows 62, 83–94

Y

Yes

- Edit Security value 117
- Edit System value 117
- Field Service value 117
- Operations value 117