

The Ascend Command-Line Interface

*Ascend Communications, Inc.
Part Number: 7820-0549-001
For Software Version 1.3A
September 26, 1997*

Ascend is a registered trademark and MAX TNT is a trademark of Ascend Communications, Inc. Other trademarks and trade names mentioned in this publication belong to their respective owners.

Copyright © 1997, Ascend Communications, Inc. All Rights Reserved.

This document contains information that is the property of Ascend Communications, Inc. This document may not be copied, reproduced, reduced to any electronic medium or machine readable form, or otherwise duplicated, and the information herein may not be used, disseminated or otherwise disclosed, except with the prior written consent of Ascend Communications, Inc.

Ascend Customer Service

You can request assistance or additional information by telephone, email, fax, or modem, or over the Internet.

Obtaining Technical Assistance

If you need technical assistance, first gather the information that Ascend Customer Service will need for diagnosing your problem. Then select the most convenient method of contacting Ascend Customer Service.

Information you will need

Before contacting Ascend Customer Service, gather the following information:

- Product name and model
- Software and hardware options
- Software version
- Service Profile Identifiers (SPIDs) associated with your product
- Your local telephone company's switch type and operating mode, such as AT&T 5ESS Custom or Northern Telecom National ISDN-1
- Whether you are routing or bridging with your Ascend product
- Type of computer you are using
- Description of the problem

How to contact Ascend Customer Service

After you gather the necessary information, contact Ascend in one of the following ways:

Telephone in the United States	800-ASCEND-4 (800-272-3634)
Telephone outside the United States	510-769-8027 (800-697-4772)
Austria/Germany/Switzerland	(+33) 492 96 5672
Benelux	(+33) 492 96 5674
France	(+33) 492 96 5673
Italy	(+33) 492 96 5676
Japan	(+81) 3 5325 7397
Middle East/Africa	(+33) 492 96 5679
Scandinavia	(+33) 492 96 5677
Spain/Portugal	(+33) 492 96 5675
UK	(+33) 492 96 5671
Email	support@ascend.com
Email (outside US)	EMEAsupport@ascend.com

Facsimile (FAX)	510-814-2312
Customer Support BBS by modem	510-814-2302

You can also contact the Ascend main office by dialing 510-769-6001, or you can write to Ascend at the following address:

Ascend Communications
1701 Harbor Bay Parkway
Alameda, CA 94502

Need information about new features and products?

Ascend is committed to constant product improvement. You can find out about new features and other improvements as follows:

- For the latest information about the Ascend product line, visit our site on the World Wide Web:
`http://www.ascend.com`
- For software upgrades, release notes, and addenda to this manual, visit our FTP site:
`ftp.ascend.com`

Contents

	Ascend Customer Service	iii
Chapter 1	Introduction	1-1
	What is in this guide.....	1-2
	Related publications	1-2
	Documentation conventions.....	1-2
Chapter 2	Getting Started	2-1
	Logging in	2-2
	What commands are available?.....	2-2
	Getting help on a specific command.....	2-3
	Command-line shortcuts	2-4
	Using abbreviations	2-4
	Editing a command line	2-4
	Reusing commands (command history).....	2-5
	Using command-line shortcuts to save time	2-6
Chapter 3	Working with Profiles	3-1
	Commands for working with profiles	3-2
	Profile types and indexes	3-2
	Profiles related to connections and logins	3-3
	System-wide profiles	3-4
	Profiles for configuring physical devices	3-5
	Profiles for configuring a local IP interface.....	3-7
	Profiles for routing calls to a device or item.....	3-8
	Modifying the working profile.....	3-9
	Reading and writing a profile	3-9
	Listing the working profile	3-9
	Parameter types and syntax.....	3-10
	Setting parameters in the working profile.....	3-11
	Combining command-line shortcuts to set parameters	3-11
	Changing contexts in the working profile.....	3-12
	Subprofiles	3-12
	Listing a subprofile	3-13
	Moving back up to the previous context.....	3-13
	Setting values in a subprofile.....	3-13
	Parameters with array values	3-14
	Listing an array	3-14
	Moving back up to the previous context.....	3-14
	Setting array values.....	3-15

Creating new profiles	3-15
Using the New command.....	3-15
Specifying a new index value for a configured profile.....	3-16
Chapter 4	
Viewing Status Information.....	4-1
Commands for viewing status information	4-2
Getting information about the system.....	4-3
Displaying the call-routing database.....	4-3
Checking the fatal error log	4-4
Toggling real-time log message display	4-4
Displaying user session status information.....	4-4
Getting information about slot cards.....	4-5
Using the Show command	4-5
Checking the status of HDLC channels	4-6
Checking modem status	4-6
Working with the status window	4-7
Opening and closing the status window.....	4-7
Default contents of the window	4-8
Connection status information	4-8
General status information.....	4-9
Log messages	4-9
T1 line information	4-10

Figures

Figure 3-1	Back panel of a MAX TNT shelf	3-6
Figure 3-2	Addressing an individual T1 line.....	3-7
Figure 4-1	Information in the status window	4-8

Tables

Table 1-1	Documentation conventions.....	1-2
Table 2-1	Command classes and User profile permissions.....	2-3
Table 2-2	Control sequences for editing command lines	2-5
Table 3-1	Commands related to profiles	3-2
Table 3-2	Commands related to the working profile	3-2
Table 3-3	Parameter types and syntax.....	3-10
Table 4-1	Commands for displaying status information	4-2

Introduction

This introduction covers the following topics:

What is in this guide.	1-2
Related publications.	1-2
Documentation conventions.	1-2

What is in this guide

This guide shows you how to use the Ascend command-line interface. It describes how to enter commands to modify profiles and parameters, and provides useful tips on command-line shortcuts. It also shows how to view status information at the command-line interface.

This guide assumes that you have already installed the MAX TNT system, set up a PC with a serial connection, turned on the MAX TNT, and performed the recommended configuration steps that are displayed on the screen the first time you boot up. If you have not already finished those tasks, please see the *MAX TNT Hardware Installation Guide*.

Related publications

The other guides in the MAX TNT documentation set provide technical information about configuring the unit. The MAX TNT documentation set includes the following manuals:

- *The Ascend Command-Line Interface* (this manual). Shows you how to use the MAX TNT command-line interface effectively.
- *MAX TNT Hardware Installation Guide*. Shows how to install the MAX TNT hardware and use the command-line interface to configure its slot cards for a variety of supported uses. Describes how calls are routed through the system. Includes the MAX TNT technical specifications.
- *MAX TNT Network Configuration Guide*. Describes how to use the command-line interface to configure WAN connections and other related features.
- *MAX TNT RADIUS Guide*. Describes how to use RADIUS to configure WAN connections and other related features.
- *MAX TNT Reference Guide*. An alphabetic reference to all MAX TNT profiles, parameters, and commands.

Documentation conventions

This section shows the documentation conventions used in this guide.

Table 1-1. Documentation conventions

Convention	Meaning
Monospace text	Represents text that appears on your computer's screen, or that could appear on your computer's screen.
Boldface monospace text	Represents characters that you enter exactly as shown (unless the characters are also in <i>italics</i> —see <i>Italics</i> , below). If you could enter the characters, but are not specifically instructed to, they do not appear in boldface.

Table 1-1. Documentation conventions (continued)

Convention	Meaning
<i>Italics</i>	Represent variable information. Do not enter the words themselves in the command. Enter the information they represent. In ordinary text, italics are used for titles of publications, for some terms that would otherwise be in quotation marks, and to show emphasis.
[]	Square brackets indicate an optional argument you might add to a command. To include such an argument, type only the information inside the brackets. Do not type the brackets unless they appear in bold type.
	Separates command choices that are mutually exclusive.
>	Points to the next level in the path to a parameter. The parameter that follows the angle bracket is one of the options that appears when you select the parameter that precedes the angle bracket.
Key1-Key2	Represents a combination keystroke. To enter a combination keystroke, press the first key and hold it down while you press one or more other keys. Release all the keys at the same time. (For example, Ctrl-H means hold down the Control key and press the H key.)
Press Enter	Means press the Enter, or Return, key or its equivalent on your computer.
Note:	Introduces important additional information.
 Caution:	Warns that a failure to follow the recommended procedure could result in loss of data or damage to equipment.
 Warning:	Warns that a failure to take appropriate safety precautions could result in physical injury.

Getting Started

This chapter covers the following topics:

Logging in	2-2
What commands are available?	2-2
Getting help on a specific command	2-3
Command-line shortcuts	2-4

Logging in

The first step in accessing the MAX TNT command line is to log into the system. You can log in from a PC connected to the unit's serial port, or from a PC that has Telnet access to the system. When you log in, you are prompted for a user name:

```
User :
```

If you are logging in for the first time and need the default password assigned to the MAX TNT Admin login, see the *MAX TNT Hardware Installation Guide*.

If an administrator has already created a User profile for you and given you the name and password required to use it, you can log in by supplying that information. In addition to specifying a name and password, a User profile sets permissions that determine which classes of commands you can use. Alternatively, you might be able to log in as the Admin user, with full permissions. (For more information about permissions and command classes, see the next section.)

Typically, the name specified in your User profile appears as your system prompt. For example, if you log in as Admin, the following prompt appears:

```
admin>
```

This guide assumes that you have the permissions required to perform all of the tasks described. For sake of example, it shows the Admin login prompt, but the actual prompt on your screen could represent any login with comparable permissions. For example:

```
User: joann  
Password: joann-password  
joann>
```

You can display the name of the current User profile by entering the Whoami command:

```
admin> whoami  
admin
```

What commands are available?

To display the commands that your User profile makes available, enter the Help (or ?) command. The following example shows the commands available for the Admin login. The left column shows command names, and the right column shows the command *class*, which determines the permissions required to use the command. To list all commands, even if you do not have the required permissions, append the `-a` option to the Help command.

```
admin> ?  
? ( user )  
arptable ( system )  
auth ( user )  
callroute ( diagnostic )  
clear ( user )  
clock-source ( diagnostic )  
clr-history ( system )  
connection ( system )  
date ( update )
```

```

debug                ( diagnostic )
delete               ( update )
device               ( diagnostic )
dir                  ( system )
dircode              ( system )
ether-display        ( diagnostic )
fatal-history        ( system )
format               ( code )
fsck                 ( code )
get                  ( system )
hdlc                 ( system )
help                 ( user )
if-admin             ( diagnostic )
[More? <ret>=next entry, <sp>=next page, <^C>=abort]

```

The last line in the sample output:

```
[More? <ret>=next entry, <sp>=next page, <^C>=abort]
```

shows your options for displaying additional output.

- Press Return to display one more line of output.
- Press the Space key to display another page (22 lines) of output. If the status window is open, the Space key displays another 5 lines of output.
- Press Ctrl-C to cancel any further output from the Help (?) command.

Table 2-1 lists the command classes and associated permissions in a User profile.

Table 2-1. Command classes and User profile permissions

Command class	Permission
System	allow-system = yes
Diagnostic	allow-diagnostic = yes
Update	allow-update = yes
Code	allow-code = yes

For more information about commands, see the *MAX TNT Reference Guide*.

Getting help on a specific command

If you include a command name after the Help (or ?) command, the system displays a usage statement for the command name you specify. For example, to get information about the Dir command:

```

admin> ? dir
dir                list all profile types
dir profile-type   list all profiles of the specified type
dir profile-type profile-index list the specified profile instance

```

Online help for a command that requires arguments appears if you enter the command without the arguments.

For more information about the Dir command, see Chapter 3, “Working with Profiles.”

Command-line shortcuts

You can use abbreviations, edit existing command lines, and reuse previously entered commands to save keystrokes and time.

Using abbreviations

When you enter a command, you can type just enough characters to specify a unique string. The MAX TNT fills in the rest of the name automatically. For example, the following two commands are equivalent:

```
admin> iproute
usage:
iproute add <destination/size> <gateway> [ pref ] [ metric ]
iproute delete <destination/size> [gateway]

admin> ipr
usage:
iproute add <destination/size> <gateway> [ pref ] [ metric ]
iproute delete <destination/size> [gateway]
```

The same principle applies when you specify a profile name. For example, the following command:

```
admin> dir e
```

results in an error message, because the string is not unique. But the following command:

```
admin> dir ether
```

displays information about Ethernet profiles:

```
88 08/14/1996 14:20:53 { shelf-1 controller 1 }
```

This principle applies to any command argument except profile indexes, which must be specified fully. For example, the following two commands are equivalent:

```
admin> load boot-sr net host1 tntsr.bin
admin> load b n host1 tntsr.bin
```

Editing a command line

Table 2-2 lists commands you can use to correct typing mistakes in a command line or to reuse and modify previous commands. If you cannot use an arrow key for a command that requires one, use the equivalent VT100 escape sequence.

Table 2-2. Control sequences for editing command lines

Control Sequence	Effect
Ctrl-H, Backspace, Delete	Erase the previous character.
Ctrl-D	Erase the current character.
Ctrl-W	Erase the previous (space-delimited) word.
Ctrl-U	Erase the entire line.
Ctrl-K	Erase the rest of the line to the right of the cursor position.
Ctrl-C	Echo ^C, terminate the input, and return ^C character input.
Ctrl-P or Up Arrow	Replace the line with the previous line from the command history buffer. Twenty previous lines are kept.
Ctrl-N or Down Arrow	Select the next line. This sequence is valid only if Ctrl-P or Up Arrow has been used to select a previous line.
Ctrl-B or Left Arrow	Back up the cursor without deleting a character. If you then type non-control characters, they are inserted in the line.
Ctrl-F or Right Arrow	Move the cursor to the right, unless at the end of a line.
Ctrl-A	Go to the beginning of the line.

Reusing commands (command history)

The command history buffer is a file containing the last 20 command lines. Once the buffer is full, it discards the oldest command line when you add a new one by pressing Enter to execute a command.

To redisplay a command line, press Up Arrow or Ctrl-P until the command reappears on the screen. You can then re-execute the command by pressing Enter. To edit the command first, see “Editing a command line” on page 2-4.

For example, you might type the following command and press Enter:

```
admin> read ip-interface {{1 c 1}0}
```

Then, if you press the Up Arrow key, the command line reappears:

```
admin> read ip-interface {{1 c 1}0}
```

The cursor is at the end of the line. Say you want to replace the *c* in the interface address with a 2. Press the Left Arrow key until the cursor is at the right edge of the *c*, then press Delete, then the 2 key:

```
admin> read ip-interface {{1 2 1}0}
```

Press Enter to execute the new command. The cursor can be positioned anywhere within the command line when you press Enter.

Using command-line shortcuts to save time

The next chapter describes how to work with profiles and set MAX TNT configuration parameters. It also provides an example of how to combine the command-line shortcuts described in this chapter to see the range of possible values for a parameter and set the parameter quickly and efficiently. (See “Combining command-line shortcuts to set parameters” on page 3-11.)

Working with Profiles

This chapter covers the following topics:

Commands for working with profiles	3-2
Profile types and indexes	3-2
Modifying the working profile	3-9
Changing contexts in the working profile	3-12
Creating new profiles	3-15

Commands for working with profiles

Some commands for working with profiles operate at a directory level, displaying information about any profile in the system. Other commands operate only on the *working* profile—the profile that has been read into the system’s edit buffer.

Table 3-1 lists MAX TNT commands related to working at the directory level with profiles:

Table 3-1. *Commands related to profiles*

Command	Purpose
Dir	Displays a directory listing of profiles.
Delete	Deletes a profile created previously by the administrator.
Get	Displays the contents of any profile or subprofile without reading the profile into the edit buffer.
New	Creates a new default instance of a specified profile type and makes it the working profile.
Read	Reads a profile into the edit buffer, where it can be modified. Reading a profile makes it the working profile.

Table 3-2 lists MAX TNT commands that operate only on the working profile:

Table 3-2. *Commands related to the working profile*

Command	Purpose
List	Lists the contents of the current context (nested level) in the working profile.
Set	Sets the value of a parameter in the working profile.
Write	Writes the contents of the edit buffer to flash memory.

For information about each command, see the *MAX TNT Reference Guide*.

Profile types and indexes

A profile is a group of configuration parameters related to a particular purpose. Different *types* of profiles are supported; for example, Connection profiles contain parameters related to a WAN connection, and T1 line profiles contain parameters related to configuring a T1 line.

To see a list of profile types on your system, use the Dir command:

```
admin> dir
ADMIN-STATE          SNMP Administrative State
ANSWER-DEFAULTS     Answer profile
```

BASE	System version and enabled features
CALL-INFO	Active call information
CALL-ROUTE	Call routing attributes
CONNECTION	Connection (WAN) profiles
DEBUG	Debug Profile
DEVICE-STATE	Device Operational State
ERROR	Fatal Error log
ETHERNET	Ethernet interfaces
EXTERNAL-AUTH	External authentication info
FILTER	Filter Profile
FIREWALL	Firewall Profile
FRAME-RELAY	Frame-Relay link configuration
IP-GLOBAL	Global TCP/IP parameters
IP-INTERFACE	IP interfaces
IP-ROUTE	Static IP routes
LAN-MODEM	LAN Modem Disable State
LOG	System event logging configuration
RADIUS-STATS	RADIUS statistics
SERIAL	Serial interfaces

[More? <ret>=next entry, <sp>=next page, <^C>=abort]

The left column shows a list of profile types in the system, and the right column describes the purpose of that profile type. In many cases, there may be more than one profile of a given type. Each profile of the same type must have a unique *index*, which may be a name or an address within the system.

To list all profiles of a given type, specify the profile type on the command line. For example, to view the two User profiles that ship with the system:

```
admin> dir user
   9  07/07/1997 12:49:24  default
  33  07/08/1997 14:20:28  admin
```

In this command output, the leftmost column shows how many bytes of flash memory are used to store the profile. The second and third columns show the date and time the profile was last modified. The rightmost column shows the profile's index—in this case, a name.

Profiles related to connections and logins

Profiles related to connections and logins are created by the administrator, and the administrator deletes them when they are no longer needed. The maximum number of these profiles is limited only by flash memory. The profiles are indexed by a name assigned by the administrator. They include:

- Connection profiles
- Filter profiles
- Firewall profiles
- Frame-Relay profiles
- IP-Route profiles
- User profiles

To display or create one of the profiles, you must specify its index on the command line. For example:

```
admin> get user default
name* = default
password = ""
active-enabled = yes
allow-termserv = no
allow-system = no
allow-diagnostic = no
allow-update = no
allow-password = no
allow-code = no
allow-debug = no
idle-logout = 0
prompt = *
default-status = no
top-status = general-info
bottom-status = log-window
left-status = connection-list
use-scroll-regions = no
log-display-level = none
```

When you list the profile's contents, you'll see an asterisk next to the Name parameter, indicating that this is the profile's index:

System-wide profiles

Profiles related to the configuration of the unit itself, or to routing within the system, are present when the unit ships. These profiles do not require an index, because only one instance of the profile can exist. System-wide profiles include:

- Answer-Defaults profile
- Base profile
- External-Auth profile
- IP-Global profile
- Log profile
- SNMP profile
- System profile
- Terminal-Server profile

To display the contents one of these profiles, you simply specify the profile type on the command line. For example:

```
admin> get system
name = test-224
system-rmt-mgmt = yes
use-trunk-groups = no
idle-logout = 0
parallel-dialing = 2
single-file-incoming = yes
analog-encoding = u-law
```

```
sessionid-base = 0
t-online = no
call-routing-sort-method = item-first
t-online-offset = 0
shelf-controller-type = standalone
master-shelf-controller = 1
```

Profiles for configuring physical devices

Profiles related to configuring physical devices (line profiles) are created by the system when it first detects the presence of a particular card. These profiles are indexed by their physical address within the MAX TNT system. Each type of card or built-in port has a related profile type, for example:

- Ethernet profiles
- E1 profiles
- Serial profile
- SWAN profiles
- T1 profiles
- T3 profiles

and so forth, depending on the types of cards installed in the system. For example, if you install an eight-port T1 card in shelf 1, slot 13 of the MAX TNT, the system creates the following profiles:

```
admin> dir t1
155 07/11/1997 15:50:31 { shelf-1 slot-13 2 } ""
152 07/07/1997 12:49:36 { shelf-1 slot-13 3 } ""
152 07/07/1997 12:49:36 { shelf-1 slot-13 4 } ""
152 07/07/1997 12:49:36 { shelf-1 slot-13 5 } ""
152 07/07/1997 12:49:36 { shelf-1 slot-13 6 } ""
152 07/07/1997 12:49:36 { shelf-1 slot-13 7 } ""
152 07/07/1997 12:49:36 { shelf-1 slot-13 8 } ""
320 07/08/1997 19:48:58 { shelf-1 slot-13 1 } ""
```

When you list the profile's contents, you'll see an asterisk next to the physical address parameter, indicating that this is the profile's index:

```
admin> list
physical-address* = { shelf-1 slot-1 3 }
line-interface = { no d4 ami eligible middle-priority inband wink-start +
```

Each device in the MAX TNT has a physical address composed of its shelf number, slot number, and item number in the following format:

```
{ shelf-N slot-N item-N }
```

For a standalone system, the shelf number is always 1. For multishelf systems, the shelf number is from 1 to 9.

Note: For call routing purposes, an address can contain a zero for the shelf, slot, or item number. In a Call-Route address specification, a zero always means “any”

Figure 3-1 shows how the slots are numbered on the back panel of a standalone shelf.

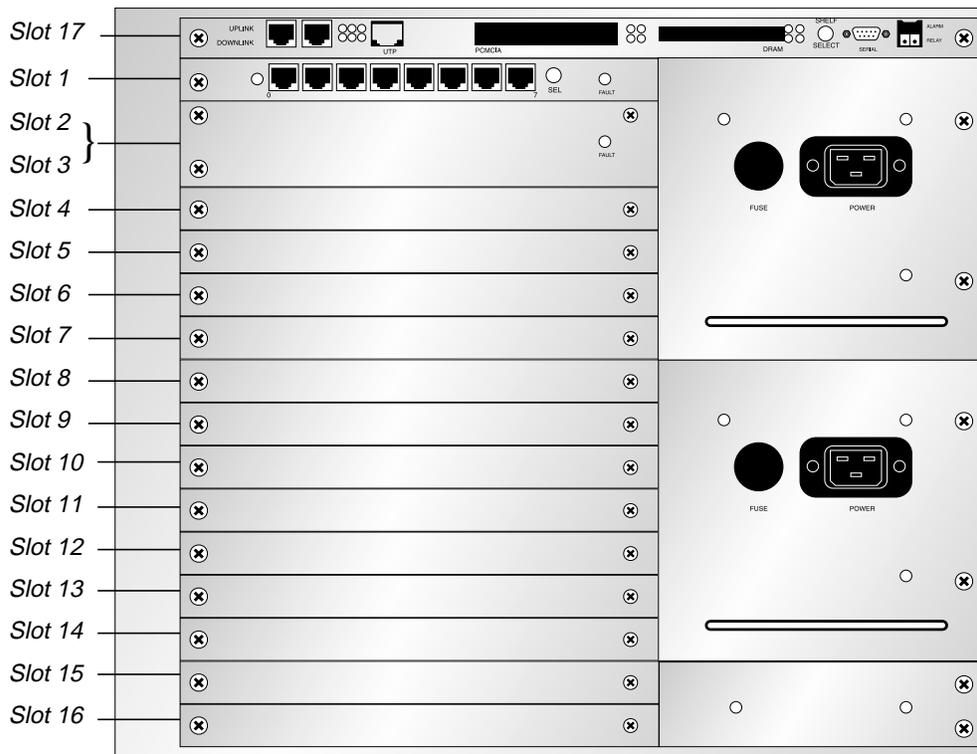


Figure 3-1. Back panel of a MAX TNT shelf

The shelf-controller at the top of the shelf is always assigned the slot number 17. The shelf-controller can also be referred to as `controller` or `c`. For example, the following addresses are equivalent and all refer to the shelf-controller:

```
{ 1 controller 0 }  
{ 1 c 0 }  
{ 1 17 0 }
```

Expansion slots are numbered from 1 to 16, starting with the top expansion slot just below the shelf-controller. For example, to address the first slot on shelf 1:

```
{ 1 1 0 }
```

A modem card that uses two slots (such as the card in slots 2 and 3 in Figure 3-1) is always addressed by the first of those slot numbers. For example, to address the digital modem card in the second and third slots:

```
{ 1 2 0 }
```

The item number addresses a particular port or item on the specified slot card. An item-number of 0 (zero) denotes the whole slot.

Items start with number 1 for the leftmost item on the card. For example, Figure 3-2 shows the address of the third T1 line on a T1 card in slot #1 in shelf 1:

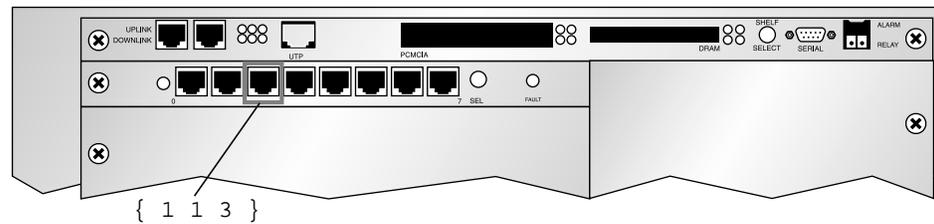


Figure 3-2. Addressing an individual T1 line

Note: The T1 card faceplate numbers the lines from 0 to 7. However, the profile indexes number the lines from 1 to 8.

To read a T1 profile, you must specify its address as the profile index, for example:

```
admin> read t1 {1 1 3}
T1/{ shelf-1 slot-1 3 } read
```

Profiles for configuring a local IP interface

A default profile for configuring an IP interface on an Ethernet port is created by the system when it first detects the presence of an Ethernet port. The administrator may also create new IP-Interface profiles with unique logical-item numbers (to assign multiple IP addresses to a single LAN port), and may delete them when they are no longer needed.

Note: Although the administrator may delete IP-Interface profiles, you should never delete the default IP-Interface profile created by the system. If you do, none of the other IP-Interface profiles created for that interface will work!

IP-Interface profiles are indexed by their interface address within the MAX TNT system; for example:

```
admin> dir ip-int
 8  07/14/1997 16:22:15 { { shelf-1 slot-4 1 } 0 }
 8  07/14/1997 16:22:15 { { shelf-1 slot-4 2 } 0 }
 8  07/14/1997 16:22:15 { { shelf-1 slot-4 3 } 0 }
 8  07/14/1997 16:22:15 { { shelf-1 slot-4 4 } 0 }
19  07/14/1997 16:26:45 { { shelf-1 controller 1 } 0 }
```

An interface address is composed of a physical address and a logical-item number, in the following format:

```
{ { shelf-N slot-N item-N } logical-item-N }
```

The logical item number addresses a specific logical interface. It is zero for the default IP-Interface profile created by the system. If the administrator configures additional logical interfaces, the logical-item number of the profile index does not necessarily have to be contiguous, but must be unique.

To access an IP-Interface profile, you must specify its full interface address, for example:

```
admin> read ip-int { { 1 4 1 } 0 }
IP-INTERFACE/{ { shelf-1 slot-4 1 } 0 } read
```

When you list the profile's contents, you'll see an asterisk next to the interface address parameter, indicating that this is the profile's index:

```
admin> list
interface-address* = { { shelf-1 slot-4 1 } 0 }
ip-address = 10.168.8.25/27
proxy-mode = Off
rip-mode = routing-off
route-filter = ""
rip2-use-multicast = yes
ospf = { no 0.0.0.0 normal 10 40 5 simple ***** 1 16777215 type-1 c0:+
multicast-allowed = no
multicast-rate-limit = 100
```

The logical-item address syntax explained in this section also applies to individual items on a line or port, such as the individual channels of a T1 line. However, for a T1 channel, the address syntax is not used as a profile index, but only as a way to address the channel in a Call-Route profile. For details, see the *MAX TNT Hardware Installation Guide*.

Profiles for routing calls to a device or item

Call-Route profiles have a unique type of index, which specifies not only a channel or modem address but also an entry number in the call-routing database. This is required because each WAN channel or host port (such as a modem or HDLC channel) can have multiple Call-Route profiles addressing it. For information about call routing, see the *MAX TNT Hardware Installation Guide*.

A default Call-Route profile is created by the system when it first detects the presence of a slot card. The administrator may also create any number of Call-Route profiles, and may delete them when they are no longer needed. Call-Route profile indexes use this format:

```
{ { { shelf-N slot-N item-N } logical-item-N } entry-N }
```

The entry number is zero unless the administrator creates additional profiles for the specified address. To see the list of Call-Route profiles, enter the Dir command as in the following example:

```
admin> dir call-r
 9 12/11/1996 15:58:08 { { { any-shelf any-slot 0 } 0 } 0 }
13 12/11/1996 15:58:20 { { { shelf-1 slot-2 0 } 0 } 0 }
13 12/11/1996 15:58:21 { { { shelf-1 slot-6 0 } 0 } 0 }
19 12/20/1996 20:57:07 { { { shelf-1 slot-3 0 } 0 } 0 }
```

To access a Call-Route profile, you must specify its full index, for example:

```
admin> read call-r { { { 1 3 0 } 0 } 0 }
CALL-ROUTE/{ { { shelf-1 slot-3 0 } 0 } 0 } read
```

When you list the profile's contents, you'll see an asterisk next to the index parameter:

```
admin> list
index* = { { { shelf-1 slot-3 0 } 0 } 0 }
trunk-group = 0
phone-number = ""
preferred-source = { { shelf-1 slot-2 3 } 0 }
call-route-type = any-call-type
```

Modifying the working profile

This section explains how to modify an existing profile by setting its parameter values and writing the changes to flash memory. For information about creating profiles, see “Creating new profiles” on page 3-15.

Reading and writing a profile

To modify an existing profile, you must first read it into the edit buffer by using the Read command. For example:

```
admin> read log
LOG read
```

The profile that has been read into the edit buffer is the working profile. It remains the working profile until another profile is read into the buffer.

When a profile has an index, you must specify the index in the Read command; for example:

```
admin> read conn tim
CONNECTION/tim read
```

The Write command writes the contents of the edit buffer to flash. For example:

```
admin> write
CONNECTION/tim written
```

The Write command does not clear the working profile out of the edit buffer. It simply saves any changes you have made.

Note: If you attempt to write a new profile that has the same name as an existing one, or to write a profile that has been modified by another user after you read it into the edit buffer, you’ll be asked to confirm that you want to overwrite the profile. To force the write action without confirmation, use the `-f` option to the Write command. See the *MAX TNT Reference Guide* for details.

Listing the working profile

The List command displays the contents of the working profile. For example:

```
admin> read log
LOG read

admin> list
save-level = debug
save-number = 100
call-info = none
syslog-enabled = no
host = 10.65.212.10
port = 514
facility = local0
```

For more information about profile contents, see “Changing contexts in the working profile” on page 3-12.

Parameter types and syntax

Table 3-3 shows parameter types with examples of correct syntax and descriptions of their use.

Table 3-3. Parameter types and syntax

Type	Syntax	Description
Text	<code>station=test</code>	The maximum length of a text value varies. For some text values, a list of valid characters may be specified in the on-line help. Some text values can be mixed case, others (such as index fields) are converted to lower-case when set. When the value is allowed to contain spaces or quotes, it is displayed in quotes. Password fields are displayed as asterisks unless the user has allow-password permissions.
Number	<code>dial-number=1212</code>	A numeric value is displayed as decimal, but can be set using hex 0x... or octal 0... notation.
Enumerated	<code>rip=routing-off</code>	An enumerated field supports a limited set of values, all of which are displayed in the on-line help. You can specify the least matching string or the full value name.
Boolean	<code>private-route=yes</code>	A boolean value is an enumerated field with only two allowable values, which are specified in the on-line help. The values may be true/false or yes/no.
Hexadecimal	<code>ase-tag = c0:00:00:00</code>	A hexadecimal value is entered in hexadecimal notation (<i>nn:nn:nn:...:nn</i>), where each <i>n</i> is a hexadecimal number from 0 to f.
IP address	<code>ip-address=10.2.3.4/24</code>	IP addresses are displayed and must be entered in dotted-decimal with optional subnet mask.
Complex	<code>mp-options={ 1 1 2 }</code> <i>or:</i> <code>pool-base-address= [0.0.0.0 0.0.0.0 0.0 +</code>	A complex parameter may be a subprofile or an array value. See “Changing contexts in the working profile” on page 3-12.

Setting parameters in the working profile

You can modify the parameters of the working profile by using the Set command. For example:

```
admin> read log
LOG read

admin> list
save-level = debug
save-number = 100
call-info = none
syslog-enabled = no
host = 10.65.212.10
port = 514
facility = local0

admin> set save-number = 250

admin> set syslog = yes

admin> set host = 10.2.3.4

admin> write
LOG written
```

Combining command-line shortcuts to set parameters

If you are not certain of the values supported for a parameter in the working profile, follow these steps:

- 1 Use the Set command as follows to display the supported values for a parameter:

```
set parameter-name ?
```

For example:

```
admin> set call-info ?
```

```
call-info:
```

```
Specifies when call status changes are logged.
```

```
Enumerated field, values:
```

```
none: No call info will be displayed.
```

```
end-of-call: Call info will be displayed at the end of the call.
```

- 2 Press the Up Arrow key or Ctrl-P to redisplay the Set command you just entered.

```
admin> set call-info ?
```

For information about command history and using the Up Arrow key, see Chapter 2, “Getting Started.”

- 3 Press the Delete key to remove the question-mark.

```
admin> set call-info
```

- 4 Assign the appropriate value and then press Return. For example:

```
admin> set call-info = end
```

Similarly, suppose you are setting several parameters that have similar names and values. For example, the following two array values:

```
auth-client 1 = 10.12.253.1
```

```
auth-client 2 = 10.12.253.56
```

Follow these steps:

- 1 Enter the first of the similar Set commands. For example:
`admin> set auth-client 1 = 10.12.253.1`
- 2 Press the up-arrow key or Ctrl-P to redisplay the Set command you just entered.
`admin> set auth-client 1 = 10.12.253.1`
- 3 Press Delete and then enter 56:
`admin> set auth-client 1 = 10.12.253.56`
- 4 Press the back-arrow key or Ctrl-B to backspace to the 1, then press Delete and enter 2:
`admin> set auth-client 2 = 10.12.253.56`
- 5 Press Return to execute the modified command.

Changing contexts in the working profile

A profile contains parameters and may also contain subprofiles, which themselves may contain subprofiles, creating several nested levels or *contexts* within the profile. In addition, some parameters are array values, which also reside in a separate context within the profile.

- This is a normal *parameter* containing a single value:
`parameter = value`
- This is a *subprofile*, containing multiple values enclosed in braces:
`subprofile = { value-1 value-2 value-3 value-4 value-5 value-6 }`
- This is a parameter containing multiple *array values* enclosed in brackets:
`parameter = [array-element-1 array-element-2 array-element-3 array-e+`

A plus-sign at the end indicates that more settings are contained in the subprofile _____
or array than could be displayed on one line. 

To set the value of a parameter or display its online help, you must either move to the context in which it resides, or specify the full path of that context on the Set command line.

Subprofiles

To see an example of profile contents that include subprofiles, read the External-Auth profile into the edit buffer and list its contents:

```
admin> read external-auth
EXTERNAL-AUTH read

admin> list
auth-type = None
acct-type = none
rad-serv-enable = no
rad-auth-client = { 0.0.0.0 0.0.0.0 0.0.0.0 0 0 "" no 0 no 0 yes yes no }
rad-acct-client = { 0.0.0.0 0.0.0.0 0.0.0.0 0 0 "" 0 0 acct-base-10 }
rad-auth-server = { 0 no rad-serv-attr-any [ 0.0.0.0 0.0.0.0 0.0.0.0 0.+
tac-auth-client = { 0.0.0.0 0.0.0.0 0.0.0.0 0 0 "" 0 }
tacplus-auth-client = { 0.0.0.0 0.0.0.0 0.0.0.0 0 0 "" 0 0 0 }
```

```
tacplus-acct-client = { 0.0.0.0 0.0.0.0 0.0.0.0 0 0 "" }
local-profiles-first = yes
```

Listing a subprofile

To move to the context of a subprofile, specify its name in the List command. For example:

```
admin> list rad-auth-server
auth-port = 0
auth-session-key = no
auth-attribute-type = rad-serv-attr-any
auth-client = [ 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0+
auth-netmask = [ 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.+
auth-key = [ "" "" "" "" "" "" "" "" "" ]
```

If a profile contains nested subprofiles, you can move directly to the nested subprofile by specifying multiple subprofile names, one after the other, in the List command line.

Moving back up to the previous context

To move back up to the previous context, type a space and two periods after the List command. For example:

```
admin> list ..
auth-type = None
acct-type = none
rad-serv-enable = no
rad-auth-client = { 0.0.0.0 0.0.0.0 0.0.0.0 0 0 "" no 0 no 0 yes yes no }
rad-acct-client = { 0.0.0.0 0.0.0.0 0.0.0.0 0 0 "" 0 0 acct-base-10 }
rad-auth-server = { 0 no rad-serv-attr-any [ 0.0.0.0 0.0.0.0 0.0.0.0 0.+
tac-auth-client = { 0.0.0.0 0.0.0.0 0.0.0.0 0 0 "" 0 }
tacplus-auth-client = { 0.0.0.0 0.0.0.0 0.0.0.0 0 0 "" 0 0 0 }
tacplus-acct-client = { 0.0.0.0 0.0.0.0 0.0.0.0 0 0 "" }
local-profiles-first = yes
```

As in a file system, the .. characters switch the context up one level. If you have moved several nested levels in a profile, you can move back up several levels at a time by specifying the .. characters repeatedly in the List command line.

Setting values in a subprofile

You can set the value of a parameter in a lower-context subprofile by specifying both the subprofile and parameter names in the Set command. For example, you can set the auth-port value from the top-level of the External-Auth profile as in the following example:

```
admin> set rad-auth-server auth-port = 514
```

Or, you can list the subprofile and then set parameter values as usual. For example:

```
admin> list rad-auth-server
auth-port = 0
auth-session-key = no
auth-attribute-type = rad-serv-attr-any
auth-client = [ 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0+
auth-netmask = [ 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.+
auth-key = [ "" "" "" "" "" "" "" "" "" ]
```

```
auth-netmask = [ 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.+
auth-key = [ "" "" "" "" "" "" "" "" "" "" ]

admin> set auth-port = 514
```

Parameters with array values

Parameters with array values behave similarly to subprofiles, in that you can list them and set parameter values, and then return to your previous context in the profile. However, arrays are not nested.

To see an example of profile contents that include array values, list the contents of the Rad-Auth-Server subprofile of the External-Auth profile:

```
admin> list rad-auth-server
auth-port = 0
auth-session-key = no
auth-attribute-type = rad-serv-attr-any
auth-client = [ 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0+
auth-netmask = [ 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.+
auth-key = [ "" "" "" "" "" "" "" "" "" "" ]
```

Listing an array

To move to the context of the individual array values of the auth-client parameter, specify the parameter name in the List command:

```
admin> list auth-client
auth-client[1] = 0.0.0.0
auth-client[2] = 0.0.0.0
auth-client[3] = 0.0.0.0
auth-client[4] = 0.0.0.0
auth-client[5] = 0.0.0.0
auth-client[6] = 0.0.0.0
auth-client[7] = 0.0.0.0
auth-client[8] = 0.0.0.0
auth-client[9] = 0.0.0.0
```

Moving back up to the previous context

To move back up to the previous context, type two periods after the List command:

```
admin> list ..
auth-port = 0
auth-session-key = no
auth-attribute-type = rad-serv-attr-any
auth-client = [ 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0+
auth-netmask = [ 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.+
auth-key = [ "" "" "" "" "" "" "" "" "" "" ]
```

Setting array values

You can set an array value from a higher context by specifying both the parameter name and the array index in the Set command. For example, you could set auth-client addresses from the Rad-Auth-Server subprofile of the External-Auth profile as follows:

```
admin> set auth-client 1 = 10.12.253.1
admin> set auth-client 2 = 10.12.253.56
```

Or, you could set the addresses from the top level of the External-Auth profile, as in the following example:

```
admin> set rad-auth-server auth-client 1 = 10.12.253.1
admin> set rad-auth-server auth-client 2 = 10.12.253.56
```

Or, you can list the array and then set array values by specifying the array index in the Set command. For example:

```
admin> set 1 = 10.12.253.1
admin> set 2 = 10.12.253.56
```

Creating new profiles

There are two ways to create a new profile:

- Create a default instance of the profile type.
- Create a copy of a configured profile by specifying a new index value.

Using the New command

The New command uses the following syntax:

```
new profile-type [ profile-index ]
```

If the profile-index is specified on the command line, it is validated before use. For example:

```
admin> new t1 { 12 2 3 }
error: bad index: unknown value "12"

admin> new system foo
error: profile has no index
```

If a legal index is specified, it is applied to the new profile, which is read into the edit buffer:

```
admin> new t1 { 1 2 3 }
T1/{ shelf-1 slot-2 3 } read

admin> list
physical-address* = { shelf-1 slot-2 3 }
line-interface = { no d4 ami eligible middle-priority inband +
```

Depending on the profile type, the index chosen may affect the factory default values set in the profile. For example, if you specify the profile-index default for a User profile, the factory default permission settings are as follows:

```
admin> new user default
USER/default read
```

```
admin> list
name* = default
password = ""
active-enabled = yes
allow-termserv = no
allow-system = no
allow-diagnostic = no
allow-update = no
allow-password = no
allow-code = no
allow-debug = no
idle-logout = 0
prompt = *
default-status = no
top-status = general-info
bottom-status = log-window
left-status = connection-list
use-scroll-regions = no
log-display-level = none
```

If you specify the profile-index `admin` instead, the factory-default permissions are set as follows:

```
admin> new user admin
USER/admin read

admin> list
name* = admin
password = Ascend
active-enabled = yes
allow-termserv = yes
allow-system = yes
allow-diagnostic = yes
allow-update = yes
allow-password = no
allow-code = yes
allow-debug = no
idle-logout = 0
prompt = *
default-status = no
top-status = general-info
bottom-status = log-window
left-status = connection-list
use-scroll-regions = no
log-display-level = error
```

Specifying a new index value for a configured profile

Another way to create new profiles is to read an existing profile into the edit buffer, modify its index and any other parameters that require it, and then write the new profile. For example:

```
admin> read connection tim
CONNECTION/tim read

admin> set station = dave

admin> set ip remote-address = 10.2.3.4/24
```

```
admin> write
CONNECTION/dave written
```

This method can be especially useful for configuring lines and ports. For example, if the eight lines on a T1 card all have a similar configuration, you can copy the parameter settings from one line to the next. For example:

```
admin> read t1 {1 1 1}
T1/{ shelf-1 slot-1 1 } read
admin> list
physical-address* = { shelf-1 slot-1 1 }
line-interface = { no d4 ami eligible middle-priority inband wink-start +
admin> set physical-address = { 1 1 2}
admin> write
T1/{ shelf-1 slot-1 2} written
admin> set physical-address = { 1 1 3}
admin> write
T1/{ shelf-1 slot-1 3} written
```


Viewing Status Information

This chapter covers the following topics:

Commands for viewing status information	4-2
Getting information about the system	4-3
Getting information about slot cards	4-5
Working with the status window	4-7

Commands for viewing status information

Table 4-1 shows some of the commands available for accessing system status and log information:

Table 4-1. Commands for displaying status information

Command	Purpose
Callroute	Display entries in the call-routing database.
Fatal-History	Display the log of fatal errors that have occurred and the dates and times at which they occurred.
Debug	Toggle display of diagnostic messages on the screen in real time.
Userstat	Display user session status.
Show	Show which slot cards are installed and in which slots, or show information about a specific card.
HDLC	Report the status of each HDLC channel on a card, or display only channels that are in use, failed, or available.
Modem	Report the status of each modem on a card, or display only modems that are in use, suspect, or available.
Status	Display or hide the status window. If no status window has been opened, this command opens the default status window. If a status window has been opened previously and then closed, this command opens that status window. If a status window is currently open, this command closes the window.
Connection	Display connection status in the window and interpret certain key sequences to display additional connection status information.
Line	Display T1 line status in the window and interpret certain key sequences to display additional line status information.
Log	Display event log information in the window and interpret certain key sequences to display additional log messages.
View	Specify which area of the status window should display a particular kind of status information. Or, redisplay general status information.

For information about these and other diagnostic or system-level commands, see the *MAX TNT Reference Guide*.

Getting information about the system

Some MAX TNT commands display real-time information about system activities. Other commands report more static information, such as the system software version. In addition, the MAX TNT maintains log buffers that record different levels of events. This section describes the following commands:

- Callroute
- Fatal-History
- Debug
- Userstat

Displaying the call-routing database

The call-routing database determines how the MAX TNT routes calls to a modem or HDLC card for host-side processing. To display the database, use the Callroute command. For example, to see the database entries that route calls to host (modem or HDLC) ports:

```
admin> callroute -ah
  device      #  source          type                tg sa phone
1:16:01/3    0  0:00:00/0      digital-call-type   0  0
1:16:01/4    0  0:00:00/0      digital-call-type   0  0
1:16:01/5    0  0:00:00/0      digital-call-type   0  0
1:16:01/6    0  0:00:00/0      digital-call-type   0  0
1:16:01/7    0  0:00:00/0      digital-call-type   0  0
1:16:01/8    0  0:00:00/0      digital-call-type   0  0
1:16:01/9    0  0:00:00/0      digital-call-type   0  0
1:16:01/10   0  0:00:00/0      digital-call-type   0  0
1:16:01/11   0  0:00:00/0      digital-call-type   0  0
1:16:01/12   0  0:00:00/0      digital-call-type   0  0
1:16:01/13   0  0:00:00/0      digital-call-type   0  0
1:16:01/14   0  0:00:00/0      digital-call-type   0  0
1:16:01/15   0  0:00:00/0      digital-call-type   0  0
1:16:01/16   0  0:00:00/0      digital-call-type   0  0
1:16:01/17   0  0:00:00/0      digital-call-type   0  0
1:16:01/18   0  0:00:00/0      digital-call-type   0  0
1:16:01/19   0  0:00:00/0      digital-call-type   0  0
1:16:01/20   0  0:00:00/0      digital-call-type   0  0
1:16:01/21   0  0:00:00/0      digital-call-type   0  0
1:16:01/22   0  0:00:00/0      digital-call-type   0  0
1:16:01/23   0  0:00:00/0      digital-call-type   0  0
1:16:01/24   0  0:00:00/0      digital-call-type   0  0
[More? <ret>=next entry, <sp>=next page, <^C>=abort]
```

For information about call routing, see the *MAX TNT Hardware Installation Guide*.

Checking the fatal error log

All fatal errors are logged to the fatal error history log. To view the events logged there, enter the Fatal-History command:

```
admin> fatal-history

FATAL ERROR: Index: 1 Revision: 1.3A Slot 13 (tnt8t1)
              Date: 07/16/1997.      Time: 12:01:10
              Location: 1006f87c 10000068 10068384 10067cec 100677e0 100585dc

FATAL ERROR: Index: 1 Revision: 1.3A Slot 13 (tnt8t1)
              Date: 07/16/1997.      Time: 12:25:10
              Location: 1006f87c 10000068 10068384 10067cec 100677e0 100585dc
```

Each entry shows the system software version (1.3A in the sample entries above), the slot on which the error occurred, and the date and time at which the error occurred. To clear the log, enter the Clr-History command:

```
admin> clr-history
```

Toggling real-time log message display

Each User profile contains a log-display-level parameter, which specifies the level of messages to be displayed immediately in the interface (as well as written to a log buffer). The Admin User profile sets this level to “error” by default, which means that messages indicating an error condition should be displayed immediately.

If you are working in the interface and need to temporarily turn off unlogged diagnostic output, use the Debug command. For example:

```
admin> debug off
Diagnostic output disabled
```

To turn it back on:

```
admin> debug on
Diagnostic output enabled.
```

Displaying user session status information

To show user session status, enter the Userstat command with the -s option:

```
admin> userstat -s
SessionID Line/Chan Slot:Item Tx/Rx Rate Svc Address Username
228687860 1.01.02/01 1:03:01/01 56K/56K PPP 10.100.0.1 barney
228687861 1.02.03/02 1:04:02/00 28800/33600 PPP 10.168.6.24 jake

<end user list> 2 active user(s)
```

The SessionID field shows the unique ID assigned to the session.

The Line/Chan field shows the physical address (shelf.slot.line/channel) of the network port on which the connection was established, such as a T1 line/channel.

The Slot:Item field shows shelf:slot:item/logical-item of host port to which the call was routed (for example, to a modem or HDLC-channel).

The Tx/Rx Rate fields show the transmit and receive rate, respectively. Note that for digital connections, the transmit rate is the same as the receive rate. Usually only modems use asymmetric data rate connections.

The Svc field contains a three-letter code that shows the type of service in use for the session. See the *MAX TNT Reference Guide* for details.

Getting information about slot cards

This section provides a few examples of how to check the status of slot cards and the individual ports or channels on the card. It covers the following commands:

- Show
- HDLC
- Modem

Note: The HDLC and Modem sections describe commands for viewing information about individual modems and HDLC channels. They are representative of the kinds of status commands available for a variety of slot cards. For more specific information about these and other commands related to slot cards, see your online help.

Using the Show command

The Show command displays information about the status of installed slot cards. For example:

```
admin> show
Shelf 1 ( standalone ):
  { shelf-1 slot-1 0 }      UP      8t1-card
  { shelf-1 slot-2 0 }      UP      48modem-card
  { shelf-1 slot-3  }      OCCUPIED
  { shelf-1 slot-4 0 }      UP      4ether-card
  { shelf-1 slot-5 0 }      UP      192hdlc-card
```

The status of a card can be one of the following:

- UP (Normal operational mode.)
- DOWN (Not in an operational mode.)
- POST (The devices in the card are running power-on self tests.)
- LOAD (The card is loading code as part of coming up.)
- NONE (The card has been swapped out, but its configuration remains in flash space.)

To display additional information about a card, append the shelf and slot number to the Show command. Each HDLC card has six controller chips (also called Munich chips), which are responsible for receiving HDLC frames and reassembling them into packets. Each controller chip controls 32 HDLC channels. For example, to see the addresses of the six chips on an HDLC card installed in slot 5:

```
admin> show 1 5
Shelf 1 ( standalone ):
```

```
{ shelf-1 slot-5 0 }      UP      slot-card-192hdlc:
  { shelf-1 slot-5 1 }      hdlc-1
  { shelf-1 slot-5 2 }      hdlc-2
  { shelf-1 slot-5 3 }      hdlc-3
  { shelf-1 slot-5 4 }      hdlc-4
  { shelf-1 slot-5 5 }      hdlc-5
  { shelf-1 slot-5 6 }      hdlc-6
  { shelf-1 slot-5 7 }      serial-interface
```

Checking the status of HDLC channels

The HDLC command displays detailed information about each of the 192 HDLC channels on the card. You can use the command to find out which channels are available, if any channels are disabled or failed, or which channels are currently in use. For example, to see which HDLC channels are available for use:

```
admin> hdlc -a
HDLC channels available for use:
                                (dvOp  dvUpSt  dvRq  sAdm)
HDLC { { 1 5 1 } 1 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 2 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 3 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 4 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 5 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 6 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 7 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 8 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 9 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 10 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 11 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 12 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 13 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 14 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 15 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 16 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 17 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 18 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 19 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 20 } (Up  Idle  UP  UP )
HDLC { { 1 5 1 } 21 } (Up  Idle  UP  UP )
[More? <ret>=next entry, <sp>=next page, <^C>=abort]
```

This output shows the interface address of each HDLC channel (six groups of 32 channels), followed by the operational status, up-state, required-state, and admin-state of each channel.

Checking modem status

The Modem command reports the status of individual modems. You can use the command to find out which modems are available or in use, if there are any failed or suspect modems, and to obtain a list of modems that have been verified as not suspect and are available for use. For example:

```
admin> modem -g
```

```
Non-suspect modems available for use:
      (dvOp  dvUpSt  dvRq  sAdm  mDis)
Modem { 1 11 1 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 2 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 3 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 4 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 5 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 6 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 7 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 8 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 9 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 10 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 11 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 12 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 13 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 14 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 15 } (Up  Idle  UP  UP  ENABLE )
Modem { 1 11 16 } (Up  Idle  UP  UP  ENABLE )
[More? <ret>=next entry, <sp>=next page, <^C>=abort]
```

This output shows the address of each modem, the operational state (up or down) the status (Idle or Active), SNMP interface information, and whether the modem has been disabled.

Working with the status window

The MAX TNT generates a continuous stream of statistics about its activities. You can specify in a User profile that these statistics should always be displayed when a user logs in using that profile. Or, you can simply display the status window on demand.

You can also specify in a User profile which status information to display in each of the three areas of the status window. Figure 4-1 shows the default settings.

To display the status window and control what information is contained in which part of the window, use the following commands:

- Status
- Connection
- Line
- Log
- View

Note: Opening the status window requires an 80-column by 24-row VT100 window.

Opening and closing the status window

The status window has three main areas:

- left (the left side of the window)
- top (the upper-right side of the window)
- bottom (the lower-right side of the window)

To redraw your VT100 window to display the status window, enter the Status command:

Viewing Status Information

Working with the status window

```
admin> status
```

The system prompt moves to just below the status window. To close the status window, enter the command again:

```
admin> status
```

If the system prompt is not visible below the status window, press Escape to display it.

Default contents of the window

Figure 4-1 shows the default contents of the status window:

The screenshot shows a status window with three sections. The left section, labeled 'Left: Connection', lists two connections: '001 tomw PPP 1/7/14 19200' and '002 timl MP 1/7/3 56000'. The top section, labeled 'Top: General', shows 'Status' information including 'Serial number: 6201732', 'Version: 1.3A', 'Rx Pkt: 11185897', 'Tx Pkt: 42460', and 'Col: 129'. The bottom section, labeled 'Bottom: Log', shows '7/27/1997 12:20:15 Up: 3 days, 21:47:3', 'M: 48 L: info Src: shelf-1/controller', '48 out of 48 modems passed POST', and 'Issued: 16:48:02, 7/27/1997'.

```
Left: Connection | Top: General
2 Connections    | Status
001 tomw PPP 1/7/14 19200 | Serial number: 6201732   Version: 1.3A
002 timl MP 1/7/3 56000   | Rx Pkt: 11185897
                          | Tx Pkt: 42460
                          | Col: 129
                          |
                          | 7/27/1997 12:20:15 Up: 3 days, 21:47:3
                          |-----
                          | M: 48 L: info Src: shelf-1/controller
                          |
                          | 48 out of 48 modems passed POST
                          |
                          | Issued: 16:48:02, 7/27/1997
                          |-----
Bottom: Log
```

Figure 4-1. Information in the status window

The default contents are determined by the following settings in a User profile:

- left-status = connection-list
- top-status = general-info
- bottom-status = log-window

You can change these defaults by modifying your User profile.

Connection status information

With the default setting in a User profile, the left area of the status window initially displays connection information, as shown in Figure 4-1. One line appears for each active connection, showing the user or station name, type of connection, T1 shelf/line/channel on which the call was placed or received, and the bandwidth or baud rate of the connection.

If the status window is not already displayed, the Connection command opens it with the connection status information displayed:

```
admin> connection
```

In effect, this command puts the window in connection-status mode, with the following message displayed below the status window:

```
[ Next/Last Conn: <dn/up arw>, Next/Last Page: <pg dn/up>, Exit: <esc> ]
```

This message indicates the key sequences you can use for displaying additional information in the Connection status area.

- The Down Arrow and Up Arrow keys display the next or previous connection in the list of active connections.
- The Page Down and Page Up keys display the list a screen at a time.

When the connection-status mode message is displayed, the system prompt does not appear at the bottom of the window. Press the Escape key to exit this mode and return to the system prompt.

General status information

With the default setting in a User profile, the top area of the status window initially displays general status information about the MAX TNT, including its serial number, the version of system software that is running, and the number of packets transmitted and received. This area also shows the current system date and time and how long the system has been up.

If the top of the status window is displaying another kind of information, such as T1 line information, you can redisplay the general status information with the View command:

```
admin> view top general
```

Log messages

With the default setting in a User profile, the bottom area of the status window initially displays the most recent message from the MAX TNT log buffer. The number of system event messages stored in the log is set by the save-number parameter in the Log profile.

If the status window is not already displayed, the Log command:

```
admin> log
```

opens it with log-message information displayed in the bottom of the window.

Or, you can specify that the log message appear in the top of the window instead, replacing the general status information, by using this command:

```
admin> log top
```

In effect, these commands put the window in log mode, where the following message is displayed below the status window:

```
[ Back:<up arw>, Forward:<dn arw>, Start:<pg up>, End:<pg dn>, Exit:<esc> ]
```

This message indicates the key sequences you can use for displaying additional information in the Log area.

- The Down Arrow and Up Arrow keys display the next and previous message in the buffer, respectively.

- The Page Up and Page Down. keys display the last and first message in the buffer, respectively.

When the log-mode message is displayed, the system prompt does not appear at the bottom of the window. Press the Escape key to exit this mode and return to the system prompt.

T1 line information

To view information about WAN lines and channels (for example, T1, E1, SWAN, T3, and so forth), use the Line command. Because space is so limited for this graphical display of line and channel status information, the line-status window uses identifiers and codes. For example, the line's link status uses a two-character code such as LA (link active), RA (red alarm), YA (yellow alarm), and so forth. For details, see the *MAX TNT Reference Guide*.

If the status window is not already displayed, the Line command opens it with T1 line status information displayed in the bottom (lower-right) of the window:

```
admin> line
```

Or, you can specify that the line-status information appear in the top of the window instead, replacing the general status information:

```
admin> line top
```

You can view information about all T1 lines installed in the system if you wish, but the default is to show information only about enabled lines. To view the status of all lines:

```
admin> line all
```

In effect, the Line commands put the window in line-status mode, where the following message appears below the status window:

```
[ Next/Last Line: <dn/up arw>, Next/Last Page: <pg dn/up>, Exit: <esc> ]
```

This message indicates the key sequences you can use for displaying additional information in the line status area.

- The Down Arrow and Up Arrow keys display the next or previous T1 line in the list.
- The Page Down and Page Up keys display the list a screen at a time.

When the line-status mode message is displayed, the system prompt does not appear at the bottom of the window. Press the Escape key to exit this mode and return to the system prompt.

Index

A

Addresses

- for multishelf systems, 3-5
- for standalone systems, 3-5
- indexes for profiles, 3-6
- of slot cards, 3-6

Arrays, as parameter values, 3-14

B

Braces, meaning in profile listing, 3-12

Brackets, meaning in profile listing, 3-12

Byte-count in dir listing, 3-3

C

Commands

- combining shortcuts, 3-11
- editing a command line, 2-4
- for configuring the system, 3-2
- for displaying status information, 4-2
- history buffer, 2-5
- usage and syntax, 2-3
- User profile permissions, and, 2-3

Configuration

- displaying valid parameter values, 3-11
- related commands, 3-2
- setting parameters in the working profile, 3-11
- slot cards, 3-5

Connection status, 4-8

Contexts

- moving down to nested levels, 3-13
- moving up to previous levels, 3-13
- opening arrays, 3-14
- setting values, 3-13, 3-15
- subprofiles and arrays, 3-12

D

Date and time, dir listing, 3-3

Devices

- configuring in a profile, 3-5
- how addresses relate to location, 3-7
- slot cards installed, 4-5
- status of, 4-6

E

Editing

- command lines, 2-5
- profile, in edit buffer, 3-9

Errors

- clearing log, 4-4
- fatal, displaying, 4-4
- status window, displayed, 4-9
- turning off immediate display, 4-4

H

Help

- displaying command usage, 2-3
- displaying valid parameter values, 3-11

I

Indexes

- for array values, 3-14
- profile names, 3-9
- profiles for slot cards, 3-6

IP

- global profile, 3-4
- interface addresses, 3-7
- route profiles, 3-3

L

List command

- displaying working profile, 3-12
- switching contexts in the working profile, 3-13, 3-14

Log messages

- clearing the fatal error log, 4-4

Index

M

Log messages (continued)
 fatal error log, 4-4
 level displayed on a per-user basis, 4-4
 status window, displayed, 4-9
 turning off immediate display, 4-4

M

Managing, commands for, 4-2
MAX TNT system
 physical addresses, 3-6
 shelf number, 3-5
 slot card addresses, 3-6

P

Parameters
 listed, 3-12
 setting values without switching context, 3-13
 tips for setting values, 3-11
Plus-sign, meaning in profile listing, 3-12
Profiles
 byte-count, 3-3
 contents of working, 3-9
 editing, 3-11
 editing subprofiles, 3-13
 for configuring slot cards, 3-6
 getting online help, 3-11
 global, system-wide, 3-4
 help with parameter settings, 3-11
 indexed by address, 3-6
 indexed by logical interface, 3-7
 indexed by name, 3-9
 modification date, 3-3
 related to connections, 3-3
 setting array values, 3-13, 3-15

R

Repeating commands, 2-5

S

Set command
 example obtaining online help, 3-11
 example setting parameters, 3-11
Shortcuts, in command lines, 2-4
 example, 3-11
Show command
 example use, 4-5

Slot cards
 profiles for configuring, 3-5
 status information, 4-5

Status

 connections, 4-8
 general information, 4-9
 HDLC channels, 4-6
 line status, 4-10
 log messages, 4-9
 modems, 4-6
 slot cards, 4-5
 User profiles, and, 4-8
 user sessions, 4-4
 window
 connections, 4-8
 default contents, 4-8
 displaying, 4-7
 general, 4-9
 line status, 4-10
 log, 4-9
 vt100 requirement, 4-7

Subprofiles

 editing, 3-13
 how displayed, 3-13

System status, 4-9

T

Tips for setting parameter values, 3-11

U

User profile
 commands available, permissions, 2-3
 status information settings, 4-8
Users, displaying session status, 4-4

W

Write command
 saving the edit buffer, 3-9